


Digital 5000 DT Spot

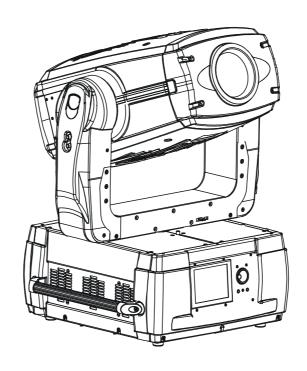

DTseries

USER MANUAL

Version 2.2

Table of contents

1. Safety instructions	4
2. Unpacking	5
3. Introduction	6
4. Fixture exterior view	6
5. Video inputs	7
6. Connection to the mains	7
6.1 Powering on the DigitalSpot 5000 DT	7
6.2 "Power down" mode	7
7. Shutting down the DigitalSpot 5000 DT	8
8. Positioning the DigitalSpot 5000 DT	8
9. Rigging the fixture	9
10. DMX 512 connection	11
11. Ethernet connection	11
12. Folder organization	12
13. Control menu map	14
14. Operating modes	20
15. Control menu	20
15.1 Fixture Address	20
15.2 Fixture information	21
15.3 Personality	21
15.4 Lamp On/Off	23
15.5 Manual control	23
15.6 Stand-alone setting	23
15.7 Preview mode	24
15.8 Reset functions	25
15.9 Service menu	25
15.10 Special functions	26
15.11 Fixture Off	27
16. Keystones	28
16.1 Global keystone parameters	28
16.2 Layer keystone parameters	28
17. In Frame and Out Frame parameters	32
18. Video Control	33
19. Playback speed	33
20. Graphic effects	34

20.1 Kaleidoscopic effect	34
20.2 Circular effect (Fish eye)	35
20.3 RGB (CMY) effects	36
20.4 Iris effect on layer	41
21. Media content management	44
21.1 Moving files between the fixture and a PC	44
21.2 Moving files between networked fixtures	48
22. Remote control of the fixture via WWW browser	48
23. Picture merging	53
23.1 Picture merging control channels	53
23.2 Picture merging example	61
24. Pre-cut content mode for Picture Merging	62
25. Effect video synchronization	64
26. Projection onto angular, cylindric or spheric surfaces	65
26.1 Curved surface support channels	65
26.2 Rectangle onto circle (sphere) mapping with picture merging	67
27. Video processing on gobo layers from a streaming video server	68
28. Technical specifications	73
29. Error and information messages	76
30. Maintenance	77
30.1 Replacing the projector	78
30.2 Replacing the air filters	78
30.3 Replacing the fuse	80
30.4 System restore	80
30.5 Cleaning	80

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE POWERING OR INSTALLING YOUR DIGITALSPOT 5000 DT! Save it for future reference.

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

The DigitalSpot 5000 DT was designed for indoor use and it is intended for professional application only. It is not for household use.

1. Safety instructions

DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!

Make sure that the available voltage is not higher than stated on the rear panel of the fixture. This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company.

Always disconnect the fixture from AC power before cleaning, removing or installing the fuses, or any part.

Make sure that the power switch is set to off-position before you connect the fixture to the mains. The power plug has to be accessible after installing the fixture. Do not overload wall outlets and extension cords as this can result in fire or electric shock.

Do not allow anything to rest on the power cord. Do not locate this fixture where the cord may be damaged by persons walking on it.

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the power cord from time to time.

Refer servicing to qualified service personnel.

This fixture falls under protection class I. Therefore this fixture has to be connected to a mains socket outlet with a protective earthing connection.

Do not look straight at the fixture objective lens or LED module during operation. The intense light beam may damage your eyes.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Do not shake the device. Avoid brute force when installing or operating the device.

This fixture was designed for indoor use only, Do not expose this unit to rain or use near water.

When choosing the installation spot, please make sure that the device is not exposed to extreme heat, moisture or dust.

Air vents and slots in the fixture's head and base are provided for ventilation, to ensure reliable operation of the device and to protect it from overheating.

The openings should never be covered with cloth or other materials, and never must be blocked.

This fixture should not be placed in a built-in installation unless proper ventilation is provided.

Always use a secondary safety cable when mounting this fixture.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Do not block the front objective lens with any object when the fixture is under operation.

The lamp becomes extremely hot during operation. Allow the fixture to cool approximately 40 minutes prior to removing the lamp assembly for replacement. Do not operate lamps beyond the rated lamp life.

Operate the fixture only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the fixture. Most damages are the result of unprofessional operation!

Please use the original packaging if the fixture is to be transported.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

To switch the DigitalSpot 5000 DT off, always use either option "Fixture Off" in main menu or set a DMX value of channel 8 between 240-249.

Never switch the fixture off by pulling out the power plug from the socket otherwise the fixture may be damaged (projector lamp, operating system...)!

2. Unpacking

The DigitalSpot 5000 DT is packaged in either a cardboard box or one-unit (two-unit) flight case to protect the product during shipment.

The following items are included:

- the DigitalSpot 5000 DT
- 2 omega holders
- the USB 2.0 flash drive with a System recovery utility
- this user manual


3. Introduction

The DigitalSpot 5000 DT features moving head with a video projection and automated lighting technologies including a DMX controllable digital media server installed in a fixture's base. The built-in 32-bit Graphics Engine utilizes Linux and DirectX application programming interface to provide extensive image control of graphic objects. The Digital spot 5000 DT uses DMX512 protocol to control hardware functions like pan, tilt, and zoom, as well as media fixture capabilities including loading images and movies. The graphics engine allows you manipulate position, scale, rotation, apply visual effects and color mix each image.

S-Video and VGA inputs for direct input to data projectors are handy for perfoming presentations.

S-Video and Composite live inputs can be used in graphics effects of DigitalSpot 5000DT


4. Fixture exterior view

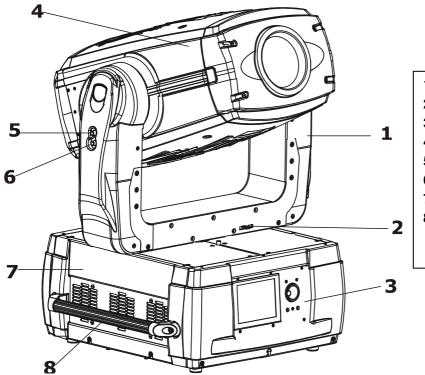

- 1 Yoke
- 2 Pan lock/unlock latch
- 3 Front panel
- 4 Moving head
- 5 Tilt lock button (red)
- 6 Tilt unlock button (green)
- **7** Base
- 8 Handle


The fixture head is locked for transportation - the tilt lock button (5) is pushed and the pan lock/unlock latch (2) is in a lock position. To unlock the fixture head, press the tilt unlock button (9) and move the pan lock/unlock letch into an unlock position.

Front panel of fixture base

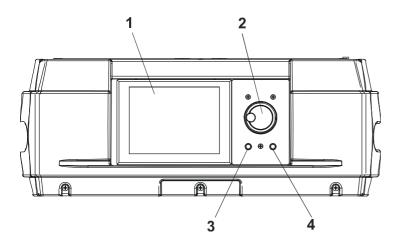

- 1 Display
- 2 Rotary control wheel
- 3 Escape button
- 4 Enter button

Rear panel of the fixture base

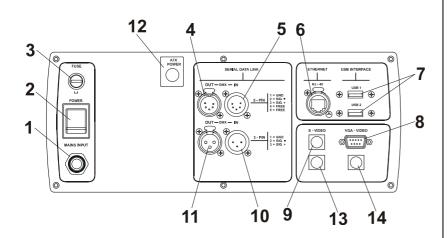

- 1 Power cord
- 2 Power switch
- **3** Fuse
- 4 5-pin DMX outputt
- 5 5-pin DMX input
- 6 Ethernet input
- 7 USB inputs
- 8 VGA intput-dataprojector.
- 9 S-video intput-dataprojector
- 10 3-pin DMX input
- 11 3-pin DMX output
- 12 ATX switch
- 13 S-video input- graphics engine
- 14 -Composite input-graphics engine

5. Video inputs

Both **VGA** (8) and **S-Video** (9) inputs provide direct connection to the projector. The inputs are intended for a static presentation as data going through the inputs cannot be processed in a graphics engine ,it means that graphics effects from a DMX protocol will not be usable. In this use of the fixture, the function of Keystoning from a DMX protocol will not operate. Next both inputs **S-Video** (13) and **Composite** (14) enable to process data in a graphics engine, it is means that you can use all spectrum of effects that the DMX protocol offers.

6. Connection to the mains

Install a suitable plug on the power cord, note that the cores in the power cord are colored according to the following table.

Core (Eu)	Core (US)	Pin	Symbol
Brown	Black	Live	L
Light blue	White	Neutral	N
Yellow/Green	Green	Earth	

The earth has to be connected!

6.1 Powering on the DigitalSpot 5000 DT

When the fixture is connected to the AC mains supply and the power switch is on, it automatically begins a homing procedure to verify that all functions of the fixture and its internal projector are in good order.

6.2 "Power down" mode

This mode omits fixture reset after switching the fixture on and deactivates all motors. The "Power down mode" is useful in special events e. g. if the fixture is placed in a flight case and you want to set its DMX address without taking it out from the case. To enter the "Power down mode", press and hold the [ENTER] button and at the same time switch on the Power switch. Press the [ESC] button to see a notice "Power Down Mode."

Now you can use the fixture menu to set desired behaviour of the unit. If you want to go to the standard operation mode without switching the fixture off, run total reset of the fixture (menu item **Reset all Systems**).

7. Shutting down the DigitalSpot 5000 DT

There are two recommended ways how to shutdown the fixture:

- 1. A DMX controller can switch off the projector lamp and shut down the fixture with the "Lamp Off, Fixture Off" option on the control channel 8 (see DMX protocol).
- 2. The option "Fixture Off" in main menu of DigitalSpot 5000 DT switches off the projector's lamp and shuts down the fixture.

After shutting down the fixture, switch the power switch at the rear side of the fixture base to the off position in order to save energy.

Removing power directly without the shutdown procedure can reduce fixture reliability!

8. Positioning the DigitalSpot 5000 DT

The DigitalSpot 5000 DT is designed to be installed in one of four possible installation locations:

- 1. Front Table the fixture is placed near the floor in front of the screen.
- 2. Front Ceiling the fixture is suspended upside-down from the ceiling (truss) in front of the screen.

 Set Ceiling Projection in the menu Personality ("Personality--->"Projection Presetting"
 --->"Ceiling Projection"--->"On")
- 3. Rear Table the fixture is placed near the floor behind the screen. Set Rear Projection in the menu Personality ("Personality--->"Projection Presetting"--->"Rear Projection"--->"On")

 Note that a special rear projection screen is required.
- 4. Rear Ceiling the fixture is suspended upside-down from the ceiling (truss) behind the screen.


 Set Rear Projection in the menu Personality ("Personality--->"Projection Presetting"--->

 "Rear Projection"--->"On") and Ceiling Projection ("Personality--->"Projection Presetting"
 --->"Ceiling Projection"--->"On")

Note that a special rear projection screen is required.

When determining the position of the fixture and projection screen, you will need to account for the projected image size, which is directly proportional to the projection distance.

There is a chart of 4:3 aspect-ratio screen sizes to assist you in determining the ideal location for your fixture.

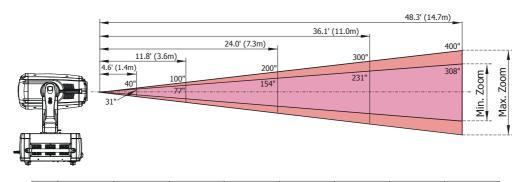

Scr	I Idx. Zoom	40"	100"	150"	200"	250"	300"	400"
SIZE	Min. Zoom	31"	77"	115"	154"	192"	231"	308"
	Distance	4.6' (1.4m)	11.8' (3.6m)	17.7' (5.4m)	24.0' (7.3m)	30.2' (9.2m)	36.1' (11.0m)	48.3' (14.7m)

Note: There is a tolerance among these numbers due to optical component variations. We recommend that if you intend to permanently install the DigitalSpot 5000 DT, you should physically test the projection size and distance using the actual fixture in m before you permanently install it, so as to make allowance for this projector's optical characteristics. This will help you determine the exact mounting position so that it best suits your installation location.

9. Rigging the fixture

Please consider the respective national norms during the installation!

Verify the truss or support will handle the combined weight of all the fixtures on the truss Always use a secondary safety cable when mounting this fixture

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

To ensure reliable operation of the product and to protect it from overheating, the vents must not be blocked or covered.

Hot air is exhausted from the exhaust vent. Do not put any flammable object near the fixture, hot air is exhausted from the air vents.

Keep the exhaust vents at least 1 m away from any objects.

Do not touch peripheral parts of the exhaust vent, especially screws, grids and metallic parts. These areas will become hot while the fixture is being used.

Do not put anything on the fixture. Objects put on the fixture will not only get damaged but also may cause fire hazard by heat.

Allow the fixture to cool for 20 minutes before handling.

The fixture should be installed out of the reach of people.

We recommend avoiding dusty/smoky environments when operating the fixture. Usage in these environments may cause a poor image quality. When using the fixture under dusty or smoky conditions, dust may accumulate on a lens, liquid crystal panels, or optical elements inside the projector. Such condition may degrade the quality of the projected image.

MPORTANT! Overhead rigging requires extensive experience, including calculation of working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and or damage to property.

The fixture must never be fixed swinging freely in the room.


Use 2 appropriate clamps to rig the fixture on a truss.

Make sure that the device is fixed properly!

Ensure that the structure (truss) to which you are attaching the fixtures is secure.


For overhead use, always install a safety cable that can hold at least 10 times the weight of the fixture. You must only use safety cables with screw-on carbines. Pull the safety cable through the two apertures on the bottom of the base and over the trussing system etc. Insert the end in the carbine and tighten the fixation screw.

A pair of the Omega holders can be placed in 4 positions on the bottom of the base. Use 2 clamps (not supplied) with screws M12.

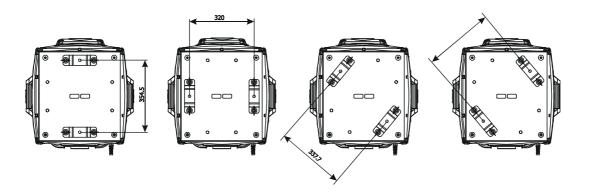

To install the fixture on the truss:

- 1. Bolt clamp (1) to the omega holder (4) with M12 bolt and lock nut through the hole in the holder.
- 2. Fasten the omega holders on the bottom of the base by inserting both quick-lock fasteners (3) into the holes of the base and tighten fully clockwise.
- 3. Fasten the safety-rope (2) through the two apertures in the bottom of the base and over the trussing system.

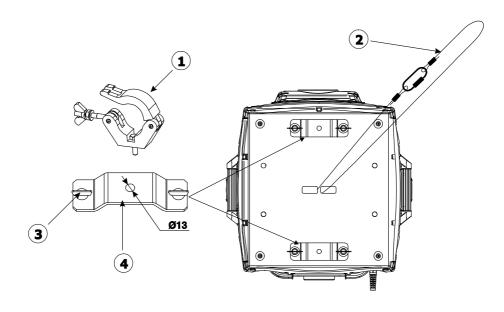

Before taking into operation for the first time, the installation has to be approved by an expert!

10. DMX 512 connection

The fixture is equipped with both 3-pin and 5-pin XLR sockets for DMX input and output. Only use a shielded twisted-pair cable designed for RS-485 and 3-pin/5-pin XLR- connectors in order to connect the controller with the fixture or one fixture with another.

Wiring of the XLR connectors:

DMX output XLR mounting sockets (rear view):



1 - Shield

2 - Signal (-)

3 - Signal (+)

4 – Not connected


5 – Not connected

DMX input

XLR mounting plugs (rear view):

To build a DMX chain

- 1. Connect the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.
- 2. Use menu "DMX Settings" to set the DMX start address on all fixtures (see the "Fixture address" menu).
- 3. The option Activate DMX mode has to be confirmed in the "DMX Settings" menu on all fixtures. Do not overload the link. Max. 32 fixtures may be connected on a DMX link.

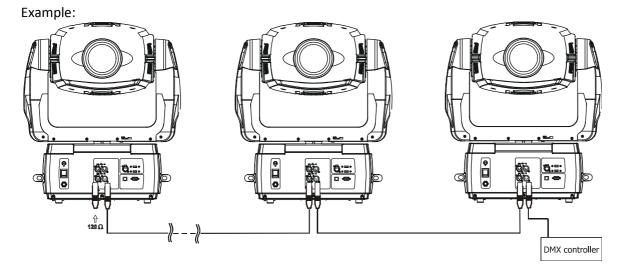

Caution: Terminate the link by installing a termination plug in the DMX output of the last fixture. The termination plug is a male 3-pin XLR plug with a 120 Ohm resistor soldered between Signal (-) and Signal (+).

11. Ethernet connection

The fixtures on a data link are connected to the Ethernet network with an Art-Net communication protocol. The controlling software from PC (or lighting console) has to support the Art-Net protocol.

The Art-Net communication protocol is a 10 Base T Ethernet protocol based on the TCP/IP. Its purpose is to allow transfer of large amounts of DMX 512 data over a wide area using standard network technology.

IP address is the Internet protocol address. The IP uniquely identifies any node (fixture) on a network. The Universe is a single DMX 512 frame of 512 channels.

The the DigitalSpot 5000 DT is equipped with 8-pin RJ- 45 socket for Ethernet input. Use a network cable category 5 (with four "twisted" wire pairs) and standard RJ-45 plugs in order to connect the fixture to the network.

RJ-45 socket (front view): 1- TD+ 2- TD3- RX+ 4- Not connected 8- Not connected 8- Not connected 8- Not connected

Patch cables that connect fixtures to the hubs or LAN sockets are wired 1:1, that is, pins with the same numbers are connected together:

	0. 0000.						
1-1	2-2	3-3	4-4	5-5	6-6	7-7	8-8

If only the fixture and the computer are to be interconnected, no hubs or other active components are needed. A cross-cable has to be used:

1	1-3		4-8	5-7	6-2	7-5	8-4
- 1		 ~ -	. •	• .	~ -		• .

Ethernet operation.


Connect the Ethernet inputs of all fixtures in the fixture chain with the network.

Use the menu "Artnet Settings" to set an IP address, artnet universe and artnet subnet on all fixtures (see the "Fixture address" menu).

The option "Activate Artnet mode" has to be confirmed in "Artnet Settings" menu on all fixtures.

Example:

(DMX address=1)

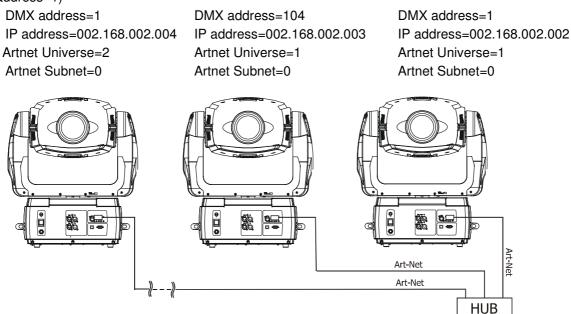

12. Folder organization

The library structure is reflected on the hard drive where all files for the library are stored. The whole library is contained within a special folder called 'Media'.

Inside the Media folder is a collection of folders (000,001...240) each named with a 3-digit number. Each folder following this convention represents a library folder and the 3-digit number represents the name of the folder. Because of this, you can't have folders without the 3 digit number scheme. You can't neither have two folders with the same digits.

Inside each folder is a collection of media files that the library folder holds. The media files also should follow the 3-digit conventions where a 3-digit number is followed by an underscore and a name e.g.: 001_testfile1.png. Note that for media files the digit starts at 001_ since visual 0 is always considered as being empty.

The media files assigned to the DMX values can be sorted either in an **alphabetical** or **numerical order**. Default assigning is the alphabetical order. If you need to change this sorting, go to the menu "Personality" and select "Gobo selection mode" option.

The numerical order is suitable in the case that you need to exactly assign certain media files to specified DMX addresses.

The table below show differences in file \rightarrow DMX assignment between the alphabetical and numerical sorting. The table also includes file names without a correct 3-digit convention to illustrate their behaviour in the numerical sorting.


Media file name	DMX value at Alphabetical Sorting	DMX value at Numerical Sorting
001_testfile1.png	1	1
020_testfile2.png	2	20
19_testfile3.png	3	19
3_testfile4.png	4	3
460_testfile5.png	5	Not Assigned*
testfile6.png	6	Not Assigned**

^{*} The 3-digit number has to be in range of 001-255. If there is more than 255 media files in the folder, files above 255 are ignored.

Subfolders 000-020 are reserved for default gobos and videos (from factory) and their content cannot be changed.

The images and video clips can be in one of the following formats: bmp, jpg, tga; .png, gif, pcx, pnm, xpm and lbm for images and mpeg1, mpeg2 for videos.

The folder named "**Update**" contains subfolders with the update files. The subfolders are created automatically during software updating and their names matching to date when software update has been executed. The folder a "**Log**" serves for saving log files generate by the option "Generate Log File" in a menu "Special Functions" of the control panel. Log file names are deducated from the date when the file has been logged out.

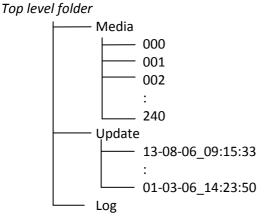

^{**} The media file name does not contain any digit.

13. Control menu map

Default settings=Bold print

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
Fixture Address	DMX Settings	Set DMX Address	001-512				
		Activate DMX Mode					
	Ethernet Settings	Set IP Address	Default IP Address				
			Custom IP Address				
			Gateway Address				
		Set ArtNet Universe	0-15				
		Set ArtNet Subnet	0-15				
		Activate Artnet Mode					
Fixture							
Information	DMX Values	Pan	0-255				
		: Synchro to L2	0-255				
	Media Disk	Free Disk					
	Space Usage	Space					
		Used Disk Space					
	Software Version	Graphic Engine					
		IC1 Motherboard					
		IC2 Motherboard IC3					
		Motherboard					
		HeadBoard					
	GPU Info:	GPU					
		Video Bios					
		Driver Version					
		Display Device					
	Product IDs	Mac Addr.					
Personality	Pan Reverse	On, Off					
	Tilt Reverse	On, Off					
	Analog Iris Reverse	On, Off					

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
	Lamp Presetting	Lamp On/Power On	On, Off				
		Lamp Off via DMX	On, Off				
		Lamp On If DMX is Present	On, Off				
		Lamp Off if not DMX	On, Off				
	Display Adjusting	Display Permanent On					
			Display Off After 5 min				
			Permanent On				
		Display Orientation	Normal Orientation				
			Rotated Orientation				
	Pan/Tilt Feedback	On, Off					
	Pan/Tilt Mode	Time Mode					
		Speed Mode					
	Active Blackout While:	During Movement Cor.	On, Off				
		Pan/Tilt Moving	On, Off				
	Projection Presetting	Ceiling Projection	On, Off				
		Rear Projection	On, Off				
	Dmx Protocol	Protocol Version	Version 3.8				
			Version 4.6				
			Version 5.4				
			Version 6.2				
	Gobo Selection Mode	Alphabetical Order	Gobo Selection Mode				
		Numerical Order					
	Verbose Mode	Verbose Mode 0					
		Verbose Mode 1					
	Default Setting	Set Default Values					
		Remove User Media Content					
Lamp On/Off	On, Off						
Manual Control	Manual DMX Control	Pan	0-255				

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
		:					
		Synchro to L2	0-255				
	Video Input Selection	Internal Input					
		External VGA Input					
		External SVideo Input					
	Dataprojector Control						
Stand-alone Setting	Play Program	Test program In Loop	Normal Mode				
		Program 1	Static Mode	Pan	0-255		
		:		Tilt	0-255		
				Zoom	0 - 255		
		Program 10		Focus	0-255		
				Run Program			
	Editing Program	Program 1					
		:	Edit Steps	Step 1	Pan		
		Program 10		:	:		
				Step 99	Synchro To L2		
					Step Time	0.1-25.5 sec	
					Fade Time	0.1-25.5 sec	
					Snap DMX		
					Save		
			Start Step	1-99	Save and Copy		
			End Step	1-99			
	Play DMX Program	DMX Program 1 in Loop					
		DMX Program 10 in Loop					
	Record DMX Program	DMX Program 1					
		DMX Program					
	Preset Playback	10 Deactivated					

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
		:					
		DMX Program 10 in Loop					
	Fixture Off	Timer					
	Timer	Deactivated Timer					
		Activated					
		Set Timer					
		Hours Set Timer					
		Minutes					
	Play DMX	DMX Program					
	Program	1 in Loop					
		DMX Program					
		10 in Loop					
Preview Mode							
Reset Functions	Reset Pan/Tilt System						
	Reset Zoom/Focus System						
	Reset Iris system						
	Reset All Systems						
Service Menu	Power On Time	Total Hours					
		Resetable Hours					
	Lamp On Time	Total Hours					
		Resetable Hours					
	Lamp Strikes	Total Strikes					
		Resetable Strikes					
	Fixture Temperatures	Current	Projector temp. 1				
	remperatures		Projector				
			temp. 2				
			Projector temp. 3				
			Pan/Tilt Board				
		Maximum Nonresetable	Projector temp. 1				
		. vo esclabic	Projector				
			temp. 2 Projector				
			temp. 3				

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
			Pan/Tilt Board				
		Maximum	Projector				
		Resetable	temp. 1				
			Projector				
			temp. 2				
			Projector				
			temp. 3				
			Pan/Tilt Board				
	Air Filters	Time To Clean Up Filters					
		Set clean Up Timer	10 50 300				
Special Functions							
	Regenerate Thumbnails	Set Thumbnail size	50 96 300				
		Regenerate Thumbnails					
	FTP Server	Set Account					
		Allow Anonymous	Yes/No				
	HTTP Access	Set Account					
		Allow Anonymous	Yes/No				
	USB Data Synchronize	USB1	Open	Media	Open	000	Open
		USB2				:	Synchronize to Fixture
					Comphania	240	Synchronize from Fixture
					Synchronize to		
					Fixture		
					Synchronize from Fixture		
				Update	Open		
					Synchronize to Fixture		
					Synchronize from Fixture		
			Init Flash Disc				
	Software Update	Update Graphical Software					
		Update HW processors Software					
		Update Media Content					
	Calibrate Values	Analog Iris Calib.	0-255				
	Generate Log File						
	Remote Servis	Set Service IP Address	Remote IP Address	077.048.000.224			

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	Menu Level 7	Menu Level 8
			Remote Port	08283			
			Service Port	08290			
		Set Default Gateway	Gateway Address	002.001.001.001			
		Start Remote Service					
Fixture Off							

14. Operating modes

Before operating the DigitalSpot 5000 DT from a DMX 512 controller, you need to define the source of DMX data, which may be:

DMX 512 - data is transmitted over standard DMX cables. Set a valid DMX start address, which is defined as the first channel from which the DigitalSpot 5000 DT will respond to the controller.

Please, be sure that you don't have any overlapping channels in order to control each DigitalSpot 5000 DT correctly and independently from any other fixture on the DMX data link.

For DMX start address setting, please refer to the instructions under "Fixture Address".

ArtNet - data is transmitted over Ethernet network using Artnet protocol. Set an IP address, Artnet Universe and Artnet Subnet.

For Artnet setting, please refer to the instructions under "Fixture Address".

15. Control menu

The control panel situated on the front panel of the base offers several features. You can simply set the fixture addresses, configure the fixture, run test, make a reset and also use many functions for setting fixture behaviour.

Control elements on the control board:

[RNS] encoder wheel-moves between menu items on the same level, scrolls between values.

[ESC] button-leaves menu without saving changes

[ENTER] button-enters menu, confirms adjusted values and leaves menu

After switching the fixture on, the display shows the initial screen:

than press [ENTER] and the display shows address:



ARTNET MODE

IP Address: Fixture ID:

2.1.1.50

Artnet Universe: 0
Artnet Subnet: 0

DMX Address: 001

The main menu of the control panel is accessed by pressing the [ENTER] button. To browse through the menu, rotate the [RNS] wheel. To select a function or submenu, press the [ENTER] button.

15.1 Fixture Address

Use this menu to set the DMX address.

DMX Setting --- Select this submenu to set the DMX start address.

<u>Set DMX Address</u> - sets DMX address. After selecting desired DMX address confirm setting by using the function "Activate DMX Mode":

Activate DMX Mode - Data is received from DMX input.

Artnet Setting --- Select this submenu to set the fixture for Ethernet operating.

<u>Set IP Address</u> - Select this submenu to set an IP address and NetMask.

The IP address is the Internet protocol address and uniquely identifies any node (fixture) on a network. There can't be 2 fixtures with the same IP address on the network!

Default IP Address -Preset IP address.

<u>Custom IP Address</u> - The option enables edit all numbers of the IP address.

To set the custom IP address:

1. Select "Custom IP Address" and press the [ENTER].

- 2. Use RNS wheel to set the first number of the IP address
- 3. Press the [ENTER] to move on the second number of the IP address
- 4. Repeat steps 2 and 3 for the third and fourth number of the IP address.

If you want to return back on the previously edited number, press [ESC].

The same way you can set the Netmask Address.

Gateway Address –Option allows to set gateway address.

Set ArtNet Universe - Select this submenu to set a Universe (0-15).

The Universe is a single DMX 512 frame of 512 channels.

<u>Set ArtNet Subnet</u> - Select the option to set Ethernet subnetworks to which the fixture belongs (0-15)

After setting all Artnet parameters confirm setting by using the function "Activate Artnet Mode":

Activate Artnet Mode - Data is received from the Ethernet input.

15.2 Fixture information

DMX Values --- Select this item to read DMX values of each channel received by the fixture.

Media Disk Space Usage --- Select the item to read information about the hard disk space.

<u>Free Disk Space</u> --- Select the item to show a size of free hard disk space (MB).

<u>Used Disk Space</u> --- Select the item to show a size of used hard disk space (MB).

Software Version --- Select this function to read the software version of the fixture modules:

Graphic Engine - a graphic software of the fixture.

<u>IC1 Motherboard</u> - a processor IC1 on the main board in the fixture base (the IC1 controls communication, DMX, fans, temperatures).

IC2 Motherboard - a processor IC2 on the main board in the fixture base (tilt).

<u>IC3 Motherboard</u> - a processor IC3 on the main board in the fixture base (pan).

<u>Headboard</u> - a processor in the fixture head (zoom, focus, iris).

GPU Info --- Select the item to read information about graphics processing unit, drivers and type of the projector.

Product IDs --- Select the function to read the MAC address of the fixture.

15.3 Personality

Use this menu to modify DigitalSpot 5000 DT operating behaviour.

Pan Reverse --- Select this function to invert the pan movement.

Tilt Reverse --- Select this function to invert the tilt movement.

<u>Analog Iris Reverse</u> --- Select this function to invert the mechanical iris movement.

<u>Lamp Presetting</u> --- Select this menu to change the lamp "behaviour".

<u>Lamp On/Power On</u> - Select this function to turn the projector's lamp on automatically after switching the fixture on.

Lamp Off via DMX - Select this function to switch the lamp off via DMX.

<u>Lamp On if DMX Present</u> - This function allows you to strike the lamp automatically after 26 seconds if a DMX signal is present on the data link.

<u>Lamp Off if not DMX</u> - This function allows you to switch off the lamp automatically after 2 minutes if a DMX signal is missing on the data link.

<u>Display Adjusting</u> --- This function allows you to change the display settings:

<u>Display Permanent On</u> - This function allows you to keep the display permanent on or to turn it off after 5 minutes of inactivity of control buttons (wheel)

<u>Display Orientation</u> - Select this function to adjust the display orientation:

<u>Normal orientation</u> - A standard display orientation.

Rotated Orientation - Inverts the display by 180°.

<u>Pan/Tilt Feedback</u> --- This function allows to return the moving head to the required pan/tilt position after changing the position by an external force (e.g. by a stroke).

Be careful, the Pan/Tilt Feedback OFF is not the standard operation and the head of the fixture can be damaged! Note: If the feedback was switched off ,the pan/tilt position is changed by an external force and the feedback is switched on again, the moving head might not to be synchronized with the DMX signal. You have to make a reset in order to synchronize the moving head with the DMX signal.

Pan/Tilt mode --- Use this menu to set the character of the pan/tilt movement.

<u>Time mode</u> --- Pan and tilt will move with different speeds and they will come at the same time to the end point (pan and tilt sets its optimal speed).

<u>Speed Mode</u> --- Pan and tilt will move with the same speed as adjusted by the channel 5. (Pan/Tilt speed). E.g. pan will come to the end point and wait for tilt, which has longer track.

Active Blackout while: --- Use this function if you wish to close the light output during the following events:

<u>During Movement correction</u> --- Select this function to enable the blackout during the head movement correction (if the moving head lost its right pan/tilt position for a short moment).

Pan/Tilt Moving --- This function closes the light output during pan/tilt changing.

Projection Presetting --- Use this menu depending on the installation location of the fixture:

<u>Ceiling Projection</u> --- When this function is "On", a picture is top (bottom and left) right reversed. This function enables to project the image from a ceiling mounting of the Digital Spot 5000 DT.

<u>Rear projection</u> --- When this function is "On", picture is left (right) reversed.

This function enables to project the image to a rear projection screen.

DMX protocol --- Use this menu to to select a desired protocol version.

Protocol Version:

Version 3.7 --- contains 86 control channels.

Version 4.5 --- contains 87 control channels.

Version 5.3 --- contains 95 control channels.

Versions 6.1 --- contain 103 control channels.

Versions 6.2 --- contain 103 control channels

<u>Gobo Selection Mode</u> --- Use this menu to select desired sorting of media files in media subfolders.

<u>Alphabetical Order</u> --- The media files are assigned to DMX values in an alphabetical order.

<u>Numerical projection</u> --- The media files are assigned to DMX values in a numerical order.

<u>Verbose Mode</u> --- Use this menu to hide messages displayed on the screen when you are changing some setting on the *Power/Special functions* channel (e.g. Rear projection on, Rear projection off.....).

<u>Verbose Mode 0</u> --- Generated messages are hidden.

<u>Verbose Mode I</u> --- Generated messages are visible on the projection screen.

<u>Default Settings</u> --- Select this option to set default values or to remove user's content in the fixture.

 $\underline{\textbf{Set Default Values}} --- \textbf{ Select this option to reset all fixture personalities to the default values}.$

<u>Remove User Media Content</u> --- The item deletes all user media contents except the factory media content.

15.4 Lamp On/Off

Use this option in order to switch on/off the projector's lamp.Do not use the projector continuously for 24 hours or more. If using the projector continuously for long periods, turn it off and leave it for one hour at least once during a 24 hour period.

15.5 Manual control

<u>Manual DMX control</u> --- Select this menu to control all channels by the control elements on the control board. <u>Video Input Selection</u> --- This menu enables to select desired video input:

> Internal input External VGA Input External SVIDEO Input

<u>Data projector control</u> --- Select this menu to operate the on-screen menu of the projector by means of the control elements placed on the fixture control board.



The [RNS] encoder wheel controls movement between arrow fields on the control display and the [ENTER] button enables movement in menu.Pressing the [ENTER] on a circular field (with "OK") confirms selected options. The [ESC] button-leaves menu without saving changes.

15.6 Stand-alone setting

Use this menu to set options for a stand-alone mode as a selection of the playing program, programming and modifying current programs.

<u>Play program</u> --- Select this menu to run a built-in program or 10 freely-programmable programs in a loop.

<u>Test Program In Loop</u> --- The option starts built-in test program.

Program 1 In Loop

: These options start user defined programs

Program 10 In Loop

Every program can run in two modes:

Normal - This mode uses pan/tilt movement and therefore is good for a dynamic projection.

Static - This mode is suitable for projections on the wall, ceiling or ground without any head movement. By means of items Pan, Tilt and Focus is possible to adjust moving head to the desired position.

Running program is possible to pause by pressing the [ENTER] button.

<u>Edit Program</u> --- Select this menu to edit or create a program. The DigitalSpot 5000 DT has 10 freely-programmable programs, each up to 99 steps. Each program step has a step time, during which effects last in a current step. Procedure:

- 1. Select the program you want to edit ("Program 1" "Program 10") and press the [ENTER] button.
- 2. Select "Edit Steps" menu and press [ENTER] button.
- 3. Select the desired program step ("Step 01" "Step 99") and press [ENTER] button.
- 4. Select the desired item and press the [ENTER] button. Now you can edit a DMX value of selected item by the [RNS] encoder wheel
- 5. Press the [ENTER] to save adjusted value.
- 6. Select another effects (channels) and repeat steps 4 an 5.
- 7. Select "Save" or "Save and Copy" and press the [Enter] to confirm all adjusted values in a current step:

"Save" - saves the current prog. step

"Save and Copy" - saves and copies the current prog. step to the next prog. step.

Option "Snap DMX"- inserts current values from DMX to all effects (channels). It is very useful function, you don not have to adjust all effects to desired positions, all values are loaded from DMX.

8. Go to the next prog. step ,press the [ENTER] and repeat this procedure (steps 4 and 7).

After creation of the program, you can simply reduced its length (by changing the start/end step) using either "Start Step" item or "End Step" item.

<u>Play DMX Program</u> --- Select this menu to run one of 10 programs which have been recorded via the menu "Record DMX program". By pressing the [ENTER] you can switch the running program into the 3 following modes: Pause, Playing, Playing in Loop. The current program step is shown on the fixture display:

PLAYING DMX PROGRAM	PLAYING DMX PROGRAM
Playing program: dprg_02.csv	Playing program: dprg_02.csv
Step: 27	Step: 27
Time: 00:00:02.632	Time: 00:00:02.632
Pause	Playing

L	PLAYING DMX PROGRAM
	Playing program: dprg_02.csv
	Step: 27
	Time: 00:00:02.632
	Playing In Loop

<u>Record DMX Program</u> --- The menu allows to record DMX data that receives the fixture and then replay them again via the menu "Play DMX program". There is a list of 10 programs for recording with unlimited steps each. Select desired program number and press the [ENTER] to enter the recording screen.

RECORDING PRO	GRAM
Recording program: 0	dprg_02.csv
Step: 11	
Time: 00:00:01.234	
Recordin	g

The data record starts after changing any receiving DMX value. To stop recording, press [ENTER] or [ESC]. Recorded DMX program has the name <code>dprg_xx.csv</code> where the xx means the number of the program (e.g. dpr_01.csv, dprg_02.csv....) and is stored in the folder "Programs" accessible by means of FTP. The format of this file is a plain text that allows additional user editing. The first line of the file includes all DMX channels with their starting DMX values and the next lines display changes of DMX values of channel effect and a relevant time of the changes.

Note: If you select the program which contains previously recorded data, the data will be overwritten without warning.

<u>Preset playback</u> --- The menu allows to select a program (or a DMX program), which will be played automatically in a loop after switching the fixture on.

<u>Fixture Off Timer</u> --- The menu offers to control the time during which the fixture is on and, for example, plays the recorded program. The adjusted time period is counted from starting the fixture.

Deactivated Timer --- The item disables the "Fixture Off Timer" option.

Set Timer Hours --- The item enables to set hours for the "Fixture Off Timer".

<u>Set Timer Minutes</u> --- The item enables to set minutes for the "Fixture Off Timer".

15.7 Preview mode.

This item enables to display the image, going from the projector, on the fixture's display.

Note: If this function is called out ,the video sequence from projector will not be played continuously because the fixture's processor has to display this sequence twice at the same time (on the wall and on the display)

15.8 Reset functions

The DigitalSpot 5000 DT can be reset totally or in function modules. Select relevant function to run a reset:

<u>Reset Graphics Engine</u> --- This function resets a graphics engine.

<u>Reset Pan/Tilt System</u> --- This function resets pan and tilt movement.

Reset Zoom/Focus system --- This function resets azoom and focus module.

Reset Iris system --- This function resets iris module.

Reset All systems --- This function enables the fixture to index all effects and return to their standard positions.

15.9 Service menu

Use this menu to read useful information about the fixture.

Power On Time --- Select this submenu to read the number of operation hours of the fixture.

<u>Total Hours</u> - The function shows the total number of the operation hours since the DigitalSpot 5000 has been fabricated.

<u>Resetable Hours</u> - The function shows the number of the operation hours that the DigitalSpot 5000 has been powered on since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

<u>Lamp On Time</u> --- Select this submenu to read the number of the operation hours with the projector lamp on.

<u>Total Hours</u> - The function shows the total number of the operation hours with the lamp on since the DigitalSpot5000 has been fabricated.

<u>Resetable Hours</u> - The function shows the number of the operation hours with the lamp on that the DigitalSpot5000 has been powered on since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

<u>Lamp Strikes</u> --- Select this submenu to read the total number of the projector lamp strikes.

<u>Total Hours</u> - The function shows the total number of the lamp strikes since the DigitalSpot5000 has been fabricated.

<u>Resetable Hours</u> - The function shows the number of the lamp strikes since the counter was last reset. In order to reset this counter to 0, press [ENTER] twice.

Fixture Temperatures --- Select this submenu to read the temperatures of the projector:

<u>Current</u> - Select this function to read the current temperatures of the fixture interior .

<u>Maximum nonresetable</u> -The function shows the max. temperatures of the fixture interior since the DigitalSpot 5000 DT has been fabricated.

<u>Maximum resetable</u> - The function shows the maximum temperatures of the fixture interior since the respective counter was last reset. In order to reset desired counter to 0, press [ENTER] twice.

Measuring points of temperatures:

Projector temp.1 [°C]]......temperature measured in the data projector Projector temp.2 [°C].....temperature measured in the data projector Projector temp.3 [°C]].....temperature measured in the data projector Pan /Tilt Board. [°C]temperature on the PCB in the fixture base

<u>Air Filters</u> --- Regular cleaning of the air filters is very important for the DigitalSpot 5000 DT life and performance. Buildup of dust, dirt and fog fluid residues reduces the fixture's light output and cooling ability. The two items of menu help you to keep cleaning period of the air filters.

<u>Time To Cleanup Filters</u> - The option allows you to read the time which remains to cleaning air filters. Expired time period is signalized by a negative mark at the time value and a warning icon (triangle) on the display with the following message:

"Please, Clean Up Airs Filters."

Clean the filters and reset this menu item (by pressing the "Enter" button twice while this menu is highlighted)

Set Cleanup Timer - Cleaning schedule for the fixture depends on the operating environment. It is therefore impossible to specify accurate cleaning interval. This function allows you to change the cleaning interval of the air filters. This "reminder" value is 50 hours and it is set as default. Inspect fixture within its 50 hours of operation to see whether cleaning is necessary. If cleaning is required, clean all air filters and change the value in this menu on acceptable level. Min. level is 10 hours, max. is 300 hours.

15.10 Special functions

Use this menu for special services like remote servis or software update.

Regenerate Thumbnails --- Use the menu to manage thumbnails behaviour.

Set Thumbnail size - The menu item allows set the size of the thumbnail: 50-min.size, 300-max.size.

Regenerate Thumbnails - By pressing the "Enter" button the refreshing process of gobo/video thumbnails starts. This action should be performed if you have changed gobo/video files and the fixture was not switched off after the change, otherwise the refreshing process runs automatically at starting up of the DigitalSpot 5000 DT.

FTP Server --- The FTP (File Transfer Protocol) server is used to transfer files between the fixture and a PC over an ethernet network by means of FTP client running on your PC. The "FTP Server" menu allows control of an access to the fixture's folders.

> <u>Set Account</u> - The option allows you to protect the access to the fixture folders by setting the name and password. The same data must be entered in FTP terminal running on

> Allow Anonymous - If this option is set "Yes" ,no password is required in FTP terminal but the user name may be "ftp" or "anonymous".

HTTP Access --- This menu enables to set access privileges which are used at entering to the Remote control program via your WWW browser.

> **Set Account** - The option allows you to protect the access to the Remote control program by setting the name and password. The same data must be used in the Remote control program running on your PC or a light control console.

Allow Anonymous - If this option is set "Yes" ,no password is required at entering to the Remote control program.

<u>USB Data Synchronization</u> --- The menu allows transfer of media files (images, videos) and software files between the USB stick and fixture's hard disk and related operations.

The USB stick must contain the following folders structure:

Top level folder

Media 000 001 002 240 Update Log

To create the folders structure mentioned above, use the option "Init Flash Disc". After creating folders structure on the USB stick you may load/download files into folders/subfolders . Maximum number of media files in one Media subfolder is 240. Subfolders 000-020 are reserved for default images/videos and cannot be changed (you cannot copy media files into these subfolders).

To upload a file/folder from the USB stick to the Media folder in the fixture:

1. Insert the USB stick to the USB port, select "USB Data Synchronize" from the menu and press the

[ENTER], "USB1" or "USB2" (depends on used USB port) is displayed on the screen.

- 2. Press the [ENTER], select "Open", press the [ENTER].
- 3. Select "Media", press the [ENTER],
- 4. If you want to copy all Media folder (including subfolders 000-240), select item "Synchronize to Fixture". If you want to copy only one subfolder (e.g. 035), select "Open", press the [ENTER], select desired subfolder from a list of subfolders, press the [ENTER] and select option "Synchronize to Fixture". If you want to copy only one file, select "Open" and press the [ENTER]. Select the desired file, press the [ENTER] and confirm a question in a dialogue box.

To download folder from the Media folder to the USB stick.

- 1. Insert the USB stick to the USB port, select "**USB Data Synchronize**" from the menu and press the [ENTER]. "**USB1"** or "**USB2"** (depends on used USB port) is displayed on the screen.
- 2. Press the [ENTER], select **Open**, press the [ENTER].
- 3. Select "Media", press the [ENTER],
- 4. If you want to copy all Media folder from the fixture (including subfolders 000-240), select item "Synchronize from Fixture". If you want to copy only one subfolder (e.g. 035), select "Open", press the [ENTER], select desired subfolder from a list of subfolders, press the [ENTER] and select option "Synchronize from Fixture". If you want to copy only one file, select "Open" and press Enter. Select the desired file, press the [ENTER] and confirm a question in a dialogue box.

<u>Software Update</u> --- This menu allows to update graphical software or hardware processors software. You have to download the latest version of the DigitalSpot 5000 DT software from ROBE website to your hard disk and then use either Ethernet network or the USB stick to move this file to the relevant folder in the DigitalSpot 5000 DT.

Copying software update file from the USB stick to the fixture:

- 1. Insert the USB stick to the USB port, select "USB Data Synchronize" from the menu and press Enter. There is an USB1 or USB2 (depends on used USB port) displayed on the screen.
- 2. Press Enter, select **Open**, press the [ENTER].
- 3. Select **Update** and press the [ENTER]. If you want to upload whole Update folder to the fixture, select option "**Synchronize to Fixture**".

If you only want to copy one or more files to the fixture, select option "**Open"** and press the [ENTER]. Select desired file, press the [ENTER] and confirm a question in a dialogue box.

After copying update file to the fixture, the desired software update will be activated by confirming the follow items:

<u>Update Graphical Software</u> - starts update of the graphical software.

If the message *Please Update HW Processors in Menu "Special Functions"* will appear after updating, run update of the hardware functions.

<u>Update HW processors Software</u> - starts update of hardware functions like pan, tilt, focus...etc.

<u>Update Media Content</u> - starts update of the factory media folders 00-20 (pictures, videos)

Calibrate Values --- This menu serves for a fine calibration of effects.

<u>Iris Calibration</u> - allows fine calibration of a mechanical iris.

<u>Generate Log File</u> --- This item starts generating a log file. The file is saved in the folder "Log" on the hard disk. This file records events in a certain scope in order to provide an audit trail that can be used to diagnose problems of the fixture.

Remote servis --- This menu provides necessary items for remote servis of the DigitalSpot 5000 DT.


15.11 Fixture Off

This function shuts down the fixture. The projector lamp is switched off as first and after cca 20 seconds is switched off the fixture.

16. Keystones

16.1 Global keystone parameters


If an image is output from the DigitalSpot 5000 DT at an angle the image may be skewed. Eight keystones adjust the image shape. It is possible to control each of the four corners of the image and reshape it. Default DMX value is 0, it means that no keystone correction has been used.

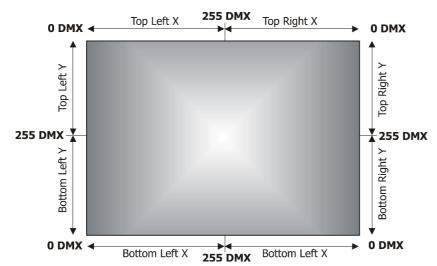

Setting all keystone values to 0 will place all four corners of the image at the four corners of the projector output. The keystone values can also be used to create interesting skewing effects.

For the picture merging are important both the *KeyStone X-ratio* and *KeyStone Y-ratio* channels for correction of the image distortion caused by placing projectors at different distances from the final image:

use channel KeyStone X-ratio for correction

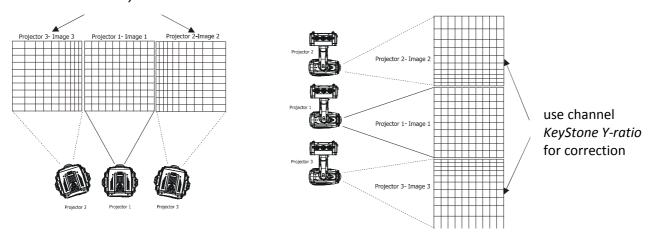

16.2 Layer keystone parameters

By the global keystone parameters stated above you can control each of the four corners of the graphics output individually to reshape your image to a form that is projected correctly.

By the layer keystone parameters you can control all four corners of the image at the same time. With these parameters you can create the same skewing and shape effects like with the global keystone parameters but on each gobo layer.

Major use of these effects is in a situation where the gobo mask is applied on a layer and you need to adjust a mask shape onto some object on the scene. More important is adjusting of the inner part of the image on the layer than the outer shape of the graphics output.

Characteristic case is a composition of 2 layers: the layer 1, where is applied a picture of the landscape and the layer 2, where is a gobo mask selected (see picture below).



To adjust desired image shape you can use the following (keystone) parameters on the gobo layer 2:

1. Layer zoom in X and Y direction.

The channels *Gobo zoom X coarse* and *Gobo zoom X fine* allow 8-bit/16-bit zooming in X-direction.

0-127 DMX

128 DMX (default)

129-255 DMX



The channels **Gobo zoom Y coarse** and **Gobo zoom Y fine** allow 8-bit/16-bit zooming in Y-direction.

128 DMX (default)

 
129-255 DMX






2. Gobo position in X and Y direction.

The channels *Gobo position X coarse* and *Gobo position X fine* allow 8-bit/16-bit positioning in X-direction.



The channels *Gobo position Y coarse* and *Gobo position Y fine* allow 8-bit/16-bit positioning in Y-direction.

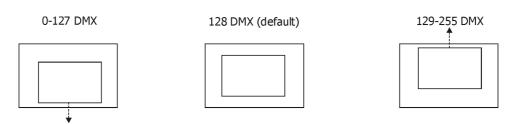





3. Layer skewing along X and Y axis.

On the channel *Gobo effect 1 selection* adjust a DMX value=**150** and using the control parameters 1 an 2 you can skew the image in either X or Y axis.

The channel *Gobo effect 1 – Parameter 1* skews the image in X-axis.

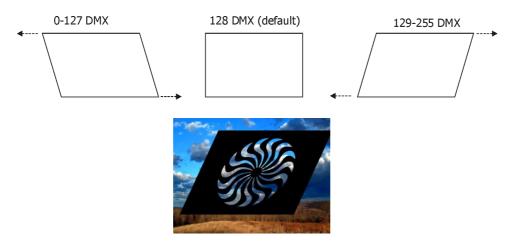

The channel *Gobo effect 1 – Parameter 2* skews the image in Y-axis.

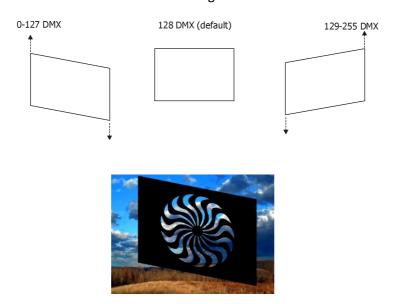


4. Layer Squeezing/Stretching along X and Y axis.

On the channel *Gobo effect 1 selection* adjust a DMX value=150 and using the Control Parameters 3 you can squeeze the image in X axis.

 The channel *Gobo effect 1 – Parameter 3* squeezes/stretches the image edges in Y-axis.











On the channel *Gobo effect 2 selection* adjust a DMX value=**150** and using the control parameters 1 you can squeeze the image in Y axis. Note. To allows this effect, the channel <u>Gobo effect 1 selection</u> has to be set to DMX=150.

  The channel *Gobo effect 2 – Parameter 1* squeezes/stretches the image edges in X-axis.










5. Image X-ratio and Y-ratio.

On the channel *Gobo effect 2 selection* adjust a DMX value=150 and the second and third parameter control image X-ratio and Y-ratio.

Note. To allows this effect, the channel Gobo effect 1 selection has to be set at DMX=150.

 The channel Gobo effect 2 – Parameter 2 compresses or expands the image in X- axis













   The channel *Gobo effect 2 – Parameter 3* compresses or expands the image in Y- axis.







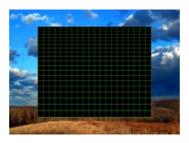

After shaping the image by means of the parameters stated above, you can apply the global banner effects on the whole graphics output and this final image should appear for instance like this:



17. In Frame and Out Frame parameters

 
You can select any segment of a video file for playback by assigning parameters for In Frame (start point) and an Out Frame (end point) as pictured below.


The In Frame parameter corresponds to a 16-bit DMX value equal to a starting point for the playback segment of the selected video file. The Out Frame parameter corresponds to a 16-bit DMX value equal to an end point for the playback segment of the selected video file.

1. Assigning the In Frame DMX values to 0 and Out Frame DMX values to 255 you will playback the entire video file.



- **2.** You can create a segment anywhere between the beginning and the end of the file.
- **3.** It is possible to skip a segment in the file by setting the In Frame to a point following the Out Frame value.



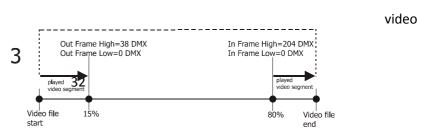

18. Video Control

The channel *Gobo control* defines how the current layer will be 'composed' with the previous layers and the playback options in each mode .The Digital Spot 5000 supports the following options:

Copy mode (0-17 DMX): In this mode, the pixels of the layer are written on top of the previous layers.

Addition mode (20-37 DMX: In this mode, the pixel values of the current layer are added to the ones of the previous layers. This means that "dark" pixels in the current layer image won't alter the pixels that are underneath while "light" pixel will saturate the image underneath.

- **Subtraction mode (40-47DMX)**: In this mode, the pixel values of the current layer are subtracted from the pixel value in the underlying layers. Dark pixel from the current layer won't alter the pixel of the layers underneath while light pixel will darken them.
- Multiplication mode (60-77 DMX): In this mode, the pixels from the current layer will be multiplied by the pixels of the underlying layers. For a pixel to appear bright in the output, the equivalent pixel of the current layer and the underlying layer needs to be bright. If any of the layers has a dark pixel, the result will be dark.
- **Minimum mode (80-97 DMX):** This mode takes the pixel that is the darkest between the current layer and the layer underneath
- **Maximum mode (100-117 DMX)**: This mode takes the pixel that is the brightest between the current layer and the layer underneath.

The playback options:

DMX value	Playback options	Meaning	
0.	Play forward continuously if dimmer >0 Plays the video segment from In Frame point t		
		Out Frame point, continuous looping. The dimmer	
		value has to be greater than 0.	
1	Play forward once if dimmer >0	Plays the video segment from In Frame point to	
		Out Frame point and holds on the last frame.	
		The dimmer value has to be greater than 0.	
2	Pause	Stops playback of video file at the current playing	
3	Play forward in continuous loop	Plays the video segment from In frame point to Out	
		Frame point, looping continuously	
		frame	
4	Play forward once	Plays the video segment from In Frame point to Out	
		Frame point and holds on the last frame	
6	Scrub (display) the selected In Frame	Displays the frame which has been defined by	
	· , , ,	the In Frame value.	
7	Scrub (display) the selected Out Frame	Displays the frame which has been defined by	
•	co. az (a.spiay) ine selected Sut Fulle	the Out Frame value.	

19. Playback speed

The *Playback speed* channel controls the speed of video playback at selected playback options.

DMX value	Playback speed	Meaning
0 or 128	Normal speed	Plays back video files at the original record. speed
1-127	Slow speeds from slowest to normal	Plays back video files at an increasing speed,
		from the slowest to the original recorded speed
129-255	Faster than normal to fastest	Plays back video files at an increasing speed,
		from faster than normal to the fastest.

20. Graphic effects

There are two gobo effect channels on each gobo layer (*Gobo effect 1 selection*, *Gobo effect 2 selection*), which offer amount of effects that can be applied to the current running picture/video. Each effect channels have three control channels - *Parameter 1*, *Parameter 2*, *Parameter 3* – which allow to change the behaviour of selected effect (e.g. speed, amount...)

20.1 Kaleidoscopic effect

The kaleidoscopic effect section on the channel *Gobo effect 1 selection* allows selection of the static or dynamic mode of the kaleidoscopic effect according to the desired mosaic segment.

DMX value			e desired mosaic segment.	
Static mode	Dynamic mode	Segment of mosaic	Example	Source picture
100	101	Square		
102	103	Right triangular		
104	105	Isosceles triangular		
106	107	Triangular 1		
108	109	Triangular 2		

Meaning of the control channels depends on the kaleidoscope mode which has been selected:

Static mode.

Gobo effect 1- Parameter 1: Density of mosaic segments

DMX value	Function
0 - 255	Adjusting density of mosaic segments from large (0 DMX) to small (255 DMX).

Gobo effect 1- Parameter 2: Content of segments-coarse

	<u> </u>
DMX value	Function
0 - 255	Coarse adjustment of the segments content

Gobo effect 1- Parameter 3 : Content of segments-fine

DMX value	Function
0 - 255	Fine adjustment of the segments content

Dynamic mode.

Gobo effect 1- Parameter 1: Density of mosaic segments

DMX value	Function	
0 - 255 Adjusting density of mosaic segments from large (0 DMX) to small (255 DMX).		

Gobo effect 1- Parameter 2: Size and pulsation of the segments content

	•
DMX value	Function
0 - 128	Size of segments content from small (0 DMX) to large (128 DMX)
129 - 255	Speed of segment pulsation from slow (129 DMX) to fast (255 DMX)

Gobo effect 1- Parameter 3: Movement and rotation of the segments content

DMX value	Function
0 - 127	Backward movement of segments content from fast (0 DMX) to slow (127 DMX)
128	No movement
129-255	Forward movement of segments content from slow (129 DMX) to fast (255 DMX)

20.2 Circular effect (Fish eye)


The effect allows to convert a picture from an oblong format to a circle format and adjust the character of the circular effect.

The circular effect can be activated on each gobo layer if you set the *Gobo Effect 1 Selection* channel to a DMX Value of 90. The *Parameter 1* of this effect changes the character of the circular effect from concave to convex.

The **Parameter 2** and **Parameter 3** serve for adjusting X ratio and Y ratio of the source image. A default value for all three parameters is 128.

Control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Character of the circular effect	0-255	concave (0) \rightarrow no adjustment (128) \rightarrow convex (255)
Parameter 2	X-ratio of the image	0-255	continual adjustment
Parameter 3	Y-ratio of the image	0-255	continual adjustment

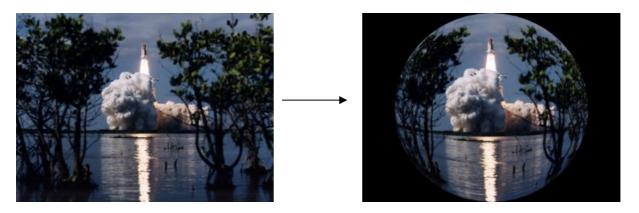

20.3 RGB (CMY) effects

The RGB effects section on the channel *Gobo effect 2 selection* allows to apply a variety of RGB colour swapping effects to graphic objects.

RGB subtract All Pixels (DMX value=50) – the effect reduces colour values across all pixels.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment → minimum saturation
Parameter 2	Green colour element	0-255	no adjustment → minimum saturation
Parameter 3	Blue colour element	0-255	no adjustment → minimum saturation

RGB add All Pixels (DMX value=51) – the effect increases colour values across all pixels.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment → maximum saturation
Parameter 2	Green colour element	0-255	no adjustment → maximum saturation
Parameter 3	Blue colour element	0-255	no adjustment → maximum saturation

RGB add non-black Pixels (DMX value=52) – the effect increases colour values across all pixels except black pixels. Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment → maximum saturation
Parameter 2	Green colour element	0-255	no adjustment → maximum saturation
Parameter 3	Blue colour element	0-255	no adjustment → maximum saturation

RGB subtract/add All Pixels (DMX value=53) – the effect reduces/ increases colour values across all pixels. Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	Min. saturat. (0) \rightarrow no adjustment (128) \rightarrow max. saturation(255)
Parameter 2	Green colour element	0-255	Min. saturat. (0) \rightarrow no adjustment (128) \rightarrow max. saturation(255)
Parameter 3	Blue colour element	0-255	Min. saturat. (0) \rightarrow no adjustment (128) \rightarrow max. saturation(255)

Swap RGB to RBG (DMX value=54) – the effect swaps green and blue colour in all pixels. Red colour remains without change.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	No change.
Parameter 2	Green colour element	0-255	no adjustment (0) \rightarrow blue (255) RGB \longrightarrow RGB
Parameter 3	Blue colour element	0-255	no adjustment (0) → green (255) RGB → RGB

Swap RGB to GRB (DMX value=55) – the effect swaps red and green colour in all pixels. Blue colour remains without change.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment (0) → green (255)
Parameter 2	Green colour element	0-255	no adjustment (0) \rightarrow red (255)
Parameter 3	Blue colour element	0-255	No change.

Swap RGB to GBR (DMX value=56) – the effect swaps red to green, green to blue and blue to red colour in all pixels.

Associated control parameters:

Control parameter	Controlled item	DMX value	Function
Parameter 1	Red colour element	0-255	no adjustment (0) → green (255) RGB → RGB
Parameter 2	Green colour element	0-255	no adjustment (0) \rightarrow blue (255) RGB \longrightarrow RGB
Parameter 3	Blue colour element	0-255	no adjustment (0) \rightarrow red (255)

Swap RGB to BRG (DMX value=57) – the effect swaps red to blue, green to red and blue to green colour in all pixels.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment (0) → blue (255)
			$ \begin{array}{c} $
			no adjustment (0) → red (255)
Parameter 2	Green colour element	0-255	$RGB \longrightarrow RGB$
			no adjustment (0) → green (255)
Parameter 3	Blue colour element	0-255	$RGB \longrightarrow RGB$

Swap RGB to BGR (DMX value=58) – the effect swaps red and blue colour in all pixels. Green colour remains without change.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment (0) → blue (255)
			$RGB \longrightarrow RGB$
Parameter 2	Green colour element	0-255	No change.
			no adjustment (0) → red (255)
Parameter 3	Blue colour element	0-255	$RGB \longrightarrow RGB$

RGB invert (DMX value=59) – the effect inverts red, green and blue colour in all pixels.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment (0) → full inversion (255)
			M. RGB
			no adjustment (0) \rightarrow full inversion (255)
Parameter 2	Green colour element	0-255	RGB → RGB
			no adjustment (0) → full inversion (255)
Parameter 3	Blue colour element	0-255	Mark R G B Win R G B

Invert and swap RGB to BRG (DMX value=60) – the effect swaps red, green and blue colour to inverted BRG in all pixels.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	no adjustment (0) → full inverted blue (255)
			Marin R G B
			no adjustment (0) → full inverted red (255)
Parameter 2	Green colour element	0-255	IN RGB → IN RGB
			no adjustment (0) → full inverted green (255)
Parameter 3	Blue colour element	0-255	Market Ma

Invert and swap RGB to GBR (DMX value=61) – the effect swaps red, green and blue colour to inverted GBR in all pixels.

Associated control parameters:

Control parameter	Controlled item	DMX value	Function
Parameter 1	Red colour element	0-255	no adjustment (0) → full inverted green (255)
Parameter 2	Green colour element	0-255	no adjustment (0) \rightarrow full inverted blue (255)
Parameter 3	Blue colour element	0-255	no adjustment (0) → full inverted red (255)

Colour to Alpha (DMX value=62) – the effect changes the transparency level of an image's element colour values. You can adjust the transparency of individual colours from completely transparent to full opacity using the control parameters 1, 2 and 3:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	Changes the red colour element transparency
Parameter 2	Green colour element	0-255	Changes the green colour element transparency
Parameter 3	Blue colour element	0-255	Changes the blue colour element transparency

Colour to Alpha Inverted (DMX value=63) – the effect changes the transparency level of the inverse of an image's element colour values.

Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour element	0-255	Changes the inverted red colour element transparency
Parameter 2	Green colour element	0-255	Changes the inverted green colour element transparency
Parameter 3	Blue colour element	0-255	Changes the inverted blue colour element transparency

RGB scale (DMX value=68) – the effect changes the output intensity of red, green and blue colour in all pixels. Associated control parameters:

Control	Controlled item	DMX	Function
parameter		value	
Parameter 1	Red colour	0-255	Changes the inclination of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity (0) → no adjustment (255) **Maximum** O DMX** **Proposition of conversion line for red colour from max. output intensity of logic colour f
Parameter 2	Green colour	0-255	Changes the inclination of conversion line for green colour from max. output intensity (0) → no adjustment (255) **Maximum D.D.M.** 128 D.M.** 128 D.M.** Histogram green colour property of the colour from max. output intensity (0) → no adjustment (255) **Maximum D.D.M.** 128 D.M.** 128 D.M.* 128 D.
Parameter 3	Blue colour	0-255	Changes the inclination of conversion line for blue colour from max. output intensity (0) → no adjustment (255) Maximum DMX 128 DMX 255 DMX 128 DMX 12

DigitalSpot 5000 DT

 $\textbf{Brightness scale} \ (\text{DMX value=69}) - the \ effect \ changes \ the \ output \ intensity \ of \ brightness \ of \ the \ picture.$

Associated control parameters:

Control	Controlled item	DMX	Function	
parameter		value		
Parameter 1	Inclination of the conversion line – bottom	0.355	Changes the inclination of conversion line for output brightness	
	point	0-255	from no adjustment (0) → min. brightness (255)	
	Inclination of the		Changes the inclination of conversion line for output brightness	
Parameter 2	conversion line – top	0-255	from max. brightness (0) → no adjustment (255)	
	point			
Example:				
	↑			
	maximum_0 PM	1X	Parameter 2 255 DMX	
Histogram of brightness				
Output by				
minimum Parameter 1 1280M/X 2500MX				
minimum Input brightness maximum				

20.4 Iris effect on layer

The effect allows to simplify transition effects between layers and it can be activated on each gobo layer. On the effect can be applied layer's X/Y zoom, X/Y position and rotation parameters. Another possible application of the iris effect is to use it as the mask function to mask unwanted parts of the image. On the iris effect on the layer can be also applied global effects as the iris, picture merging etc.

The iris effect on layer can be activated on each gobo layer if you set the *Gobo Effect 1 Selection* channel to a DMX value of 91. The *Parameter 1* of this effect changes the size of the iris. The *Parameter 2* selects type of the iris and the last *Parameter 3* serves for selecting of several texture modes applied on the iris surface.

To see various texture modes, the channels of the X/Y zoom have to comply with a condition:

Gobo zoom X coarse > 128 and the Gobo zoom Y coarse>128.

After that you can use the channels *Gobo position X coarse(Gobo position X fine)* and *Gobo position Y coarse(Gobo position Y fine)* to move the iris to the desired position on the layer.

Example:

Selected image on the layer 1:



Selected image on the layer 2:



Gobo effect selection on the layer 2:


Gobo effect 1 selection =91 (the effected has been activated)

Gobo effect 1- Parameter 1 = 158 (iris size)

Gobo effect 1- Parameter 2 = 2 (iris type)

Gobo effect 1- Parameter 3 = 5 (texture mode)

Visual effect on the projection screen when the Iris Effect On Layer is activated:

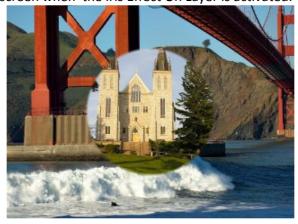

Below, there is a description of the *Parameter 3* for each group of texture modes (examples in the table are stated for X-axis only, but the Y-axis behaves in the same). The original pictures on both gobo layers are figured above.

Gobo Effect 1-Parameter 3: Texture modes applied on the iris surface

	Parameter 3: Texture modes applied on	the ins surjuce
Parameter 3		- v.s
DMX value	Zoom X	Zoom X + Position X
(Mode) 0-9 (Mode 1)		
10-19 (Mode 2)		
20-29 (Mode 3)		
30-39 (Mode 4)		
The following modes	(5-8) include black mask I	
40-49 (Mode 5)	Dimmer on the layer 3= 255 DMX	Dimmer on the layer 3= 255 DMX
	Dimmer on the layer 3= 1 DMX	Dimmer on the layer 3= 1 DMX

DigitalSpot 5000 DT

Parameter 3 DMX value (Mode)	Zoom X	Position X
50-59	Dimmer on the layer 3= 255 DMX	Dimmer on the layer 3= 255 DMX
(Mode 6)	Dimmer on the layer 3= 1 DMX	Dimmer on the layer 3= 1 DMX
60-69	Dimmer on the layer 3= 255 DMX	Dimmer on the layer 3= 255 DMX
(Mode 7)	Dimmer on the layer 3= 1 DMX	Dimmer on the layer 3= 1 DMX
70-79	Dimmer on the layer 3= 255 DMX	Dimmer on the layer 3= 255 DMX
(Mode 8)	Dimmer on the layer 3 = 1 DMX	Dimmer on the layer 3 = 1 DMX

21. Media content management

As you seen earlier in chapter "12. Folder organization", the DigitalSpot 5000 DT uses the root folder named "Media". This folder contains subfolders (000,001...240) and inside each subfolder is the collection of media that the subfolder holds. The files in subfolders are sorted in an alphabetic or numerical order and assigned to DMX. The first part of the file name should be a 3-digit number followed by an underscore and a name e.g.:

00**1**_sun.png...... **1** DMX 00**2**_snow_castle.png......**2** DMX .

255 apple.png......255 DMX

Subfolders 000-020 are reserved for default (factory) gobos/videos and their contents cannot be changed.

User subfolders 21-240 and their contents can be mowed between fixtures and your local drive (PC) as well as between fixtures. Which method you use depends on:

- how much content you want to move
- whether the fixture is currently connected to the Ethernet fixture link


There is several methods for moving user content files and folders between fixtures and a local drive and between fixtures each other. You can use:

- FTP client in Windows explorer window (fixtures have to be connected to Ethernet link)
- FTP client in Mozilla Firefox (fixtures have to be connected to Ethernet link)
- USB stick
- option "Contents Synchronization" in a Remote control program (fixtures have to be connected to Ethernet link). For detail description see articles below.


21.1 Moving files between the fixture and a PC

1. FTP client running on your PC (light console).


All fixtures have to be linked to an Ethernet link. The proper network configuration and IP address setting of your PC is very important. The following is an example of an IP setting for Windows XP:

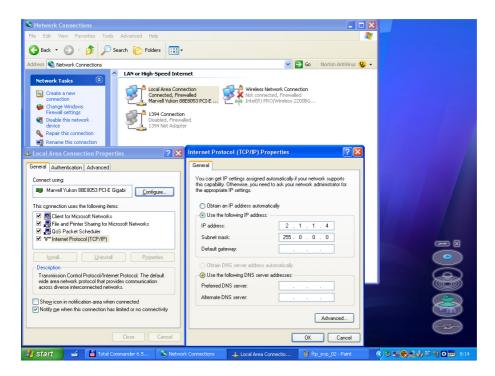

After network configuration, type the IP address of the DigitalSpot 5000 DT in address line in your Windows explorer window. Use this format ftp:// 2.X.X.X / (e.g. ftp://2.236.2.88/- see picture below).

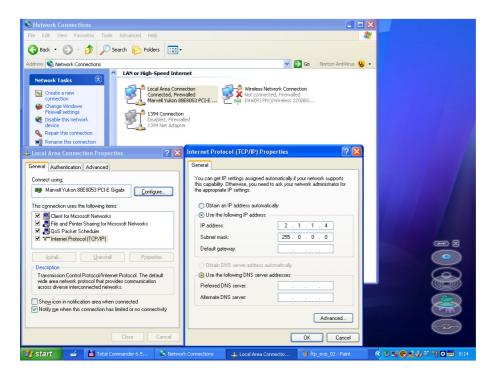

If all settings are proper, you will see "Media" and "Update" folders in the Windows explorer window and now you can work with them as local folders and files.

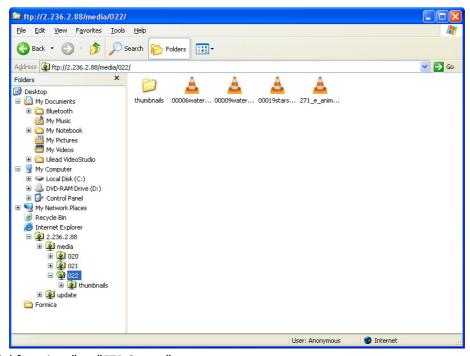

See also "Special functions"--> "FTP Server".

2. FTP client in Mozilla Firefox

If you use Mozilla Firefox as your web browser, you can install FTP client into the browser. To install FTP client for Mozilla Firefox on your computer.

- 1. Run Mozilla Firefox.
- 2. Select option "Tools" from the Menu bar, select "Add-ons" item.



- 3. Select option "Get Add-ons" from the standard toolbar, type **fireftp** into the top left field and press Enter key.
- 4. Click on the Add to Firefox.. button and follow the installation instructions.




5. Follow the installation instructions until the installation has finished.




5. After installation, go to the "Tools", select "Add-ons" item, select "Extensions" in the toolbar and click on the Options button. Select "Interface" menu and check option "Configure FTP links in Firefox to automatically use FireFTP".

DigitalSpot 5000 DT

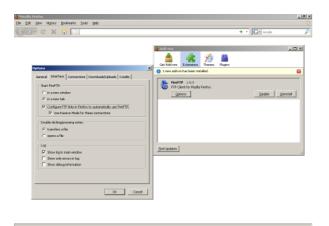

After installing FTP client, run Mozilla Firefox and type the IP address of desired fixture in ftp format e.g. ftp://2.97.181.89 and a Fire FTP window will appear.

If you do not want to keep in mind IP addresses of all connected fixtures, you can use the Remote configuration program (by typing the IP address of one fixture to the web browser in http format e.g. http://2.97.181.89) and go to the Contents Synchronization window where a list of available fixtures is offered (there is an example for the DigitalSpot 3000 DT).

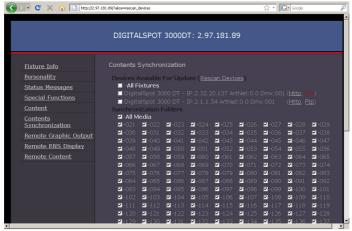

You need to know only IP address of one fixture as the rest of connected fixtures with their IP addresses is displayed in this window. By clicking on the Ftp option (in parenthesis) at desired fixture the FireFTP window will appear:



Now you can move files between PC and desired fixture.


3. Via USB stick.

Next way, how to add or remove files from the media folders is by means of the USB stick - see "USB Data Synchronization" in chapter "Special functions".

21.2 Moving files between networked fixtures

The option "Contents Synchronization" in a "Remote control program" running on your PC offers easy control of file transfer between networked fixtures via WWW browser. (For detail description of the Remote configuration program see chapter "Remote control of the fixture via WWW browser" below).

A window of the Contents Synchronization:

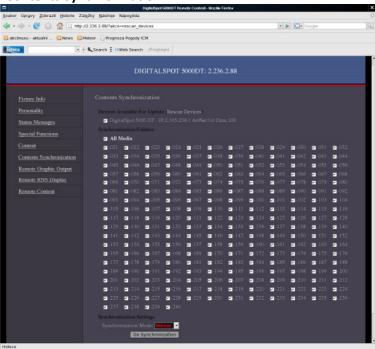

There is a list of available fixtures under **Device Available for Update**. If you connect another fixture to a network, use option "**Rescan Devices**" to refresh the list of fixtures.

A list of available folders with their check boxes is placed under **Synchronization Folders**.

Option "Synchronization Mode" gives you possibility to select how the files will be moved to target folder:

"Mirror"- a content of the target folder will be fully overwritten by a content of the source folder.

"Add" - files from the source folder are added to existing files in the target folder.

To move files.

- 1. Select desired folders check boxes. If you want to select all folders, check All Media check box.
- 2. Select a target fixture (fixtures) in a list of available fixtures.
- 3. Select desired Synchronization Mode and click the "Do Synchronization" button to start the file transfer.

22. Remote control of the fixture via WWW browser

The DigitalSpot 5000 DT offers a remote control of the fixture and diplaying useful information about the fixture including the gobo folders contents via WWW browser.


The fixtures has to be connected via an ethernet (with Art-Net communication protocol) to a network. The PC or light console has to be connected to the same network as the fixtures. Use only the IP addresses which have first number 2 like 2.X.X.X, e.g. **2**.236.2.88.

To run a Remote control program type the IP address of the desired fixture to your WWW browser (e.g. http://2.236.2.88) and the input window of the Remote Control will appear.


Note: if you wish to have access to this utility under password, use the menu "HTTP Access" in "Special functions" to set a password.

The Remote Control screen offers these options:


Fixture Info - the window with information about current fixture address, disk space, software versions etc.

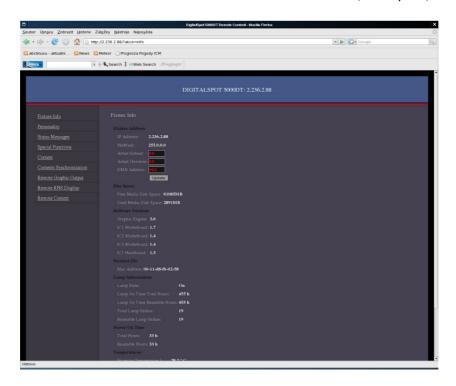

Personality - the window allows you to change the fixture settings like a pan/tilt reverse, feedback, speed, lamp status, DMX protocol selection etc.

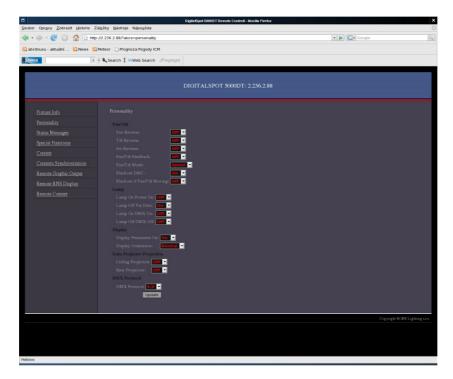

Status Messages - the window under this option displays error and status messages.

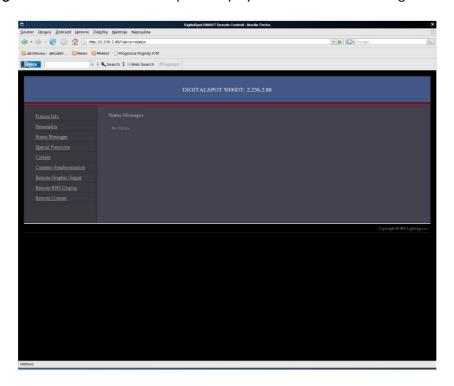


Special Functions - the window offers several items:

"Thumbnails size" - changing the size of the thumbnails. The change takes effect in the item "Content". If you change the thumbnail size, use the button "Update" below the size box.

"Log File" - enables to generate log file for service purposes.


"System Reboot"- starts reboot of the fixture

"Regenerate Video Headers"- allows to regenerate headers of video media files.

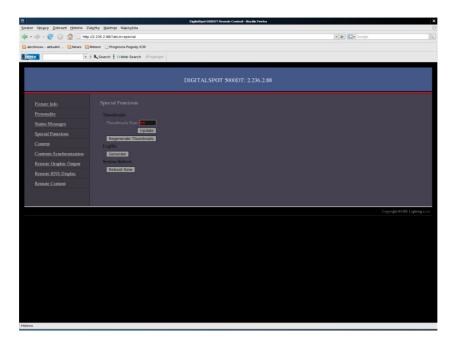


Content - by entering this window a complete overview of all gobo folders is offered, from which the folder to be view can be selected. Click a desired folder to display its content.

Click a desired picture to zoom it in.

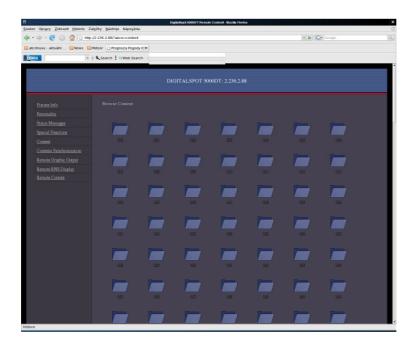

Contents Synchronization - the window allows you copy (addition) media content from a current fixture to another fixtures on an ethernet network.

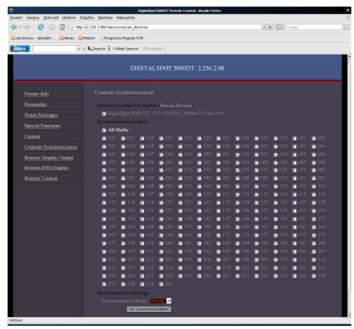

There is a list of available fixtures under **Device Available for Update**. If you connect another fixture to a network, use option "**Rescan Devices**" to refresh the list of fixtures.

A list of available folders with their check boxes is placed under **Synchronization Folders**.

Option "Synchronization Mode" gives you possibility to select the way how the files will be moved to target folder:

"Mirror"- a content of the target folder will be fully overwritten by a content of the source folder.


"Add"- files from the source folder are added to existing files in the target folder.

To move files.


1. Select desired folders check boxes. If you want to select all folders, check "All Media" check box.

- 2. Select a target fixture (fixtures) in a list of available fixtures.
- 3. Select desired Synchronization mode and click the "Do Synchronization" button to start file transfer.

Remote Graphics Output - preview of the current projecting output.

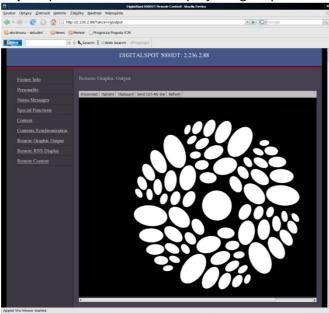

Remote RNS Display - the window "takes" the fixture's control panel. You can browse and adjust all items in this fixture menu by means of your keyboard. Use the Up/Down and Enter/Escape keys.

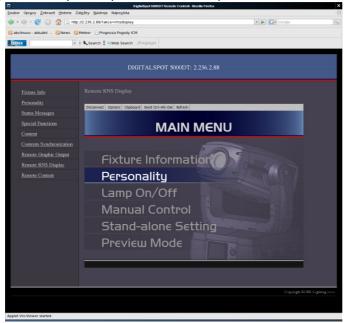


Remote Content - the window offers a table for definition of streaming sources. Type a streaming protocol, an IP address and a port number for the desired streaming source (e.g. laptop) to the first line in the following format: http://2.x.x.x:port number (for example http://2.1.1.3:1234)

and click the "Update" button on the right side of the line to save the streaming source address. This source is assigned to the DMX value of 1 on channel "Gobo selection". Up to 20 streaming sources is possible to define in this way.

All defined streaming sources are assigned to DMX values of the *Gobo selection* channel and can be used on each gobo layer.

Previous channel *Gobo folder selection* has to be set at DMX value of 252 in order to allow the use of streaming sources assigned to the *Gobo selection* channel. See the chapter Streaming video.

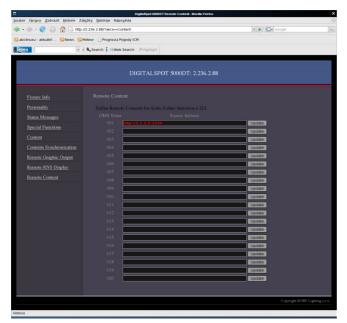

To end the Remote control program, close WWW browser (or use option "Logout" if you entered the program using the user name and password).

23. Picture merging


The picture merging system allows to create a panoramic projection controlled from a light DMX console. The resulting seamless image consists of the images of the individual projectors. It is possible to create an image field up to 64 segments (non-mirrored configuration).

You can display the original DigitalSpot 5000 DT gobos/videos or custom gobos/videos from user folders.

23.1 Picture merging control channels

Global effect 1

DMX values in a range of 1-7 enable the picture merging procedure. You can select from several predefined widths of the picture overlapping edges (from 0 to 35%). In many cases the projection screen is smaller than the total merged image of the projectors. This total image can be scaled either using Keystoning parameters or (better) adjusting the width of blending areas.

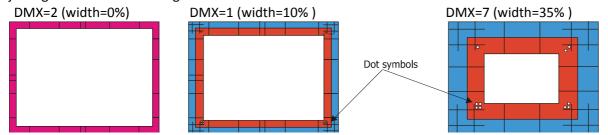

There are dot symbols in each corner of test pattern. The dot symbols correspond to the global keystone parameters in the following way:


- □ KeyStone Top Left X/ KeyStone Top Left Y
- KeyStone Top Right X/ KeyStone Top Right Y
- KeyStone Bottom Right X/ KeyStone Bottom Right Y
- KeyStone Bottom Left X/ KeyStone Bottom Left Y

These symbols should make easy identification of appropriate keystones in case there is several parts of merged picture.

Global effect 1- Parameter 1

The DMX value from the range of 1- 235 allows selection of desired image field configuration according to the tables on the following pages.

 Image field configuration



Non-mirrored configuration

DMX value	Image field Configuration W x H	Total number of fixtures			Total number of fixtures	
1	2 x 1	2	56	4 x 8	32	
2	1 x 2	2	57	8 x 5	40	
2	2 x 2	4	58	5 x 8	40	
4	3 x 1	3	59	8 x 6	48	
5	1 x 3	3	60	6 x 8	48	
6	3 x 2	6	61	8 x 7	56	
7	2 x 3	6	62	7 x 8	56	
8	3 x 3	9	63	8 x 8	64	
9	4 x 1	4	64	9 x 1	9	
10	1 x 4	4	65	1 x 9	9	
11	4 x 2	8	66	9 x 2	18	
12	2 x 4	8	67	2 x 9	18	
13	4 x 3	12	68	9 x 3	27	
14	3 x 4	12	69	3 x 9	97	
15	4 x 4	16	70	9 x 4	36	
16	5 x 1	5	71	4 x 9	36	
17	1 x 5	5	72	9 x 5	45	
18	5 x 2	10	73	5 x 9	45	
19	2 x 5	10	74	9 x 6	54	
20	5 x 3	15	75	6 x 9	54	
21	3 x 5	15	76	9 x 7	63	
22	5 x 4	20	77	7 x 9	63	
23	4 x 5	20	78	10 x 1	10	
24	5 x 5	25	79	1 x10	10	
25	6 x 1	6	80	10 x 2	20	
26	1 x 6	6	81	2 x 10	20	
27	6 x2	12	82	10 x 3	30	
28	2 x6	12	83	3 x 10	30	
29	6 x 3	18	84	10 x 4	40	
30	3 x 6	18	85	4 x 10	40	
31	6 x 4	24	86	10 x 5	50	
32	4 x6	24	87	5 x 10	50	
33	6 x 5	30	88	10 x 6	60	
34	5 x 6	30	89	6 x 10	60	
35	6 x 6	36	90	11 x 1	11	
36	7 x 1	7	91	1 x 11	11	


DMX	Image field	Total number of	DMX	Image field	Total number of
value	Configuration	fixtures	value	Configuration	fixtures
	WxH			WxH	
37	1 x 7	7	92	11 x 1	11
38	7 x 2	14	93	2 x 11	22
39	2 x 7	14	94	11 x 3	33
40	7 x 3	21	95	3 x 11	33
41	3 x 7	21	96	11 x 4	44
42	7 x 4	28	97	4 x 11	44
43	4 x 7	28	98	11 x 5	55
44	7 x 5	35	99	5 x 11	55
45	5 x 7	35	100	12 x 1	12
46	7 x 6	42	101	1 x 12	12
47	6 x 7	42	102	12 x 2	24
48	7 x7	49	103	2 x 12	24
49	8 x 1	8	104	12 x 3	36
50	1 x 8	8	105	3 x 12	36
51	8 x2	16	106	12 x 4	48
52	2 x 8	16	107	4 x 12	48
53	8 x 3	24	108	12 x 5	60
54	3 x 8	24	109	5 x 12	60
55	8 x 4	32	-	-	-


Example

Image field configuration:

W x H =2 x 2 =4 projectors


DMX= 3

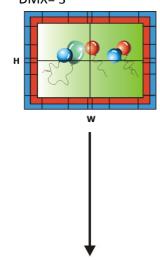

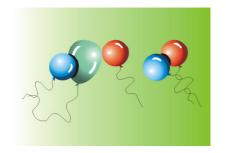

W x H =4 x 4 =16 projectors



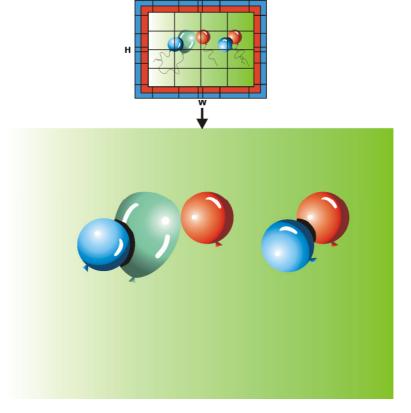

Horizontally mirrored configuration


DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix	DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix
128	2 x 1	2	146	10 x 2	20
129	4 x 1	4	147	4 x 5	20
130	2 x 2	4	148	10 x 3	30
131	4 x 2	8	149	6 x 5	30
132	6 x 1	6	150	10 x 4	40
133	2 x 3	6	151	8 x 5	40
134	6 x 2	12	152	10 x 5	50
135	4 x 3	12	153	12 x 1	12
136	6 x 3	18	154	2 x 6	12
137	8 x 1	8	155	12 x 2	24
138	2 x 4	8	156	4 x 6	24
139	8x 2	16	157	12 x 3	36
140	4 x 4	16	158	6 x 6	36
141	8 x 3	24	159	12 x 4	48
142	6 x 4	24	160	8 x 6	48
143	8 x 4	32	161	12 x 5	60
144	10 x 1	10	162	10 x 6	60
145	2 x 5	10	163	12 x 6	72


Example


Image field configuration:

W x H =2 x 2 =4 projectors

DMX= 130

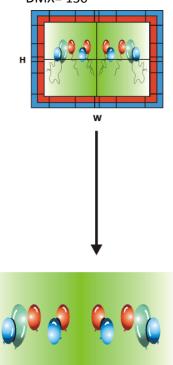

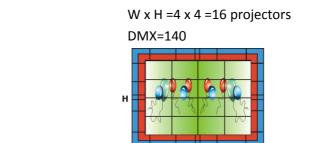

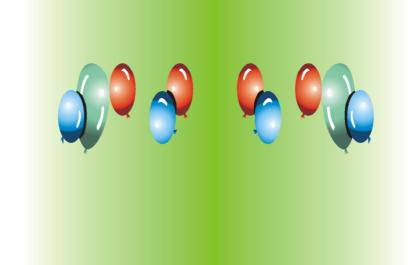


Vertically mirrored configuration


DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix	DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix
164	1 x 2	2	182	5 x 4	20
165	2 x 2	4	183	2 x 10	20
166	1 x 4	4	184	5 x 6	30
167	2 x 4	8	185	3 x 10	30
168	3 x 2	6	186	5 x 8	40
169	1 x 6	6	187	4 x 10	40
170	3 x 4	12	188	5 x 10	50
171	2 x 6	12	189	6 x 2	12
172	3 x 6	18	190	1 x 12	12
173	4 x 2	8	191	6 x 4	24
174	1 x 8	8	192	2 x 12	24
175	4 x 4	16	193	6 x 6	36
176	2 x 8	16	194	3 x 12	36
177	4 x 6	24	195	6 x 8	48
178	3 x 8	24	196	4 x 12	48
179	4 x 8	32	197	6 x 10	60
180	5 x 2	10	198	5 x 12	60
181	1 x 10	10	199	6 x 12	72


Example

 
Image field configuration:



DMX= 165

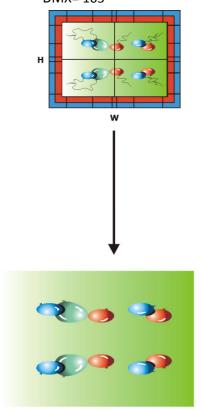

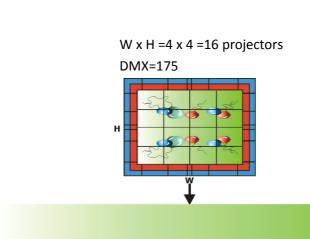

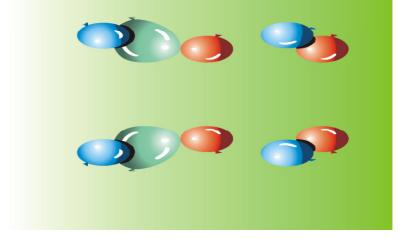



Vertically and horizontally mirrored configuration

DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix	DMX value	Image field configuration of base matrix W x H	Total number of fixtures in base matrix
200	2 x 2	4	218	10 x 4	40
201	4 x 2	8	219	4 x 10	40
202	2 x 4	8	220	10 x 6	60
203	4 x 4	16	221	6 x 10	60
204	6 x 2	12	222	10 x 8	80
205	2 x 6	12	223	8 x 10	80
206	6 x 4	24	224	10 x 10	100
207	4 x 6	24	225	12 x 2	24
208	6 x 6	36	226	2 x 12	24
209	8 x 2	16	227	12 x 4	48
210	2 x 8	16	228	4 x 12	48
211	8 x 4	32	229	12 x 6	72
212	4 x 8	32	230	6 x 12	72
213	8 x 6	48	231	12 x 8	96
214	6 x 8	48	232	8 x 12	96
215	8 x 8	64	233	12 x 10	120
216	10 x 2	20	234	10 x 12	120
217	2 x 10	20	235	12 x 12	144


Example

 
Image field configuration:



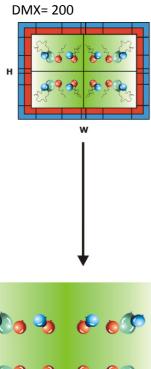

W x H =4 x 4 =16 projectors

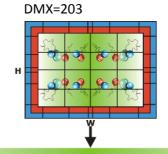

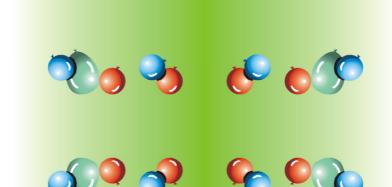









The mirrored image configurations bring 2 advantages:

- 1. Resolution of the source image and merged images on the wall is the same in comparison with non-mirrored configuration (if you use suitable mirrored configuration see example 3 below).
- 2. By using the picture merging with mirrored configuration you can cover any size of projection area. The total number of used projectors is unlimited.


Examples: 4 DigitalSpots 5000DT are used in the picture merging.

Source picture
Aspect ratio: 4:3
Resolution: 1024 x 768




Images on the wall:

Example 1. Horizontally mirrored configuration 4×1 (DMX=129) set on all fixtures

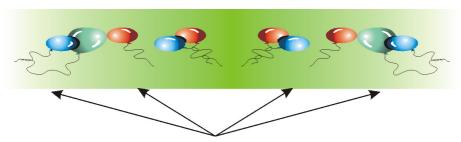


All projected images have a resolution of 1024 x 768, but the resolution of 1024 pixels is "made" from 512 pixels as each fixture projects 1/2 of the source picture (this half has a source resolution 512 x 768).

Example 2. Horizontally mirrored configuration 2 x 1 (DMX=128) set on two pairs of fixtures

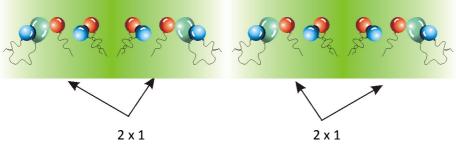

All projected images have a resolution of 1024×768 pixels and the total image does not have any distortion (horizontally or vertically). The base matrix 2×1 is twice repeated.

Example 3. Non- mirrored configuration 4 x 1 (DMX=9) set on all fixtures

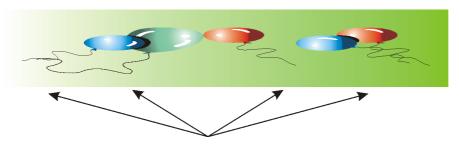

All projected images have resolution 1024 x 768, but the resolution of 1024 pixels is "made" from 256 pixels as each fixture projects ¼ of the source picture (this quarter has a source resolution 256 x 768).

Global effect 1- Parameter 2

The DMX values from the range of 0-255 are used to step segment by segment throw the image grid. The DMX value of 0 corresponds to the upper left segment of the image grid. The stepping runs from the left to the right and down from top (see example for field 8x3 segments bellow).

DMX=0 Segment	Segment 2	Segment 3	Segment 4	Segment 5	Segment 6	Segment 7	Segment 8
DMX=8 Segment 9	Segment 10	Segment 11	Segment 12	Segment 13	Segment 14	Segment 15	Segment 16
DMX=16 Segment 17	Segment 18	Segment 19	Segment 20	Segment 21	Segment 22	Segment 23	Segment 24


Global effect 1- Parameter 3

This channel enables to transform displaying of the segment edges-sharp or blended edges. You can also display the blue and red auxiliary frame with the alignment marks for easier alignment of the adjacent segments:


Channel	Value	Type of control	Type of control
43/95	0-130 131-140 141-150 151-160 161-170 171-180 181-255	Global effect 1 - Parameter 3 Displays segment with blended edges (active keystoning) Displays segment with sharp edges (active keystoning) Displays segment with sharp edges Displays auxiliary patern frame with sharp edges (active keystoning) Displays auxiliary patern frame, sharp edges Showing aspect ratio of image projected on the wall Reserved	step step step step step step

To align segments use pan/tilt, zoom and keystones channels.

  Segments before alignment:







At adjacent edges, there is the blue edge that overlaps the red one and respectively:

Note. DMX values of both channels **Global effect 1** and **Global effect 1- Parameter 1** have to be set at the same values on all fixtures used in the picture merging.

If the channel *Global effect 1 - Parameter 3* is set to the range of 171-180, the aspect ratio of an actual image is displayed in the image. The feature is activated when the Picture Merging is active only. The value of the aspect ration changes during setting of Keystone/zoom channels. The function is useful when the image is projected on the skewed surface, at Picture Margin and at video projection (usually 16: 9 aspect ratio).

Aspect ratio 4:3

Aspect ratio 16:9





Global effect 2

A DMX value of 20 enables fine adjusting of the red, green and blue gamma curve at overlaping edges to achieve consistent colour (brightness) of these parts of image.

Note. After selecting desired image segment for the gamma correction (by means of the *Global effect 1 - Parameter 2*), set the channel *Global effect 1 - Parameter 3* to 0 in order to display blended edges of the picture segment.

Global effect 2- Parameter 1

The parameter adjust the red gamma value at respective image adge.

Global effect 2- Parameter 2

The parameter adjust the green gamma value at respective image adge.

Global effect 2- Parameter 3

The parameter adjust the blue gamma value at respective image adge.

The second way how to adjust the red, green and blue gamma curve at overlapping edges is by means of the channel *Gobo effect 2 Selection* on a gobo layer. The option works on the global layer and it doesn't matter on which layer the channel *Gobo effect 2 Selection* was activated. This option can be a suitable solution in a case that the channel *Global effect 2* is used for another effect.

To activate the fine adjustment of blending curves.

- 1. Set the channel *Gobo effect 2 selection* to 200 on any gobo layer .
- 2. Now parameters 1-3 of this effect changing the red, green and blue gamma curves.

23.2 Picture merging example

Here is an example of the image field 3x2.

- **1**. All fixtures that are a part of the picture merging should have a different fixture ID (**The fixture ID= the last number of its IP address**). The fixture's IP address consists of four numbers separated by the dot e.g. 002.168.002.**010**.
- 2. Select the same gobo/video on the six DigitalSpots 5000 DT.
- 3. On all fixtures you are configuring set a DMX value=1 at the channel Global Effect 1.

On all fixtures you are configuring set a DMX value=6 at the channel Global Effect 1-Parameter 1.

- **4**. Set a DMX value at the channel *Global Effect 1- Parameter 3* between 151-160 to define a sharp edges of segments for a fine alignment.
- **5**. On each individual fixture set a DMX value between 0-5 at *Global Effect 1 Parameter 2* to select the segment that the fixture will project.
- **6**. Use pan/tilt/zoom and keystone channels to align the projections of individual fixtures in such a way that there is some overlap between the separate portions of the image. This overlap is necessary for the picture merging adjustment.
- 7. Set a DMX value at *Global Effect 1- Parameter 3* between 131-141 to display the segment with sharp edges for fine adjustment by means the fine pan/tilt and keystones channels. After it set this parameter to 0 and the channel *Global Effect 2* set to 20 to enable fine RGB gamma correction by means of the *Global Effect 2 Parameter 1-3*.


8. To execute the picture merging ,run the same gobo/video on all six fixtures and set the channels **Global Effect 1- Parameter 3** to a DMX value of 0-130.

Note: In order to assure a correct playback of videos sequences, all fixtures in the picture merging system should be synchronized to the one (master) fixture - see the chapter bellow.

24. Pre-cut content mode for Picture Merging

The mode is useful when you want to cover large projection area with full resolution for each projector or you don't want to be restricted with limits of matrix configuration.

The basic idea is that before projection you have to prepare the pre-cut content (e.g. picture) and upload the single parts of the splitted source picture into individual fixtures.

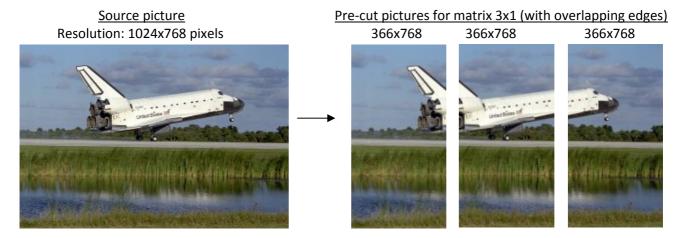

Single segments of the source picture must have the same size (pixels) which is given by:

 $L_{partX} = L_{totalX}/[x-(b/100)*(x-1)]$ Size of the single segment in X-axis $L_{partY} = L_{totalY}/[y-(b/100)*(y-1)]$ Size of the single segment in Y-axis

where

 L_{partX} = size (pixels) of picture segment in X-axis L_{totalX} = total size (pixels) of the source picture in X-axis x = number of picture segments in X-axis b = size of overlapping edges in %

 L_{partY} = size (pixels) of picture segment in Y-axis L_{totalY} = total size (pixels) of the source picture in Y-axis y = number of picture segments in Y-axis

Positions at which single picture segments start in the source picture are given by:

$$\begin{split} &L_{posX} = (N_x - 1)^* \; L_{partX} \; ^* [1.0 - (b/100)] \; \\ &Position \; in \; X-axis \\ &L_{posY} = (N_Y - 1)^* \; L_{partY} \; ^* [1.0 - (b/100)] \; \\ &Position \; in \; Y-axis \end{split}$$

where

 L_{posX} = position (pixels) at which segment starts in X-axis

L_{posY} = position (pixels) at which segment starts in Y-axis

 N_x = order of the fixture image in X-axis (figured from the left side of the source picture)

 N_Y = order of the fixture image in Y-axis (figured from the bottom side of the source picture)


b = size of overlapping edges in %

The pre-cut content mode has several advantages compared to the standard picture merging:

- -unlimited size of the image field configuration matrix
- -allows full resolution of every matrix element
- less loading of fixtures 'graphics engines

But the time for preparing pictures and calculation of the overlapping edges has to be taken into account.

There is an example of calculation of needed points in the source fixture for the image stated above.

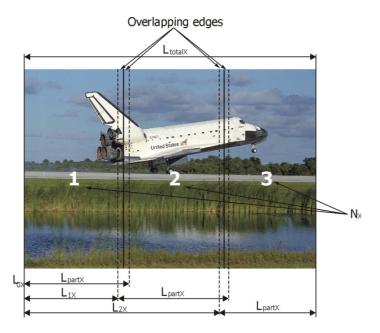

Size of segments in X-axis: $L_{partX} = L_{totalX}/[x-(b/100)*(x-1)]$

 L_{partX} =1024/ [3-(10/100)*(3-1)] the size of overlapping edges was selected 10% (b=10)

 L_{partX} = 366 pixels

Since the size of the segments in Y-axis is the same as at the source picture, each of the 3 fixtures will project picture with resolution of 366x768 pixels.

Note. On the other way round, if you need to calculate the resolution of the source picture to ensure that every fixture will use the resolution of 1024x768 pixels, use the formula:

$$L_{totalX} = L_{partX} * [x-(b/100)*(x-1)]$$

for this case: $L_{\text{totalX}} = 1024 * [3-(10/100)*(3-1)]$ $L_{partX} = 1024 pixels$

 $L_{totalX} = 2867$ pixels

The source picture should have min. resolution of 2867x768 pixels.

Positions in X-axis at which single picture segments start:

 $L_{posX} = (N_x-1)* L_{partX} * [1.0-(b/100)]$

For the segment 1: $L_{0x} = (1-1)^* \ 366 \ ^*[1.0-(10/100)] = 0$ pixels $N_x = 1$ For the segment 2: $L_{1x} = (2-1)^* \ 366 \ ^*[1.0-(10/100)] = 329$ pixels $N_x = 2$ For the segment 3: $L_{2x} = (3-1)^* \ 366 \ ^*[1.0-(10/100)] = 659$ pixels $N_x = 3$

Result: The first picture segment starts at point 0 pixels and has resolution of 366x768 pixels.

The second picture segment starts at point 329 pixels and has resolution of 366x768 pixels.

The third picture segment starts at point 659 pixels and has resolution of 366x768 pixels.

Using a suitable software you have to prepare these three pictures and copy them to the individual fixtures in order to use them in the picture merging procedure. On the channel *Global Effect 1* select a DMX value from the range of 11-17 DMX according as large overlapping edges you have calculated.

All other settings are the same as for standard picture merging operation.

Note. For correct video files synchronization you have to ensure that all cutted video segments must have the same times of video lasting.

25. Effect video synchronization

The synchronization option can be set separately for each gobo layer (channels *Synchronization to ID*). The fixture synchronization acts with the fixture ID which is defined as the last number of fixture's IP address. This fixture ID is shown on the fixture's display. The fixtures are synchronized to the one fixture - named a master fixture.

The fixtures may be controlled by the DMX but the fixture synchronization runs over ethernet network - it means that all fixtures that are to be synchronized have to be connected to the ethernet.

Each DMX value of the synchronizing channel responds to the fixture ID of a certain fixture.

You have to set the DMX value (ID) of the master fixture on all fixtures that are to be synchronized. If the DMX value= fixture ID, in this case the fixture is set as a master.

Example: 4 DigitalSpots 5000 DT which are synchronized through the gobo layer 1 to the fixture 3:

	IP address	Fixture ID	Synchronization to ID (Channel 48/75)	
Fixture 1	002.168.002.010	10	DMX=20	
Fixture 2	002.168.002.015	15	DMX=20	
Fixture 3	002.168.002. 020	20	DMX= 20	Master fixture
Fixture 4	002.168.002.021	21	DMX=20	

Note: For a synchronous video projection on the layer 1, the channels *InFrame High, In Frame Low, Out Frame High, Out frame Low, Gobo control, Playback Speed* have to be set at the same values on all fixtures. The same rule proceeds for the gobo layer 2.

26. Projection onto angular, cylindric or spheric surfaces

If a projection on curved surface is required a correction of the shape distortions is necessary. The DigitalSpot 5000 DT supports projection onto angular screens, cylinders and spheres.

26.1 Curved surface support channels

Global effect 2

This channel enables you to select desired shape of the surface:


	is charmer enables you to select desired shape of the surface.							
DMX Value	Sı			Surface DMX Surface Value		DMX Value	Surface	
1	Vertical inside corner (opening towards fixture)		5	Vertical convex cylinder (opening towards fixture)			Orthographic sphere mapping Note: parameter 1 range:0-127 - convex surface adjustment 128 - no adjustment (default) 129-255 - concave surface adjusment	
2	Vertical outside corner (opening away from fixture)		6	Vertical concave cylinder (opening awayfrom fixture)		10	Rectangle to circle (sphere) Note: Keystone parametres have a different meaning	
3	Horizontal inside corner (opening towards fixture)		7	Horizontal convex cylinder (opening towards fixture)		11	Square to circle (sphere) Note: Keystone parametres have a different meaning	
4	Horizontal outside corner (opening away from fixture)		8	Horizontal concave cylinder (opening awayfrom fixture)				

To simplify a correction process, there is a gobo with a net pattern (DMX value = 2) in a factory folder No. 20 (DMX value= 20) on a *Gobo folder selection* channel each gobo layer.

Global effect 2- parameter 1


This parameter enables to adjust the total length of the image edge. A value of 0 means no adjustment, a value of 255 means maximum correction.

Note. If a corner projection is selected on a *Global effect 1* (values of 1-4), the red guiding line will appear in the image (the gobo with the net pattern has to be projected).

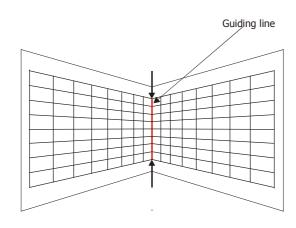


Global effect 2- parameter 2

This parameter enables to adjust the horizontal length of the edge. A DMX Value of 128 = no adjustment, values below 128 move the edge to the left, values above 128 move the edge to the right.

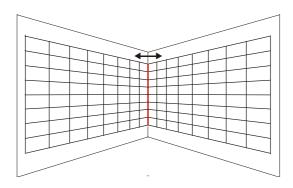

Global effect 2- parameter 3

This parameter enables to adjust the vertical length of the edge. A DMX Value of 128 = no adjustment, values below 128 move the edge downwards, values above 128 move the edge upwards.

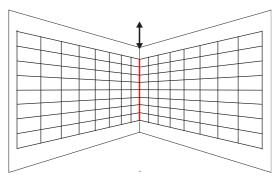


These global effect 2 parameters 1-3 have to be used in combination with the KeyStone and KeyStone X-ratio (Y-ratio) parameters to adjust desired shape of image.

Corner projection

Example:

- 1. Project the gobo with a net pattern on the wall (the channel *Gobo Folder selection*, is set at a value of 20, the channel *Gobo selection* at a value of 2).
- 2. Set the channel Global Effect 2 to a Horizontal inside corner mapping (DMX value=3)
- 3. Use the channel *Global Effect 2 -Parameter 1* to adjust the length of the image edge.
- 4. Use the channels *Global Effect 2 -Parameter 2*, and *Global Effect 2 -Parameter 3* and Keystone channels to correct image on the wall.
- 5. Use the *KeyStone Y-ratio* channel for the final correction of the image.

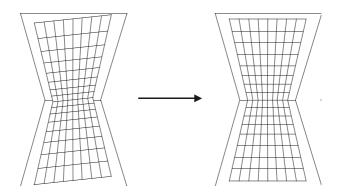

Note:

If a projection of rectangle (square) on a circle (sphere) is selected on the channel Global Effect 2 (DMX value of 10 or 11), the meaning of the Keystone parameters in a DMX chart will be changed as follows:


Channel	DMX value	Function	Type of control
13	0 -127 128 129-255	Image moving in an X-direction Moving the image from left to center Center Moving the image from center to right	proportional step proportional
14	0 -127 128 129-255	Image moving in a Y-direction Moving the image from bottom to center Center Moving the image from center to top	proportional step proportional
15	0 - 255	Squeezing in an X-direction Continual squeezing	proportional
16	0 - 255	Squeezing in a Y-direction Continual squeezing	proportional
17	0 - 255	Squeezing in a diagonal direction (top right-bottom left) Continual squeezing	proportional
18	0 - 255	Squeezing in a diagonal direction (bottom left-top right) Continual squeezing	proportional
19	0-255	Zoom Continual zooming	proportional
20	0-255	Indexing Anticlockwise indexing	proportional

26.2 Rectangle onto circle (sphere) mapping with picture merging

This effect in contrast to the effects stated above allows not only a projection onto a circle (sphere) but in addition enables a picture merging onto a circle (sphere) surface.

This effect can be activated on the the Global Effect 2 Selection channel at a DMX Value of 12. The Parameter 1 of the effect changes the sphere diameter. The *Parameter 2* and *Parameter 3* correct distortion in X-axe and Y-axe due to the different projection angles of the fixtures.

There are examples for the image field configuration 2x2:

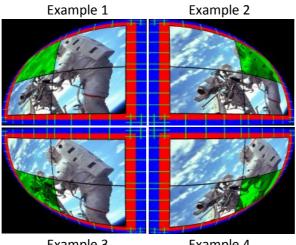

Example 3

Example 4

27. Video processing on gobo layers from a streaming video server

A streaming video is a video that is continuously sent by one device (e.g. PC) and received by another device (DigitalSpot 5000 DT) over an ethernet network.


The Streaming video software stated on the pictures below is available at http://www.videolan.org/vlc/.

Download VLC media player from this web page and install it on your streaming source (PC, notebook..).


Here are important installation points how to prepare a video processing on gobo layers from a remote streaming video source in the fixture.

Streaming source (here is an example for PC running Windows XP)


- 1. Download the VLC media player to the PC (Windows self-extracting package 0.8.6f),
- 2. Set PC network card for Art-Net network:
 - Menu path: "Start" --> "Control Panel" --> "Network Connection" --> "Connection"

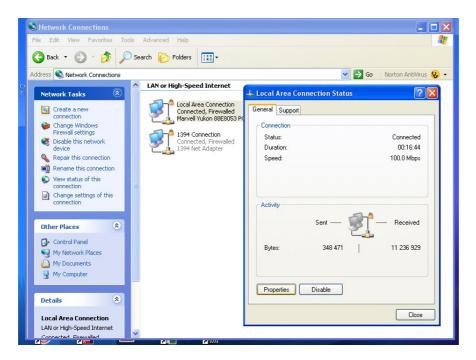

- Click on the "Properties" button and the following window will open.

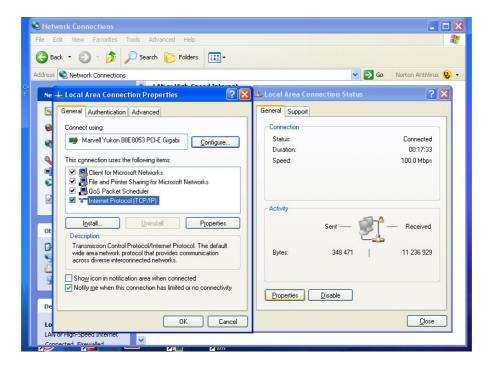

- Click on the item "Internet Protocol (TCP/IP)" and the Internet Protocol Properties window will open. Set IP address to something like 2.X.X.X with an IP mask of 255.0.0.0

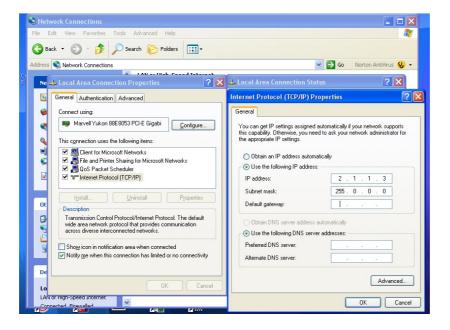


3. Install a VLC media player-

- click on a VLC media player self-extracting package located on the hard disk and follow the on-screen instructions. After installing it, run this VLC media player. In a horizontal menu "File" click on "Open" and the following window will open.



Type the name of video file in the "Open" field, check the "Stream/Save" option and click the "Settings" button. The "Stream output" window will open:

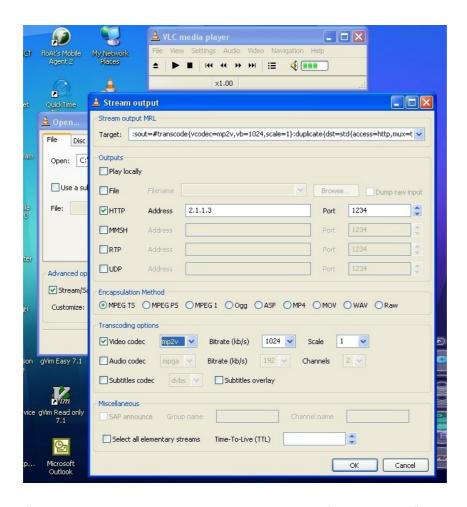

Check the "HTTP" option in a Outputs column, type an IP address of the PC in the "Address" field and a figure port in the "port" field.

Note: If you want to run more videos on this PC, you have to run the VLC media player for each video and every media player has to have a different figure of the port but the IP address will be the same.

Select the MPGTS or MPEGPS option in the "Encapsulation method" row. Check the "Video codec" option and select mp2v. In the field "Bitrate kb/s" set value of 1024 or higher.

 
The Bitrate is the number of kbits that are conveyed or processed per second. The higher is the number, the higher is the quality of the projected image. For streaming of desktop we recommend the bitrate of 8192. Click the "OK" button and confirm the "Open" window.


The VLC media player is now ready for playing up the video sequences.




PC Desktop streaming.

The desktop streaming enables you to sent your presentation directly to the DigitalSpot 5000 DT via an ethernet network. You do not need extra cables for connecting video inputs of the DigitalSpot 5000 DT with your PC. A different setting of VLC media player for streaming of the PC desktop is required. Type the following line in the "Customize" field of the Open window:



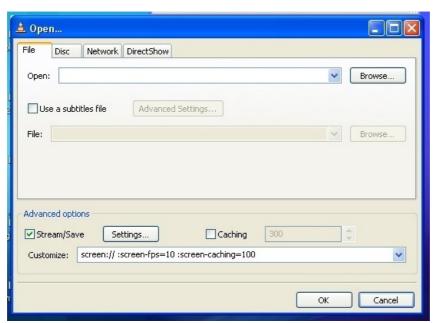

The Stream output window has the same setting like for video streaming except the field "Bitrate (kb/s)" which should be set at the value of 8192.

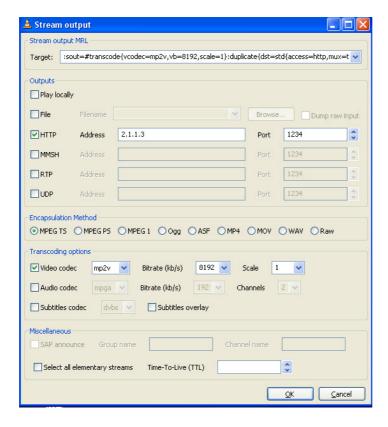


Important: The Playback speed channel at corresponding gobo layer should be set at a DMX value of 150-200.

Control PC (light console)

Type the IP address of the DigitalSpot 5000 DT which is to project data from a remote streaming video source in your WWW browser to run the Remote Control program.

Select the option "Remote Content" and the following window will open:

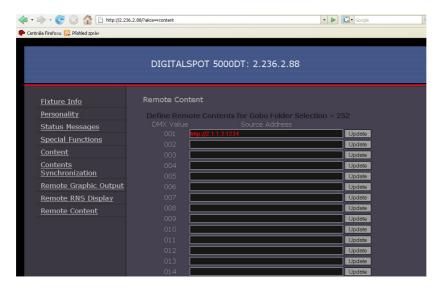

Type in the "source Address" field the IP address and the port number of the streaming source (in our case it is a PC) in this format: http://2.x.x.x:port number e.g. http://2.1.1.3:1234 and save it by clicking the "Update" button. This way defined streaming source is assigned to a DMX value of 1 at the channel *Gobo selection*.

You can define another videos from the same streaming source - the IP addresses will be the same for all videos only the port numbers have to be different.

After specifying all streaming sources close the "Remote Content" window.

To run a video processing on the fixture


On The DigitalSpot 5000 DT which is to project video data from a streaming video source, set the channel **Gobo folder selection** at value of 252 and on the following channel "Gobo selection" set a DMX value which responds to the streaming video source defined in the "Remote Content" window. The streaming video processing starts running with a delay of cca 10 seconds.

Example for gobo/video layer 1:

Channel	Value	Function	Type of control
23/24/49	0-20 21-240 241-250 251 252 253-255	Gobo Folder selection Factory folders User folders Reserved Live input (grab. card)-see channel 24/25/50 Streaming from remote source Reserved	step step step step
24/25/50	0 1 - 255 0 1-20	Gobo selection White 255 Gobos/videos (one by one) If Live input (251 DMX) is selected on channel 23/24/49: White screen Video composite input-PAL system :	step step step step

Fixture linkage:

DigitalSpot 5000 DT

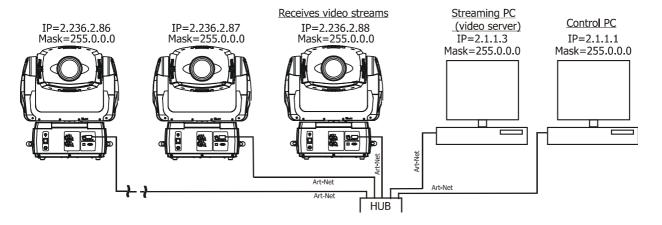

${\bf 28. \ Technical \ specifications}$

Electrical specifications

Input voltage range: 100-120V or 200-240V AC, 50/60 Hz

Fuse: T 6.3 A

Power consumption: 800 VA

Projector Specifications

Model:XP56L/XP57L

Light output:5,500 ANSI lumens

Lamp: POA-LMP81 for projector XP56L

POA-LMP101 for projector XP57L

Aspect ratio: 4:3

Panel resolution:1,024 x 768 dots

Hardware

MSI 945GM3 motherboard 3 GHz Intel LGA775 Pentium 4 processor 1GB RAM Graphics card nVidia 7600 GT Capture card WinFast VC 100XP Hard disk Western Digital 80 GB Gigabit Ethernet

Operation system

Linux OS

Graphic engine

2 Digital Gobo Layers for Image and Video Control

Layer Media Control Modes (Copy, Add, Subtract, Multi, Minimum and Maximum)

Banner Effects creating action scripts for Images or Videos

Graphic engine supports a combined total of more than 60,000 original and user-created videos/gobos usable on all gobo layers

Digital Iris effect + 160 masking effects

Full Key-Stone correction

Digital strobe effect

CMY Image and Video Colour Mixing and CTC (Colour Temperature Correction)

2 independent effect channels on each gobo layer with more than one hundred of effects

Huge amount of Default Images/Videos

Import of User Images or Videos

Supported Image Formats: JPG, TGA, PNG, GIF, PCX, PNM, XPM and LBM (Max 4096x4096 pixel)

Supported Video Formats: MPEG1, MPEG2

Effect video synchronization

Preview of projecting output through web interface Picture merging effect in the field up to 64 segments

Projection on to cylindrical/spherical surfaces and angular screens

Video processing on all gobo layers from remote streaming video server

Electromechanical Effects

Zoom

Focus

Mechanical iris

Control

5" TFT LCD display & Robe navigation system

Web access for total control of fixture (user library management)

Media Content Synchronization in web interface

103 control channels max.

Pan/Tilt

Pan movement range: 530°
Tilt movement range: 280°
16 bit movement resolution
Controllable speed of Pan/Tilt movement
Automatic Pan/Tilt position correction
Built-in Pan/Tilt macro effects

Connections

video inputs: Data projector: 1 x S-Video (Mini Din 4 pin)

1 x VGA (Mini D-sub 15 pin)

Graphic Engine:

1 xS-Video (Mini Din 4 pin) 1 x Composite video (RCA)

DMX data in/out: Locking 3-pin and 5-pin XLRs

ArtNet: RJ 45 (Neutrik Ethercon)

AC power input: 1.3 m power cord without plug

2 x USB 2.0 (series A)

Environmental Specifications

Operating temperature range: 0° - 35°C Maximum housing temperature: 45°C

Rigging

Mounting points: 4 pairs of ¼-turn locks 2 x Omega bracket with ¼-turn quick locks Safety chain/cord attachment point

Weight


45 kg

Accessories

Omega holder (No.99010420).....2 pieces USB 2.0 flash drive with a System recovery utility......1 piece

Dimensions (mm)

DigitalSpot 5000 DT

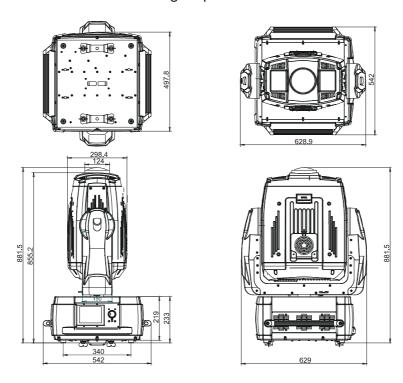

Weight 45 kg

29. Error and information messages

The warning icon (triangle) on the bottom-right side of the fixture's screen indicates some error or information message which appears on the screen by pressing the [ESC] button.

Pan Error

The message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC3 on the PCB in the fixture base. The yoke is not located in the default position after the reset of the fixture.

Tilt Error

The message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC3 on the PCB in the fixture base. The head is not located in the default position after the reset of the fixture.

Focus Error

The message will appear after the reset of the fixture if the focus module's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC1 on the PCB in the fixture head. The focus is not located in the default position after the reset of the fixture.

Zoom Error

The message will appear after the reset of the fixture if the zoom's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC1 on the PCB in the fixture head. The zoom is not located in the default position after the reset of the fixture.

Please Clean Air Filters

The message warns you that the time interval adjusted in the menu item Time To Cleanup Filters in the Service menu has expired and you should clean fixture's air filters.

Please Update HW Processors in Menu "Special Functions"

Run update of the hardware functions - see chapter "Special functions".

Dataprojector Temp. Read Error

System message from dataprojector.

Dataprojector Power Failure

System message from dataprojector.

Dataprojector Abnormal Temperature

System message from dataprojector.

Dataprojector Lamp Failure

System message from dataprojector.

DMX Address Is Over Limit

The DMX start address is set to value that does not make possible receiving all DMX channels.

USB Communication Failure

The message signalizes problem with communication between PC motherboard and the motor driver board.


Network Communication Failure

The message signalizes problem with Ethernet interface on PC motherboard.

30. Maintenance

30.1 Replacing the projector

If you need to take out the data projector, disconnect the DigitalSpot 5000 DT from the mains. Remove all plastic covers of the head by loosening the quarter-turn fasteners (1). Disconnect cables from two motors (3) and two sensors next to the projector objective. Disconnect all cables from the projector's rear panel and unscrew the 6 fastening screw (2) (three screws per side). Carefully pull out the projector (5) with chassis (4).

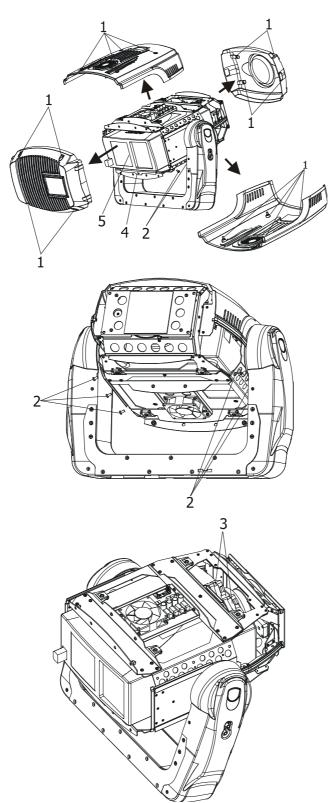


30.2 Replacing the air filters

Important! Check the air filters periodically and clean before they become clogged!

Clean the air filters with a vacuum cleaner or you can wash them and put back dry.


Replacing air filters in the fixture head.

- 1) Disconnect the fixture from power.
- 2) Raise up the filter cover (fixed by two magnets) on the head cover.
- 3) Pull the air filter out.
- 4) Clean or replace the air filter.
- 5) Snap the filter cover back to the head cover.
- 6) Reset item "Time To Cleanup Filters" in the "Service menu

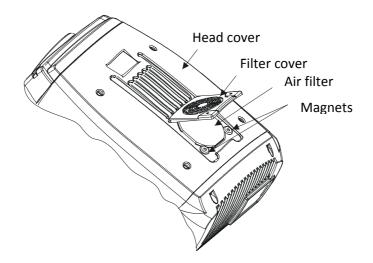

Replacing the air filter in the fixture base.

- 1) Disconnect the fixture from power.
- 2) Remove the side cover by loosening the 4 quarter-turn fasteners.
- 3) Pull the air filter out.
- 4) Clean or replace the air filter.
- 5) Put the side cover back.
- 6) Reset item "Time To Cleanup Filters" in the "Service menu".

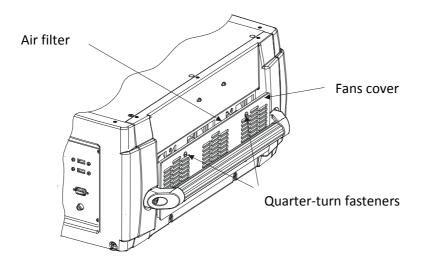

30.3 Replacing the fuse

Only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, turn the power off and unplug the mains lead.

Procedure:

- 1) Unscrew the fuse holder on the rear panel of the base with a fitting screwdriver from the housing (anti clockwise).
- 2) Remove the old fuse from the fuse holder.
- 3) Install the new fuse in the fuse holder.
- 4) Replace the fuse holder in the housing and fix it.

30.4 System restore

You can perform a system restore on the DigitalSpot 5000 DT with your System Restore USB flash drive.

Warning.

The system restore replaces all fixture settings and the Media folder content.

This action return the device to a factory state.

For a system restore, you will need:

- the USB flash drive with a System restore utility (part of Digital 5000 DT delivery)
- the USB keyboard

Use the following steps to perform a system restore:

- **1**. Plug the USB flash drive with System restore utility and the USB keyboard into two external USB ports on the DigitalSpot 5000 DT.
- 2. Power on the DigitalSpot 5000 DT. When the fixture boots, press Delete key on the keyboard to enter the fixture's computer SETUP and set the boot from USB drive (Path: "Advanced Bios Features" --- > "1st boot device"--- > "[USB]).
- **3.** Save this setting and exit SETUP. The fixture continues booting, wait until you see a full-screen menu titled:

Image Manager for ROBE Digital Products

Options:

Write "rescue" for enter to Main Menu

4. Type the word **rescue** on the keyboard and the following screen will appear:

Options:

Restore From Backup

Restart

- **5**. Select option "Restore From Backup" to start recovery process This process will take cca 5 minutes.
- **6**. Select option "Restart" to restart the fixture. After a few minutes you may remove all your external USB devices. Now the fixture is in a factory state and you should perform update (if required) of graphical software, HW processors and media content to the current state.

30.5 Cleaning

Turn the power off and disconnect the fixture from the mains. before starting cleaning procedure.

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DigitalSpot 5000 DT

DANGER! Disconnect from the mains before starting any cleaning and maintenance work

The front covering glasses will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light output very quickly.

The cooling fans should be cleaned monthly.

The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

More complicated maintenance and service operations are only to be carried out by authorized dealers.

Cleaning a projection lens of the projector.

Apply a non-abrasive camera lens cleaner to a soft, dry cleaning cloth. Avoid using an excessive amount of cleaner. Abrasive cleaners, solvents or other harsh chemicals might scratch a surface. Lightly wipe a cleaning cloth over projection lens.

2 2 2 2 2 Pan Fine	
3.8	
3.8	control
	Control
2 2 2 2 Pan Fine	
0-255	rtional
3 3 3 3 7 Tilt	
### 10-255 Till movement by 280° proportion of till movement till moveme	rtional
4 4 4 4 9 Fine control of tilt movement propo 5 5 5 5 5 Pan/Tilt speed,Pan/Tilt time 0 Max.speed (tracking mode) 1-255 Speed from max. to min.(vector mode) 1-255 Speed from max. to min.(vector mode) 2 P./T. time-set Time Mode in menu: Pan/Tilt Mode 1-255 Time from 0.1s to 25.5s 5 6 6 6 6 6 Pan/Tilt macro selection 10-31 Reserved 10-31 Reserved 10-31 Reserved 10-49 Figure of circle (from small to large) 10-64-95 Figure of horizontal eight (from small to large) 10-19 Figure of vertical eight (from small to large) 10-19 Figure of reactangle (from small to large) 10-19 Figure of triangle (from small to large) 10-223 Figure of star (from small to large) 10-2-223 Figure of star (from small to large) 10-2-225 Figure of star (from small to large) 10-2-255 Figure of star (from small to large) 10-2-255 Figure of cross (from small to large) 10-2-255 Figure of cross (from small to large) 10-2-255 Figure of star (from small to large) 10-2-255 Figure of cross (from small to large) 10-2-255 Figure of cross (from small to large) 10-2-25 Figure of cross (from small to large) 10-2-2-2 Figure of cross (from small to large) 10-2-2-2 Figure of cross (from small to large) 10-	
5 5 5 5	rtional
S S S S Pan/Tilt speed, Pan/Tilt time St Daw. speed (tracking mode) St P./T. speed-set Speed Mode in menu: Pan/Tilt Mode Speed from max. to min. (vector mode) St P./T. time-set Time Mode in menu: Pan/Tilt Mode 1-255 Time from 0.1s to 25.5s St St Daw. Daw. St Daw. St Daw. St Daw. Daw. Daw. St Daw. Daw. Daw. Daw. Daw. Daw. Daw. Daw.	
Max.speed (tracking mode)	rtional
P./T. speed-set Speed Mode in menu: Pan/Tilt Mode 1-255 Speed from max. to min.(vector mode) 1-255 Time from 0.1s to 25.5s 5 to Pan/Tilt macro selection 10-31 Reserved 32-63 Figure of circle (from small to large) 96-127 Figure of horizontal eight (from small to large) 128-159 Figure of vertical eight (from small to large) 190-128-159 Figure of triangle (from small to large) 1912-223 Figure of triangle (from small to large) 192-23 Figure of star (from small to large) 1912-25 Figure of triangle (from small to large) 192-25 Figure of triangle (from small to large) 1912-27 Figure of triangle (from small to large) 1912-28 Figure of triangle (from small to large) 1912-29 Figure of triangle (from small to large) 100 No macro 100	
1-255 Speed from max. to min.(vector mode) P./T. time-set Time Mode in menu: Pan/Tilt Mode 1-255 Time from 0.1s to 25.5s st 6 6 6 6 6 Pan/Tilt macro selection 0-9 Disabled pan/tilt macro st 10-31 Reserved 32-63 Figure of circle (from small to large) propo 64-95 Figure of horizontal eight (from small to large) propo 96-127 Figure of vertical eight (from small to large) propo 128-159 Figure of triangle (from small to large) propo 160-191 Figure of triangle (from small to large) propo 192-223 Figure of star (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed No macro 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro 130-255 Macro generation from slow to fast (backwards) propo Reserved To activate following function, hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function, hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden	ер
P./T. time-set Time Mode in menu: Pan/Tilt Mode 1-255 Time from 0.1s to 25.5s st 6 6 6 6 6 Pan/Tilt macro selection 0-9 Disabled pan/tilt macro st 10-31 Reserved 32-63 Figure of circle (from small to large) propo 64-95 Figure of horizontal eight (from small to large) propo 128-159 Figure of vertical eight (from small to large) propo 128-159 Figure of reactangle (from small to large) propo 160-191 Figure of triangle (from small to large) propo 192-223 Figure of star (from small to large) propo 192-225 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed No macro 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro 130-255 Macro generation from slow to fast (backwards) propo Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Corresponding menu items are temporarily overriden	
Time from 0.1s to 25.5s 1-255 Time from 0.1s to 25.5s	ер
6 6 6 6 Pan/Tilt macro selection 0-9 Disabled pan/tilt macro st 10-31 Reserved 32-63 Figure of circle (from small to large) propo 64-95 Figure of horizontal eight (from small to large) propo 128-159 Figure of vertical eight (from small to large) propo 128-159 Figure of reactangle (from small to large) propo 160-191 Figure of triangle (from small to large) propo 192-223 Figure of star (from small to large) propo 224-255 Figure of cross (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed 0 No macro 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 140-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
0-9 Disabled pan/tilt macro 10-31 Reserved 32-63 Figure of circle (from small to large) propo 64-95 Figure of horizontal eight (from small to large) propo 96-127 Figure of vertical eight (from small to large) propo 128-159 Figure of reactangle (from small to large) propo 160-191 Figure of triangle (from small to large) propo 192-223 Figure of star (from small to large) propo 224-255 Figure of cross (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 7 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Internal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	ер
10-31 Reserved 32-63 Figure of circle (from small to large) propo 64-95 Figure of horizontal eight (from small to large) propo 96-127 Figure of vertical eight (from small to large) propo 128-159 Figure of reactangle (from small to large) propo 160-191 Figure of triangle (from small to large) propo 192-223 Figure of star (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Hornal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
32-63 Figure of circle (from small to large) 64-95 Figure of horizontal eight (from small to large) 96-127 Figure of vertical eight (from small to large) 96-127 Figure of vertical eight (from small to large) 128-159 Figure of reactangle (from small to large) 160-191 Figure of triangle (from small to large) 192-223 Figure of star (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed No macro St 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro St 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	ер
Figure of horizontal eight (from small to large) 96-127 Figure of vertical eight (from small to large) 128-159 Figure of reactangle (from small to large) 160-191 Figure of triangle (from small to large) 192-223 Figure of star (from small to large) 192-223 Figure of star (from small to large) 224-255 Figure of cross (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Macro speed No macro st 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 1 o activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
96-127 Figure of vertical eight (from small to large) 128-159 Figure of reactangle (from small to large) 160-191 Figure of triangle (from small to large) 192-223 Figure of star (from small to large) 192-223 Figure of star (from small to large) 224-255 Figure of cross (from small to large) 7 7 7 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
128-159 Figure of reactangle (from small to large) 160-191 Figure of triangle (from small to large) 192-223 Figure of star (from small to large) 192-225 Figure of cross (from small to large) 224-255 Figure of cross (from small to large) 7 7 7 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
160-191 Figure of triangle (from small to large) 192-223 Figure of star (from small to large) 224-255 Figure of cross (from small to large) propo 224-255 Figure of cross (from small to large) propo 7 7 7 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Internal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
192-223 Figure of star (from small to large) 224-255 Figure of cross (from small to large) 7 7 7 Pan/Tilt macro speed 0 No macro 1-127 Macro generation from fast to slow (forwards) 128-129 No macro 130-255 Macro generation from slow to fast (backwards) Power/Special functions 0-39 Reserved To activate following function, hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function, hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
7 7 7 7 Pan/Tilt macro speed O No macro st 1-127 Macro generation from fast to slow (forwards) proposition from slow to fast (backwards) proposition from slow	
7 7 7 9 Pan/Tilt macro speed 0 No macro st 1-127 Macro generation from fast to slow (forwards) propo 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
0 No macro 1-127 Macro generation from fast to slow (forwards) 128-129 No macro st 130-255 Macro generation from slow to fast (backwards) propo 8 8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	rtionar
1-127 Macro generation from fast to slow (forwards) proposition from slow to fast (backwards) proposition from slo	en
128-129 No macro 130-255 Macro generation from slow to fast (backwards) 8 8 8 Power/Special functions 0-39 Reserved To activate following function, hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function, hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	-
130-255 Macro generation from slow to fast (backwards) Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	ер
8 8 8 Power/Special functions 0-39 Reserved To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	rtional
To activate following function,hold DMX value 3 sec. and mechanical iris must be closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
closed at least 3 sec. (channel 12 must be at 255 DMX). 40-44 Internal Hardware (PC) reset st 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
40-44 Internal Hardware (PC) reset 45-49 Reserved To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
45-49 Reserved To activate following function, hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX). Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	en
To activate following function,hold DMX value 3 sec. and digital iris must be closed at least 3 sec. (channel 75/76/80/28 must be at 255 DMX).Corresponding menu items are temporarily overriden 50-59 Pan/Tilt speed mode	CΡ
menu items are temporarily overriden 50-59 Pan/Tilt speed mode	
50-59 Pan/Tilt speed mode	
	ep ep
 	ep ep
	ep ep
	ep ep
	ep ep
	ep
	ep
	ep
8 8 8 120-129 Reserved	•

Proto	ocol ve	r./Cha	nnel	DMX	Appendix - Divix protocoi	Τ
3.8	4.6	5.4	6.2	Value	Function	Type of control
					To activate following function, hold DMX value 3 seconds	
					Lamp On	step
					Pan/Tilt reset	step
					Focus/Zoom reset	step
					Analog iris reset	step
					Total reset	step
					Graphic engine reset/software update executing	step
					Reserved	эсер
					Lamp Off	step
					Lamp Off,Fixture Off (hold DMX value 5 seconds)	step
					Reserved	эсер
9	9	9	9		Video input selection	
				0-63	Internal graphic engine	step
					External VGA to projector	step
					External S-video to projector	step
					Reserved	эсер
10	10	10	10	132 233	Zoom	
10	10	10	10	0-255	Zoom from min. to max. (128-default)	proportional
11	11	11	11	0 255	Focus	proportional
11	11	11	11	0-255	Continuous adjustment from far to near (128-default)	proportional
12	12	12	12	0-233	Mechanical Iris	ргорогионаг
12	12	12	12	0	Open	ston
					From max. diameter to min. diameter	step proportional
				1-255		proportional
12	12	12	12		Common digital effects for all gobo layers KeyStone Top Left X	T
13	13	13	13		Move top left corner X value to center (0-default)	nunnamtianal
1.0	1.1	1.1	1.0		·	proportional
14	14	14	14		KeyStone Top Left Y	
45	45	45	45		Move top left corner Y value to center (0-default)	proportional
15	15	15	15		KeyStone Top Right X	
4.6	46	4.6	4.5		Move top right corner X value to center (0-default)	proportional
16	16	16	16		KeyStone Top Right Y	
					Move top right corner Y value to center (0-default)	proportional
17	17	17	17		KeyStoneBottom Right X	
					Move bottom right corner X value to center (0-default)	proportional
18	18	18	18		KeyStone Bottom Right Y	
					Move bottom right corner Y value to center (0-default)	proportional
19	19	19	19		KeyStone Bottom Left X	
					Move bottom left corner X value to center (0-default)	proportional
20	20	20	20		KeyStone Bottom Left Y	
				0-255	Move bottom left corner Y value to center (0-default)	proportional
21	21	_			Reserved	
_	_	21	21		KeyStone X-ratio	
					Ratio control from left to center	proportional
				128	Center (default)	step
				129-255	Ratio control from center to right	proportional
_	_	22	22		KeyStone Y-ratio	
				0-127	Ratio control from bottom to center	proportional
				128	Center (default)	step
					Center (default) Ratio control from center to top	step proportional

Prote	ocol ve	r./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
5.8	7.0	3.4	J.2	0-255	Cyan continuously (0-white,255-full cyan)	proportional
73	73	76	24	0-233	Magenta	proportional
/3	/3	76	24	0-255	Magenta continuously (0-white,255-full magenta)	proportional
74	74	77	25	0-233	Yellow	proportional
/4	/4	//	25	0-255	Yellow continuously (0-white,255-full yellow)	proportional
	75	78	26	0-233	CTF	proportional
_	/5	/8	26	0	Without CTF	ston
				1	14000 K	step
				2	13000 K	step
				3	12500 K	step
				4	12000 K	step
				5	11500 K	step step
				6	11000 K	•
				7	10500 K 10500 K	step step
				8	10000 K	step
				9	9500 K	,
				10	9000 K	step step
				11	8600 K	step
				12	8575 K	step
				13	8550 K	step
					·	- 3ιερ ·
				255	2500 K	step
		79	27	255	Digital Iris-type selection	зіср
_	_	75		0	Circular ,outside>in,sharp edge	step
				1	Circular ,outside>in,fuzzy edge 1	step
				2	Circular ,outside>in,fuzzy edge 2	step
				3	Circular ,outside>in,fuzzy edge 3	step
				4	Circular ,outside>in,fuzzy edge 4 (maximum)	step
				5	Circular ,inside>out,sharp edge	step
				6	Circular ,inside>out,fuzzy edge 1	step
				7	Circular ,inside>out,fuzzy edge 2	step
				8	Circular ,inside>out,fuzzy edge 3	step
				9	Circular ,inside>out,fuzzy edge 4 (maximum)	step
				10	Horizontal ellipse ,outside>in,sharp edge	step
				11	Horizontal ellipse ,outside>in,fuzzy edge 1	step
				12	Horizontal ellipse ,outside>in,fuzzy edge 2	step
				13	Horizontal ellipse ,outside>in,fuzzy edge 3	step
				14	Horizontal ellipse ,outside>in,fuzzy edge 4 (maximum)	step
				15	Horizontal ellipse ,inside>out,sharp edge	step
				16	Horizontal ellipse ,inside>out,fuzzy edge 1	step
				17	Horizontal ellipse ,inside>out,fuzzy edge 2	step
				18	Horizontal ellipse ,inside>out,fuzzy edge 3	step
				19	Horizontal ellipse ,inside>out,fuzzy edge 4 (maximum)	step
				20	Vertical ellipse ,outside>in,sharp edge	step
				21	Vertical ellipse ,outside>in,fuzzy edge 1	step
				22	Vertical ellipse ,outside>in,fuzzy edge 2	step
				23	Vertical ellipse ,outside>in,fuzzy edge 3	step
				24	Vertical ellipse ,outside>in,fuzzy edge 4 (maximum)	step
				25	Vertical ellipse ,inside>out,sharp edge	step
				26	Vertical ellipse ,inside>out,fuzzy edge 1	step

Protocol ver./Channel				DMX	Appendix - DMX protocol	T
3.8	4.6	5.4	6.2	Value	Function	Type of control
_	_	79	27	27	Vertical ellipse ,inside>out,fuzzy edge 2	step
				27	Vertical ellipse ,inside>out,fuzzy edge 3	step
				29	Vertical ellipse ,inside>out,fuzzy edge 4 (maximum)	step
				30	Clockwise wipe,sharp edge	step
				31	Clockwise wipe,fuzzy edge 1	step
				32	Clockwise wipe,fuzzy edge 2	step
				33	Clockwise wipe,fuzzy edge 3	step
				34	Clockwise wipe,fuzzy edge 4 (maximum)	step
				35	Anticlockwise wipe,sharp edge	step
				36	Anticlockwise wipe, fuzzy edge 1	step
				37	Anticlockwise wipe,fuzzy edge 2	step
				38	Anticlockwise wipe,fuzzy edge 3	step
				39	Anticlockwise wipe, fuzzy edge 4 (maximum)	step
				40	Wedge wipe ,top>down, sharp edge	step
				41	Wedge wipe, top>down, fuzzy edge 1	step
				42	Wedge wipe ,top>down, fuzzy edge 2	step
				43	Wedge wipe, top>down, fuzzy edge 3	step
				44	Wedge wipe ,top>down, fuzzy edge 4 (maximum)	step
				45	Wedge wipe ,bottom>up, sharp edge	step
				46	Wedge wipe ,bottom>up, fuzzy edge 1	step
				47	Wedge wipe ,bottom>up, fuzzy edge 2	step
				48	Wedge wipe,bottom>up, fuzzy edge 3	step
				49	Wedge wipe,bottom>up, fuzzy edge 4 (maximum)	step
				50	Radial wipe ,left>bottom,sharp edge	step
				51	Radial wipe ,left>bottom,fuzzy edge 1	step
				52	Radial wipe ,left>bottom,fuzzy edge 2	step
				53	Radial wipe ,left>bottom,fuzzy edge 3	step
				54	Radial wipe ,left>bottom,fuzzy edge 4 (maximum)	step
				55	Radial wipe ,bottom>left,sharp edge	step
				56	Radial wipe ,bottom>left,fuzzy edge 1	step
				57	Radial wipe ,bottom>left,fuzzy edge 2	step
				58	Radial wipe ,bottom>left,fuzzy edge 3	step
				59	Radial wipe ,bottom>left,fuzzy edge 4 (maximum)	step
				60	Radial wipe ,top>left,sharp edge	step
				61	Radial wipe ,top>left,fuzzy edge 1	step
				62	Radial wipe ,top>left,fuzzy edge 2	step
				63	Radial wipe ,top>left,fuzzy edge 3	step
				64	Radial wipe ,top>left,fuzzy edge 4 (maximum)	step
				65	Radial wipe ,left>top,sharp edge	step
				66	Radial wipe ,left>top,fuzzy edge 1	step
				67	Radial wipe ,left>top,fuzzy edge 2	step
				68	Radial wipe ,left>top,fuzzy edge 3	step
				69	Radial wipe ,left>top,fuzzy edge 4 (maximum)	step
				70	Vertical barn-doors,outside>in,sharp edge	step
				71	Vertical barn-doors,outside>in,fuzzy edge 1	step
				72	Vertical barn-doors,outside>in,fuzzy edge 2	step
				73	Vertical barn-doors,outside>in,fuzzy edge 3	step
				74	Vertical barn-doors,outside>in,fuzzy edge 4 (maximum)	step
				75	Vertical barn-doors,inside>out,sharp edge	step
				76	Vertical barn-doors,inside>out,fuzzy edge 1	step
_		79	27	77	Vertical barn-doors,inside>out,fuzzy edge 2	step

		:[./CII-	ınneı •	DMX		
3.8	4.6	r./Cha	6.2	Value	Function	Type of control
2.5	7.0	J. T	J.2	78	Vertical barn-doors,inside>out,fuzzy edge 3	step
				79	Vertical barn-doors,inside>out,fuzzy edge 4 (maximum)	step
				80	Horizontal barn-doors,outside>in,sharp edge	step
				81	Horizontal barn-doors,outside>in,fuzzy edge 1	step
				82	Horizontal barn-doors,outside>in,fuzzy edge 2	step
				83	Horizontal barn-doors,outside>in,fuzzy edge 3	step
				84	Horizontal barn-doors,outside>in,fuzzy edge 4 (maximum)	step
				85	Horizontal barn-doors,inside>out,sharp edge	step
				86	Horizontal barn-doors,inside>out,fuzzy edge 1	step
				87	Horizontal barn-doors,inside>out,fuzzy edge 2	step
				88	Horizontal barn-doors,inside>out,fuzzy edge 3	step
				89	Horizontal barn-doors,inside>out,fuzzy edge 4 (maximum)	step
				90	Horizontal one-way band wipe,top left>bottom right	step
				91	Horizontal one-way band wipe, bottom right>top left	step
				92	Horizontal one-way band wipe,top right>bottom left	step
				93	Horizontal one-way band wipe, bottom left>top right	step
				94	Horizontal two-way band wipe, top left>bottom right	step
				95	Horizontal two-way band wipe, bottom right>top left	step
				96	Horizontal two-way band wipe,top right>bottom left	step
				97	Horizontal two-way band wipe, bottom left>top right	step
				98	Vertical one-way band wipe,top left>bottom right	step
				99	Vertical one-way band wipe, bottom right>top left	step
				100	Vertical one-way band wipe, bottom left>top right	step
				101	Vertical one-way band wipe, socion left Vertical one-way band wipe, top right>bottom left	step
				102	Vertical two-way band wipe,top right>bottom left	step
				103	Vertical two-way band wipe, bottom right>top left	step
				104	Vertical two-way band wipe, bottom left>top right	step
				105	Vertical two-way band wipe,top right>bottom left	step
				106	Horizontal bands 4x,top>bottom	step
				107	Horizontal bands 4x,bottom>top	step
				108	Vertical bands 4x,left>right	step
				109	Vertical bands 4x,right>left	step
				110	Horizontal bands 8x,top>bottom	step
				111	Horizontal bands 8x,bottom>top	step
				112	Vertical bands 8x,left>right	step
				113	Vertical bands 8x,right>left	step
				114	Horizontal bands 16x,top>bottom	step
				115	Horizontal bands 16x,bottom>top	step
				116	Vertical bands 16x,left>right	step
				117	Vertical bands 16x,right>left	step
				118	Horizontal bands 32x,top>bottom	step
				119	Horizontal bands 32x,bottom>top	step
				120	Vertical bands 32x,left>right	step
				121	Vertical bands 32x,right>left	step
				122	Horizontal crossing 4x	step
				123	Horizontal crossing 4x,inverse	step
				124	Vertical crossing 4x	step
				125	Vertical crossing 4x,inverse	step
				126	Horizontal crossing 8x	step
		79	27	127	Horizontal crossing 8x,inverse	step
_				128	Vertical crossing 8x	step

Prot	ocol ve	r./Cha	nnel	DMX	Αρμετιαίχ - Οίνιλ βιοτοτοί	
3.8	4.6	5.4	6.2	Value	Function	Type of control
				129	Vertical crossing 8x,inverse	step
				130	Horizontal crossing 16x	step
				131	Horizontal crossing 16x,inverse	step
				132	Vertical crossing 16x	step
				133	Vertical crossing 16x,inverse	step
				134	Checker wipe 3x4, left>right	step
				135	Checker wipe 3x4, right>left	step
				136	Checker wipe 4x4, left>right	step
				137	Checker wipe 4x4, right>left	step
				138	Checker wipe 5x8, left>right	step
				139	Checker wipe 5x8, right>left	step
				140	Checker wipe 9x8, left>right	step
				141	Checker wipe 9x8, right>left	step
				142	Checker wipe 9x16, left>right	step
				143	Checker wipe 9x16, right>left	step
				144	Checker wipe 10x32, left>right	step
				145	Checker wipe 10x32, right>left	step
				146	2 diagonal curtains, bottom left>center< top right	step
				147	2 diagonal curtains, top left>center< bottom right	step
				148	Grid wipe 8x8,bottom right>top left	step
				149	Grid wipe 8x8,bottom right>top left,inverse	step
				150	Grid wipe 8x8,top right>bottom left	step
				151	Grid wipe 8x8,top right>bottom left,inverse	step
				152	Grid wipe 16x16,bottom right>top left	step
				153	Grid wipe 16x16,bottom right>top left,inverse	step
				154	Grid wipe 16x16,top right>bottom left	step
				155	Grid wipe 16x16,top right>bottom left,inverse	step
				156	Grid wipe 32x32,bottom right>top left	step
				157	Grid wipe 32x32,bottom right>top left,inverse	step
				158	Grid wipe 32x32,top right>bottom left	step
				159	Grid wipe 32x32,top right>bottom left,inverse	step
				160	4 sliding triangles	step
				161-169		эсер
				170	Rectangular ,outside>in,sharp edge	step
				171	Rectangular ,outside>in,fuzzy edge 1	step
				172	Rectangular, outside>in,fuzzy edge 2	step
				173	Rectangular , outside>in, fuzzy edge 3	step
				174	Rectangular ,outside>in,fuzzy edge 4 (maximum)	step
				175	Rectangular ,inside>out,sharp edge	step
				176	Rectangular ,inside>out,fuzzy edge 1	step
				177	Rectangular ,inside>out,fuzzy edge 2	step
				178	Rectangular ,inside>out,fuzzy edge 3	step
				179	Rectangular ,inside>out,fuzzy edge 4 (maximum)	step
				180-255		step
75	76	80	28		Digital Iris	300p
				0	Open iris	step
				1-254	From max. diameter to min. diameter	proportional
				255	Closed iris	step
76	77	81	29		Digital Iris fine	
, 5		31		0-255	Iris fine	proportional
				5 255		p. sportional

Prote	ocol ve	r./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
77	78	82	30		Digital Strobe	
				0 - 30	Open light output	step
					Digital Strobe-effect from slow to fast	proportional
					Open light output	step
					Digital random strobe-effect from slow to fast	proportional
					Open light output	step
					Iris displays current gobo from gobo layer 1	step
					Iris displays current gobo from gobo layer 2	step
					Reserved	
					Banner displays current gobo from gobo layer 1	step
					Banner displays current gobo from gobo layer 2	step
					Reserved	
				245-255	Digital strobe closed	step
78	79	83	31		Banner left positioning	·
				0-255	Positioning from left to right (0-default)	proportional
79	80	84	32		Banner left rotation	
				0-255	Rotation +/- 45° (128-default)	proportional
80	81	85	33		Banner right positioning	
				0-255	Positioning from right to left (0-default)	proportional
81	82	86	34		Banner right rotation	proportion.
01	0_		34	0-255	Rotation +/- 45° (128-default)	proportional
82	83	87	35	0 233	Banner top positioning	ргорогиона
02	03	0,	33	0-255	Positioning from top to bottom (0-default)	proportional
83	84	88	36	0 233	Banner top rotation	proportional
03	04	00	30	0-255	Rotation +/- 45° (128-default)	proportional
84	85	89	37	0 233	Banner bottom positioning	ргорогиона
04	03	05	3,	0-255	Positioning from bottom to top (0-default)	proportional
85	86	90	38	0 233	Banner bottom rotation	ргорогиона
03	00	30	30	0-255	Rotation +/- 45° (128-default)	proportional
86	87	91	39	0 233	All Banners rotation	proportional
	0,	J 1	33	0-255	Rotation +/- 45° (128-default)	proportional
		92	40	0 233	Global Effect 1	ргорогиона
_	_	<i>J</i> 2	70	0	No effect	step
				0	Picture merging -selection of width of overlapping edges:	жер
				1	Width of overlapping edges -10 %	P1, P2, P3
				2	Width of overlapping edges - 0 %	P1, P2, P3
				3	Width of overlapping edges - 15 %	P1, P2, P3
				4	Width of overlapping edges - 20 %	P1, P2, P3
				5	Width of overlapping edges - 25 %	P1, P2, P3
				6	Width of overlapping edges - 30 %	P1, P2, P3
				7	Width of overlapping edges - 35 %	P1, P2, P3
				8-10	Reserved	,,
					Picture merging -selection of width of overlapping edges for pre-	
					cut content mode:	
				11	Width of overlapping edges -10 %	P1, P2, P3
				12	Width of overlapping edges - 0 %	P1, P2, P3
				13	Width of overlapping edges - 15 %	P1, P2, P3
				14	Width of overlapping edges - 20 %	P1, P2, P3
				15	Width of overlapping edges - 25 %	P1, P2, P3
				16	Width of overlapping edges - 30 %	P1, P2, P3

Prot	ocol ve	r./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
				17	Width of overlapping edges - 35 %	P1, P2, P3
					P1- field configuration, P2- segment selection, P3- segment edge	,
				18-255	Reserved	
		93	41		Global effect 1- Parameter 1	
_	_			0	None	
					Image field configuration for Picture merging	
				1-109	Non-mirrored configurations	step
				110-127	Reserved	-
				128-163	Horizontally mirrored configurations	step
				164-199	Vertically mirrored configurations	step
				200-235	Horizontally and verticaly mirrored configurations	step
				236-255	Reserved	-
		94	42		Global effect 1- Parameter 2	
_	_			0-255	Segment selection for Pixture merging	step
		95	43		Global effect 1- Parameter 3	
	_			0-170	Segment edge display for Pixture merging	step
					Showing aspect ratio of image projected on the wall	step
					Reserved	'
			44		Global Effect 2	
				0	None	P1, P2, P3
				1	Vertical inside corner mapping	P1, P2, P3
				2	Vertical outside corner mapping	P1, P2, P3
				3	Horizontal inside corner mapping	P1, P2, P3
				4	Horizontal outside corner mapping	P1, P2, P3
				5	Vertical convex cylinder mapping	P1, P2, P3
				6	Vertical concave cylinder mapping	P1, P2, P3
				7	Horizontal convex cylinder mapping	P1, P2, P3
				8	Horizontal concave cylinder mapping	P1, P2, P3
				9	Ortographic sphere mapping	P1, P2, P3
				10	Rectangle on circle (sphere) mapping *	P1, P2, P3
				11	Square on circle (sphere) mapping *	P1, P2, P3
				12	Rectangle on circle (sphere) mapping with picture merging	step
				13-19	Reserved	
				20	Picture merging - R/G/B gamma adjustment in blended edges	step
					P 1- red, P 2 - green, P 3- blue	-
				21-255	Reserved	
_		_	45		Global Effect 2 - Parameter 1	
				0-255	Function depends on selected Global Effect 2	depends on offect
			46		Global Effect 2 - Parameter 2	
				0-255	Function depends on selected Global Effect 2	depends on offect
			47		Global Effect 2 - Parameter 3	
				0-255	Function depends on selected Global Effect 2	depends on offect
Gobo Layer 1						-
22	22	23	48		Dimmer	
				0-255	Dimmer intensity from 0% to 100% (255-default)	proportional
23	23	24	49		Gobo Folder selection	,
				0-20	Factory folders	step
					User folders	step
					Reserved	1°
				251	Live input (grab. card)-see channel 24/25/50	step
						•

Prote	ocol ve	r./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
3.0	7.0	3.4	0.2	252	Streaming from remote sources	ston
				253-255	~	step
24	24	25	50	233 233	Gobo selection	
27	24	23	30	0	White	step
				1-255	255 Gobos (one by one)	step
				1 233	If Live input (251 DMX) is selected on channel 23/24/49:	зіср
				0	White screen	step
				1-20	Video composite input-PAL system	step
				21-40	SVIDEO input- PAL system	step
				21-60	Video composite input-NTSC system	step
				61-80	SVIDEO input- NTSC system	step
				81-100	Video composite input-SECAM system	step
					SVIDEO input- SECAM system	step
				121-255		2001
25	25	26	51		In Frame High	
				0-255	Defines the beginning of a media file segment as a	proportional
					percentage of the movie length (0-default)	F PO. 0.01101
26	26	27	52		In Frame Low	
				0-255	Defines the beginning of a media file segment as a	proportional
				0 200	percentage of the movie length (0-default)	p. 0p0. c.oa.
27	27	28	53		Out Frame High	
				0-255	Defines the end of a media file segment as a percentage of	proportional
				0 200	the movie length (255-default)	p. 0p0. c.oa.
28	28	29	54		Out Frame Low	
				0-255	Defines the beginning of a media file segment as a	proportional
					percentage of the movie length (255-default)	, -,
29	29	30	55		Gobo control	
					Copy mode	
					Video stream 1:	
				0	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				1	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				2	Pause	step
				3	Play forward in continuous loop	step
				4	Play forward once and hold on the last frame	step
				5	No function	
				6	Scrub (Display) the selected In Frame	step
				7	Scrub (Display) the selected Out Frame	step
				8-9	Reserved	
					Video stream 2 (the same functionality as for Video stream 1):	
				10	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				11	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				12	Pause	step
				13	Play forward in continuous loop	step
				14	Play forward once and hold on the last frame	step
				15	No function	
				16	Scrub (Display) the selected In Frame	step
				17	Scrub (Display) the selected Out Frame	step
				18-19	Reserved	
					Addition mode	
					Video stream 1:	

Prote	ocol ve	r./Cha	nnel	DMX	Appendix - DIVIX protocol	T
3.8	4.6	5.4	6.2	Value	Function	Type of control
				20	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				21	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				22	Pause	step
				23	Play forward in continuous loop	step
				24	Play forward once and hold on the last frame	step
				25	No function	000
				26	Scrub (Display) the selected In Frame	step
				27	Scrub (Display) the selected Out Frame	step
				28-29	Reserved	333
					Video stream 2:	
				30-37	The same functionality as for Video stream 1	step
				38-39	Reserved	'
					Substraction mode_	
					Video stream 1:	
				40	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				41	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				42	Pause	step
29	29	30	55	43	Play forward in continuous loop	step
				44	Play forward once and hold on the last frame	step
				45	No function	
				46	Scrub (Display) the selected In Frame	step
				47	Scrub (Display) the selected Out Frame	step
				48-49	Reserved	
					Video stream 2:	
				50-57	The same functionality as for Video stream 1	step
				58-59	Reserved	
					Multiplication mode_	
					Video stream 1:	
				60	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				61	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				62	Pause	step
				63	Play forward in continuous loop	step
				64	Play forward once and hold on the last frame	step
				65	No function	
				66	Scrub (Display) the selected In Frame	step
				67	Scrub (Display) the selected Out Frame	step
				68-69	Reserved	
					Video stream 2:	
				70-77	The same functionality as for Video stream 1	step
				78-79	Reserved	
					Minimum mode	
					Video stream 1:	
				80	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				81	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				82	Pause	step
				83	Play forward in continuous loop	step
				84	Play forward once and hold on the last frame	step
				85	No function	
				86	Scrub (Display) the selected In Frame	step
				87	Scrub (Display) the selected Out Frame	step
				88-89	Reserved	

Prot	ocol ve	er./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
					Video stream 2:	
				90-97	The same functionality as for Video stream 1	
				98-99	Reserved	
					Maximum mode_	
					Video stream 1:	
				100	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				101	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				102	Pause	step
				103	Play forward in continuous loop	step
				104	Play forward once and hold on the last frame	step
				105	No function	3106
29	29	30	55	106	Scrub (Display) the selected In Frame	step
				107	Scrub (Display) the selected Out Frame	step
					Reserved	3.00
				100 103	Video stream 2:	
				110-117	The same functionality as for Video stream 1	step
					Reserved	эсер
30	30	31	56	110 200	Playback Speed	+
30	30	J	30	0	Normal Speed	step
				1-127	Slow speeds from slowest> normal	proportional
				128	Normal Speed	step
					Faster than Normal> Fastest	proportional
31	31	32	57	123 233	Gobo rotation and indexing	proportional
		<u> </u>	3,	0-63	Clockwise rotation from fast to slow	proportional
					Indexing	proportional
				128	No rotation-centre (default)	step
					Indexing	proportional
					Anticlockwise rotation from slow to fast	proportional
32	32	33	58		Gobo fine indexing (rotation)	properties
0_	<u> </u>		30	0-255	Fine indexing (rotation)	proportional
33	33	34	59		Gobo effect 1 Selection	
				0	No effect	
				1	Zoom sinus	P1-speed
				2	Zoom bump in fade out	P1-speed
				3	Zoom fade in bump out	P1-speed
				4	Reserved	, = spsss
				5	Zoom in fade	P1-speed
				6	Zoom out fade	P1-speed
				7	Scale xy sinus	P1-speed
				8	Reserved	
				9	Reserved	
				10	Reserved	
				11	XY pos. circle counter-clockwise	P1-speed
				12	XY pos. circle clockwise	P1-speed
				13	XY pos. scroll up	P1-speed
				14	XY pos. scroll down	P1-speed
				15	XY pos. scroll left	P1-speed
				16	XY pos.scroll right	P1-speed
				17	Right-left diag. down scroll	P1-speed
				18	Right-left diag. up scroll	P1-speed
					<u> </u>	-1

Proto	ocol ve	r./Cha	nnel	DMX	Appendix - DIVIX protocol	
3.8	4.6	5.4	6.2	Value	Function	Type of control
				19	Left-right diag. down scroll	P1-speed
				20	Left-right diag. up scroll	P1-speed
				21	X rotate	P1-speed
				22	Y rotate	P1-speed
				23	XY rotate	P1-speed
				24	XY inv. rotate	P1-speed
				25	X inv. y rotate	P1-speed
				26	Tile xy	P1-amount
				27	Tile xy	P1-speed
				28	XYZ rot. cube	P1-speed
				29	XYZ rot. sphere	P1-speed
				30	X rot. cylinder	P1-speed
				31	Y rot. cylinder	P1-speed
				32	Reserved	
33	33	34	59	33	Kaleidoscope	none
				34	Squeeze in	none
				35	Squeeze out	none
				36	Bend X	none
				37	Bend Y	none
				38	Tile frame	none
				39	Frame	none
				40	Plane Flip X	none
				41	Plane Flip Y	none
				42	Plane Flip XY	none
				43	Plane mirror X top	none
				44	Plane mirror X bottom	none
				45	Plane mirror Y left	none
				46	Plane mirror Y right	none
				47	Plane mirror XY segment 1	none
				48	Plane mirror XY segment 2 segment 1 segment 2	none
				49	Plane mirror XY segment 3	none
				50	Plane mirror XY segment 4 segment 3	none
				51	Plane tile 2x	none
				52	Plane tile 3x	none
				53	Plane tile 4x	none
				54	Plane tile 5x	none
				55	Plane cross tile 2x	none
				56	Plane cross tile 2x inverse	none
				57	Plane cross tile 3x	none
				58	Plane cross tile 3x inverse	none
				59	Plane cross tile 4x	none
				60	Plane cross tile 4x inverse	none
				61	Plane cross tile 5x	none
				62	Plane cross tile 5x inverse	none
				63	Plane cross tiler 5x	none
				64	Plane cross tiler 5x inverse	none
				65	Plane bar	none
				66	Plane bar inverse	none
				67	Plane bar left-righ	none
				68	Plane bar top-bottom	none
				69	Reserved Page 12	

Prote	ocol ve	r./Cha	nnel	DMX		<u> </u>
3.8	4.6	5.4	6.2	Value	Function	Type of control
				70	Reserved	
				71	Gobo disc	none
				72	Gobo disc Flip X	none
				73	Gobo disc Flip Y	none
				74	Gobo disc Flip XY	none
				75	Gobo disc mirror X	none
				76	Gobo disc mirror Y	none
				77	Gobo disc mirror XY	none
				78-79	Reserved	
				80	Plane mirror X top inverse	none
				81	Plane mirror X bottom inverse	none
				82	Plane mirror Y left inverse	none
				83	Plane mirror Y right inverse	none
33	33	34	59	84	Plane mirror XY inverse	none
33	33	J	55	85	Plane mirror X-inverse,Y	none
				86	Plane mirror X,Y-inverse	none
				87-99	Reserved	Hone
				90	Circular effect (Fish eye)	P1, P2, P3
				30	P1-character, P2-X ratio, P3-Y ratio	11,12,13
				91	Iris on layer	P1, P2, P3
				31	P1-size, P2-iris type, P3-texture mode	11,12,13
				92-99	Reserved	
				J 2 JJ	kaleidoscope - mode and mosaic segment selection:	
				100	Square -static mode	P1, P2, P3
				101	Square -dynamic mode	P1, P2, P3
				102	Right triangular - static mode	P1, P2, P3
				103	Right triangular - dynamic mode	P1, P2, P3
				104	Isosceles triangular - static mode	P1, P2, P3
				105	Isosceles triangular - dynamic mode	P1, P2, P3
				106	Triangular 1 - static mode	P1, P2, P3
				107	Triangular 1 -dynamic mode	P1, P2, P3
				108	Triangular 2 -static mode	P1, P2, P3
				109	Triangular 2 - dynamic mode	P1, P2, P3
					Stat. mode:P1-density, P2-content (coarse), P3-content (fine)	-,,
					Dyn. mode:P1-density, P2-size and pulsation, P3-movement	
				110	Centered kaleidoscope (rough)-static mode	P1, P2, P3
				111	Centered kaleidoscope (rough)-dynamic mode	P1, P2, P3
				112	Centered kaleidoscope (fine)-static mode	P1, P2, P3
				113	Centered kaleidoscope (fine)-dynamic mode	P1, P2, P3
					Stat. mode:P1-density, P2-content (coarse), P3-content (fine)	, , -
					Dyn. mode:P1-density, P2-size and pulsation, P3-movement	
				114-149	Reserved	
				150	Layer keystoning	P1,P2,P3
					P1-skewing in X, P2-skewing in Y, P3-squeezing/stretching in Y	, , -
				151-255		
34	34	35	60		Gobo effect 1-Parameter 1	
				0-255	Effect control	depends on effect
			61		Gobo effect 1-Parameter 2	
_	-	-	31	0-255	Effect control	depends on effect
			62	3 233	Gobo effect 1- Parameter 3	Separas on check
_	_	_	02		CONTRACT I GIGINATURE	<u> </u>

Prot	ocol ve	r./Cha	nnel	DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
				0-255	Effect control	depends on effect
35	35	36	63		Gobo effect 2 Selection	'
				0	No effect	
				1	Colour to black and white	P1-amount
				2	Colour to black and white inverse	P1-amount
				3	Black and white to black and white inverse	P1-amount
				4	Inversion	P1-amount
				5	Black Mask	P1-amount
				6	Black Mask inverse	P1-amount
				7	Contrast	P1-amount
				8	Brightness	P1-amount
				9	RGB to GBR	P1-amount
				10	RGB to BRG	P1-amount
				11	RGB to RBG	P1-amount
				12	Black and white to black and white inverse timed	P1-speed
				13	Colour to black and white timed	P1-speed
				14	Colour to inverse timed	P1-speed
				15	Cycle	P1-speed
				16	Cycle inverse	P1-speed
				17	Reserved	-
				18	Reserved	
				19	Colour Key	P1-amount
				20	Colour Key inverse	P1-amount
				21	Key Black	P1-amount
				22	Key Black inverse	P1-amount
				23	Key White	P1-amount
				24	Key White inverse	P1-amount
				25	White flash	P1-amount
				26	Black flash	P1-amount
				27	Alpha flash	P1-amount
				28	Invert flash	P1-amount
				29	BW Flash	P1-amount
				30	Black and white to black and white inverse Flash	P1-amount
				31	Gradient Wipe X	P1-amount
				32	Gradient Wipe Y	P1-amount
					Reserved	
				40	Gaussian filter	P1-amount
				41	Mean filter	P1-amount
				42	Laplacian filter	P1-amount
				43	Emboss filter	P1-amount
				44	Sharpness filter	P1-amount
				45-49	Reserved	
					RGB effects:	
					RGB subtract All Pixels	P1, P2, P3
				51	RGB add All Pixels	P1, P2, P3
				52	RGB add non-black Pixels	P1, P2, P3
					RGB substract/add All Pixels	P1, P2, P3
				54	Swap RGB to RBG	P1, P2, P3
					Swap RGB to GRB	P1, P2, P3
				56	Swap RGB to GBR	P1, P2, P3

Prote	Protocol ver./Channel		DMX			
3.8	4.6	5.4	6.2	Value	Function	Type of control
		0.1	0.1	57	Swap RGB to BRG	P1, P2, P3
				58	Swap RGB to BGR	P1, P2, P3
				59	RGB invert	P1, P2, P3
				60	Invert and swap RGB to BRG	P1, P2, P3
				61	Invert and swap RGB to GBR	P1, P2, P3
				62	Colour to Alpha	P1, P2, P3
				63	Colour to Alpha inverted	P1, P2, P3
				64-67	Reserved	P1, P2, P3
				68	RGB scale	P1, P2, P3
					P1-red, P2-green, P3-blue	, ,
				69	Brightness scale	P1, P2
					P1, P2 - inclination of conversion line	,
				70-149	Reserved	
				150	Layer keystoning	P1,P2,P3
					P1-squeezing/stretching in X, P2/P3-compressing & expanding in X/Y	
				151-199	Reserved	
				200	Picture merging - R/G/B gamma adjustment in blended edges	P1, P2,P3
					P 1- red, P 2 - green, P 3- blue	
				201-255	=	
36	36	37	64		Gobo effect 2 -Parameter 1	
				0-255	Effect control	depends on effect
37	37	38	65		Gobo effect 2 -Parameter 2	
				0-255	Effect control	depends on effect
38	38	39	66		Gobo effect 2 -Parameter 3	
				0-255	Effect control	depends on effect
39	39	40	67		Gobo Position X coarse	•
				0-127	Movement forward	proportional
				128	Centre (128-default)	step
				129-255	Movement backward	proportional
40	40	41	68		Gobo position X fine	
				0-255	Position X fine	proportional
41	41	42	69		Gobo position Y coarse	
				0-127	Movement down	proportional
				128	Centre (128-default)	step
				129-255	Movement up	proportional
42	42	43	70		Gobo position Y fine	
				0-255	Position Y fine	proportional
43	43	44	71		Gobo zoom X coarse	
				0-127	Narrowing	proportional
				128	Centre (128-default)	step
				129-255	Widening	proportional
44	44	45	72		Gobo zoom X fine	
				0-255	Zoom X fine	proportional
45	45	46	73		Gobo zoom Y coarse	
				0-127	Narrowing	proportional
				128	Centre (128-default)	step
				129-255	Widening	proportional
46	46	47	74		Gobo zoom Y fine	
				0-255	Zoom Y fine	proportional
_	_	48	75		Synchronization to ID	

Proto	Protocol ver./Channel		nnel	DMX			
3.8	4.6	5.4	6.2	Value	Function	Type of control	
				0	No function	step	
				1-255	Synchronization to fixture ID	proportional	
	Gobo Layer 2						
47	47	49	76		Dimmer		
				0-255	Dimmer intensity from 0% to 100% (255-default)	proportional	
48	48	50	77		Gobo Folder selection		
				0-20	Factory folders	step	
					User folders	step	
					Reserved	2001	
					Live input (grab. card)-see channel 49/51/78	step	
				252	Streaming from remote sources	step	
					Reserved		
49	49	51	78		Gobo selection		
				0	White	step	
					255 Gobos (one by one)	step	
					If Live input (251 DMX) is selected on channel 48/50/77:		
				0	White screen	step	
				1-20	Video composite input-PAL system	step	
49	49	51	78	21-40	SVIDEO input- PAL system	step	
					Video composite input-NTSC system	step	
					SVIDEO input- NTSC system	step	
					Video composite input-SECAM system	step	
					SVIDEO input- SECAM system	step	
				121-255	Reserved	·	
50	50	52	79		In Frame High		
				0-255	Defines the beginning of a media file segment as a	proportional	
					percentage of the movie length (0-default)		
51	51	53	80		In Frame Low		
				0-255	Defines the beginning of a media file segment as a	proportional	
					percentage of the movie length (0-default)		
52	52	54	81		Out Frame High		
				0-255	Defines the end of a media file segment as a percentage of	proportional	
					the movie length (255-default)		
53	53	55	82		Out Frame Low		
				0-255	Defines the beginning of a media file segment as a	proportional	
					percentage of the movie length (255-default)		
54	54	56	83		Gobo control		
					Copy mode_		
					Video stream 1:		
				0	Play forward if dimmer (on layer 1) > 0, looping continuously	step	
				1	Play forward if dimmer (on layer 1) > 0, hold on last frame	step	
				2	Pause	step	
				3	Play forward in continuous loop	step	
				4	Play forward once and hold on the last frame	step	
				5	No function		
				6	Scrub (Display) the selected In Frame	step	
				7	Scrub (Display) the selected Out Frame	step	
				8-9	Reserved		
					Video stream 2 (the same functionality as for Video stream 1):		
				10	Play forward if dimmer (on layer 1) > 0, looping continuously	step	

Proto	ocol ve	r./Cha	nnel	DMX	Appendix - DMX protocol	T
3.8	4.6	5.4	6.2	Value	Function	Type of control
			0.1	11	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				12	Pause	step
				13	Play forward in continuous loop	step
				14	Play forward once and hold on the last frame	step
				15	No function	
				16	Scrub (Display) the selected In Frame	step
				17	Scrub (Display) the selected Out Frame	step
				18-19	Reserved	
					Addition mode	
					Video stream 1:	
				20	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				21	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				22	Pause	step
				23	Play forward in continuous loop	step
				24	Play forward once and hold on the last frame	step
				25	No function	
				26	Scrub (Display) the selected In Frame	step
				27	Scrub (Display) the selected Out Frame	step
54	54	56	83	28-29	Reserved	
					Video stream 2:	
				30-37	The same functionality as for Video stream 1	step
				38-39	Reserved	
					Substraction mode	
					Video stream 1:	
				40	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				41	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				42	Pause	step
				43	Play forward in continuous loop	step
				44	Play forward once and hold on the last frame	step
				45	No function	
				46	Scrub (Display) the selected In Frame	step
				47	Scrub (Display) the selected Out Frame	step
				48-49	Reserved	
					Video stream 2:	
				50-57	The same functionality as for Video stream 1	step
				58-59	Reserved	
					Multiplication mode_	
					Video stream 1:	
				60	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				61	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				62	Pause	step
				63	Play forward in continuous loop	step
				64	Play forward once and hold on the last frame	step
				65	No function	
				66	Scrub (Display) the selected In Frame	step
				67	Scrub (Display) the selected Out Frame	step
				68-69	Reserved	
					Video stream 2:	
				70-77	The same functionality as for Video stream 1	step
				78-79	Reserved	
					Minimum mode	

Prot	Protocol ver./Channel		DMX			
3.8	4.6	5.4	6.2	Value	Function	Type of control
		0.1	0		Video stream 1:	
				80	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				81	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				82	Pause	step
				83	Play forward in continuous loop	step
				84	Play forward once and hold on the last frame	step
				85	No function	3334
				86	Scrub (Display) the selected In Frame	step
				87	Scrub (Display) the selected Out Frame	step
				88-89	Reserved	
					Video stream 2:	
				90-97	The same functionality as for Video stream 1	
				98-99	Reserved	
					Maximum mode	
					Video stream 1:	
				100	Play forward if dimmer (on layer 1) > 0, looping continuously	step
				101	Play forward if dimmer (on layer 1) > 0, hold on last frame	step
				102	Pause	step
				103	Play forward in continuous loop	step
				104	Play forward once and hold on the last frame	step
				105	No function	
				106	Scrub (Display) the selected In Frame	step
				107	Scrub (Display) the selected Out Frame	step
				108-109	Reserved	·
					Video stream 2:	
				110-117	The same functionality as for Video stream 1	step
				118-255	Reserved	
55	55	57	84		Playback Speed	
				0	Normal Speed	step
				1-127	Slow speeds from slowest> normal	proportional
				128	Normal Speed	step
				129-255	Faster than Normal> Fastest	proportional
56	56	58	85		Gobo rotation and indexing	
				0-63	Clockwise rotation from fast to slow	proportional
				64-127	Indexing	proportional
				128	No rotation-centre (default)	step
				129-192	Indexing	proportional
				193-255	Anticlockwise rotation from slow to fast	proportional
57	57	59	86		Gobo fine indexing (rotation)	
				0-255	Fine indexing (rotation)	proportional
58	58	60	87		Gobo effect 1 Selection	
				0	No effect	
				1	Zoom sinus	P1-speed
				2	Zoom bump in fade out	P1-speed
				3	Zoom fade in bump out	P1-speed
				4	Reserved	
				5	Zoom in fade	P1-speed
				6	Zoom out fade	P1-speed
				7	Scale xy sinus	P1-speed
				8	Reserved	

Prot	ocol ve	r./Cha	nnel	DMX	Аррепаіх - Біміх рготосоі	
3.8	4.6	5.4	6.2	Value	Function	Type of control
				9	Reserved	
				10	Reserved	
				11	XY pos. circle counter-clockwise	P1-speed
				12	XY pos. circle clockwise	P1-speed
				13	XY pos. scroll up	P1-speed
				14	XY pos. scroll down	P1-speed
				15	XY pos. scroll left	P1-speed
				16	XY pos.scroll right	P1-speed
				17	Right-left diag. down scroll	P1-speed
				18	Right-left diag. up scroll	P1-speed
				19	Left-right diag. down scroll	P1-speed
				20	Left-right diag. up scroll	P1-speed
				21	X rotate	P1-speed
				22	Y rotate	P1-speed
				23	XY rotate	P1-speed
				24	XY inv. rotate	P1-speed
				25	X inv. y rotate	P1-speed
				26	Tile xy	P1-amount
				27	Tile xy	P1-speed
				28	XYZ rot. cube	P1-speed
				29	XYZ rot. sphere	P1-speed
				30	X rot. cylinder	P1-speed
				31	Y rot. cylinder	P1-speed
				32	Reserved	
				33	Kaleidoscope	none
				34	Squeeze in	none
				35	Squeeze out	none
				36	Bend X	none
				37	Bend Y	none
				38	Tile frame	none
				39	Frame	none
				40	Plane Flip X	none
				41	Plane Flip Y	none
				42	Plane Flip XY	none
				43	Plane mirror X top	none
				44	Plane mirror X bottom	none
				45	Plane mirror Y left	none
				46	Plane mirror Y right	none
				47	Plane mirror XY segment 1	none
				48	Plane mirror XY segment 2 segment 1 segment 2	none
				49	Plane mirror XY segment 3	none
				50	Plane mirror XY segment 4 segment 3	none
				51	Plane tile 2x	none
				52	Plane tile 3x	none
				53	Plane tile 4x	none
				54	Plane tile 5x	none
				55	Plane cross tile 2x	none
				56	Plane cross tile 2x inverse	none
58	58	60	87	57	Plane cross tile 3x	none
				58	Plane cross tile 3x inverse	none
				59	Plane cross tile 4x	none

Protocol ver./Channel DMX						
3.8	4.6	5.4	6.2	Value	Function	Type of control
				60	Plane cross tile 4x inverse	none
				61	Plane cross tile 5x	none
				62	Plane cross tile 5x inverse	none
				63	Plane cross tiler 5x	none
				64	Plane cross tiler 5x inverse	none
				65	Plane bar	none
				66	Plane bar inverse	none
				67	Plane bar left-righ	none
				68	Plane bar top-bottom	none
				69	Reserved	
				70	Reserved	
				71	Gobo disc	none
				72	Gobo disc Flip X	none
				73	Gobo disc Flip Y	none
				74	Gobo disc Flip XY	none
				75	Gobo disc mirror X	none
				76	Gobo disc mirror Y	none
				77	Gobo disc mirror XY	none
				78-79	Reserved	
				80	Plane mirror X top inverse	none
				81	Plane mirror X bottom inverse	none
				82	Plane mirror Y left inverse	none
				83	Plane mirror Y right inverse	none
				84	Plane mirror XY inverse	none
				85	Plane mirror X-inverse,Y	none
				86	Plane mirror X,Y-inverse	none
				87-89	Reserved	
				90	Circular effect (Fish eye)	P1, P2, P3
					P1-character, P2-X ratio, P3-Y ratio	, ,
				91	Iris on layer	P1, P2, P3
					P1-size, P2-iris type, P3-texture mode	,,
				92-99	Reserved	
					kaleidoscope - mode and mosaic segment selection:	
				100	Square -static mode	P1, P2, P3
				101	Square -dynamic mode	P1, P2, P3
				102	Right triangular - static mode	P1, P2, P3
				103	Right triangular - dynamic mode	P1, P2, P3
				104	Isosceles triangular - static mode	P1, P2, P3
				105	Isosceles triangular - dynamic mode	P1, P2, P3
				106	Triangular 1 - static mode	P1, P2, P3
				107	Triangular 1 -dynamic mode	P1, P2, P3
				108	Triangular 2 -static mode	P1, P2, P3
				109	Triangular 2 - dynamic mode	P1, P2, P3
				110	Centered kaleidoscope (rough)-static mode	P1, P2, P3
				111	Centered kaleidoscope (rough)-dynamic mode	P1, P2, P3
				112	Centered kaleidoscope (fine)-static mode	P1, P2, P3
				113	Centered kaleidoscope (fine)-dynamic mode	P1, P2, P3
				*	Stat. mode:P1-density, P2-content (coarse), P3-content (fine)	_,,
					Dyn. mode:P1-density, P2-size and pulsation, P3-movement	
				114-149	Reserved	
				150	Layer keystoning	P1,P2,P3

Protocol ver./Channel				DMX		
3.8	4.6	5.4	6.2	Value	Function	Type of control
3.0	7.0	J. 7	0.2		P1-skewing in X, P2-skewing in Y, P3-squeezing/stretching in Y	
					Reserved	
59	59	61	88	131 233	Gobo effect 1- Parameter 1	
39	39	01	00	0-255	Control of amount/speed	proportional
			89	0-233	Gobo effect 1- Parameter 2	ргорогиона
_	_	_	69	0-255	Control of amount/speed	proportional
			90	0-233	Gobo effect 1- Parameter 3	ргорогиона
_	_	_	90	0-255	Control of amount/speed	proportional
	60	62	91	0-233	Gobo effect 2 Selection	proportional
60	60	62	91	0	No effect	
				1	Colour to black and white	P1-amount
				2	Colour to black and white Colour to black and white inverse	P1-amount
				3	Black and white to black and white inverse	P1-amount
				4		P1-amount
				5	Inversion Black Mask	P1-amount
				6		P1-amount
				7	Black Mask inverse Contrast	P1-amount
				8		
				9	Brightness RGB to GBR	P1-amount P1-amount
					RGB to BRG	P1-amount
				11	RGB to RBG	P1-amount
				12	Black and white to black and white inverse timed	
60	60	62	91	13	Colour to black and white timed	P1-speed
60	60	02	91	14	Colour to black and white timed Colour to inverse timed	P1-speed
				15	Cycle	P1-speed P1-speed
				16	Cycle inverse	P1-speed P1-speed
				17	Reserved	P1-speed
				18	Reserved	
					Colour Key	P1-amount
				20	Colour Key inverse	P1-amount
				21	Key Black	P1-amount
					Key Black inverse	P1-amount
				23	Key White	P1-amount
				24	Key White inverse	P1-amount
				25	White flash	P1-amount
				26	Black flash	P1-amount
					Alpha flash	P1-amount
				28	Invert flash	P1-amount
				29	BW Flash	P1-amount
					Black and white to black and white inverse Flash	P1-amount
				31	Gradient Wipe X	P1-amount
				32	Gradient Wipe Y	P1-amount
					Reserved	. I amount
				40	Gaussian filter	P1-amount
					Mean filter	P1-amount
				42	Laplacian filter	P1-amount
				43	Emboss filter	P1-amount
				44	Sharpness filter	P1-amount
					Reserved	i i dinodit
				7J 7 J	RGB effects:	
					nob ejjecus.	1

Prot	Protocol ver./Channel		DMX			
3.8	4.6	5.4	6.2	Value	Function	Type of control
				50	RGB subtract All Pixels	P1, P2, P3
				51	RGB add All Pixels	P1, P2, P3
				52	RGB add non-black Pixels	P1, P2, P3
				53	RGB substract/add All Pixels	P1, P2, P3
				54	Swap RGB to RBG	P1, P2, P3
				55	Swap RGB to GRB	P1, P2, P3
				56	Swap RGB to GBR	P1, P2, P3
				57	Swap RGB to BRG	P1, P2, P3
				58	Swap RGB to BGR	P1, P2, P3
				59	RGB invert	P1, P2, P3
				60	Invert and swap RGB to BRG	P1, P2, P3
				61	Invert and swap RGB to GBR	P1, P2, P3
				62	Colour to Alpha	P1, P2, P3
				63	Colour to Alpha inverted	P1, P2, P3
				64-67	Reserved	P1, P2, P3
				68	RGB scale	P1, P2, P3
					P1-red, P2-green, P3-blue	
				69	Brightness scale	P1, P2
					P1, P2 - inclination of conversion line	
				70-149	Reserved	
				150	Layer keystoning	P1,P2,P3
					P1-squeezing/stretching in X, P2/P3-compressing & expanding in X/Y	
					Reserved	
				200	Picture merging - R/G/B gamma adjustment in blended edges	P1, P2,P3
					P 1- red, P 2 - green, P 3- blue	
				201-255	Reserved	
61	61	63	92		Gobo effect 2 -Parameter 1	
				0-255	Effect control	depends on effect
62	62	64	93		Gobo effect 2 -Parameter 2	
				0-255	Effect control	depends on effect
63	63	65	94		Gobo effect 2 -Parameter 3	
				0-255	Effect control	depends on effect
64	64	66	95		Gobo Position X coarse	
				0-127	Movement forward	proportional
				128	Centre (128-default)	step
	65	67	0.6	129-255		proportional
65	65	67	96	0-255	Gobo position X fine Position X fine	proportional
66	e c	60	07	0-255		proportional
66	66	68	97	0-127	Gobo position Y coarse Movement down	proportional
				128	Centre (128-default)	
				129-255	·	step proportional
67	67	69	98	143-433	Gobo position Y fine	proportional
0/	07	09	30	0-255	Position Y fine	proportional
68	68	70	99	0 233	Gobo zoom X coarse	proportional
08	00	70	99	0-127	Narrowing	proportional
68	68	70	99	128	Centre (128-default)	· ·
08	00	70	23	129-255		step proportional
69	69	71	100	129-233	Gobo zoom X fine	proportional
03	09	/1	100	0-255	Zoom X fine	proportional
				0-233	200H A HIIC	proportional

Appendix - DMX protocol

Prote	ocol ve	r./Cha	nnel	DMX	Function	Type of control	
3.8	4.6	5.4	6.2	Value	FullCtion	Type of control	
70	70	72	101		Gobo zoom Y coarse		
				0-127	Narrowing	proportional	
				128	Centre (128-default)	step	
				129-255	Widening	proportional	
71	71	73	102		Gobo zoom Y fine		
				0-255	Zoom Y fine	proportional	
_	-	74	103		Synchronization to ID		
				0	No function	step	
				1-255	Synchronization to fixture ID	proportional	
* DM	* DMX values 10 and 11 changing meaning of channels 13-20						
See c	See chapter " Projection onto angular, cylindric or spheric surfaces" in User manual						