

FUNZIONE CANALI ED OPZIONI
CHANNEL FUNCTION AND OPTIONS
FONCTION ET OPTIONS DES CANAUX
KANALFUNKTIONEN UND-OPTIONEN
FUNCION Y OPCION DE LOS CANALES

CHANNEL	FUNCTION
1	COLOUR CHANGE
2	GOBO ROTATION
3	GOBO CHANGE
4	DIMMER / STOPPER / STROBE
5	PAN
6	TILT
7	EFFECTS

La scelta delle opzioni si effettua commutando i microswitch secondo le indicazioni sotto riportate.


Select the options by setting the microswitches as indicated.

Pour choisir les options, commutez les microswitch en fonction des indications ci-dessous.

Die Wahl der Optionen erfolgt durch Umschaltung der Mikroschalter gemäß den unten gelieferten Angaben.


Para definir las opciones, disponer los microcommutadores como se indica a continuación.

OPTIONS

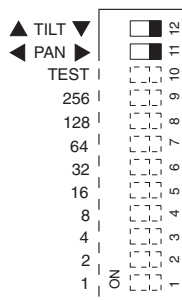


OPTION	FUNCTION
11	ON Inversione movimento orizzontale (PAN) <i>PAN direction change</i>
	OFF Inversion mouvement horizontal (PAN) <i>Umkehr Horizontalbewegung (PAN)</i> Invertir movimiento horizontal (PAN)
12	ON Inversione movimento verticale (TILT) <i>TILT direction change</i>
	OFF Inversion mouvement vertical (TILT) <i>Umkehr Vertikalbewegung (TILT)</i> Invertir movimiento vertical (TILT)

• COLOUR CHANGE - channel 1

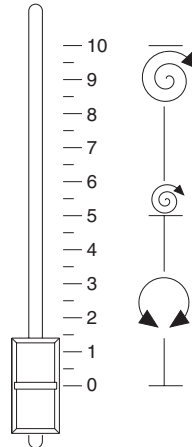


BIT	%	EFFECT
255	100	FAST ROTATION (300 rpm)
128	50.0	SLOW ROTATION (10 rph)
115	45.0	PINK 080303/106
98	38.2	BLUE 080303/101
82	32.0	ORANGE 080303/107
66	26.0	GREEN 080303/103
49	19.0	VIOLET 080303/104
33	13.0	YELLOW 080303/102
16	6.2	RED 080303/105
0	0.0	WHITE

• GOBO ROTATION - channel 2

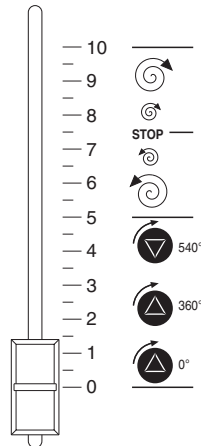

BIT	%	EFFECT
255	100	FAST ROTATION (120 rpm)
193	75.5	SLOW ROTATION (2 rph)
191 - 192	74.7 - 75.0	STOP
190	74.2	SLOW ROTATION (2 rph)
128	50.0	FAST ROTATION (120 rpm)
127	49.7	540° POSITION
105	41.7	450° POSITION
84	33.0	360° POSITION
63	24.7	270° POSITION
42	16.2	180° POSITION
21	8.2	90° POSITION
0	0.0	0° POSITION


• GOBO CHANGE - channel 3

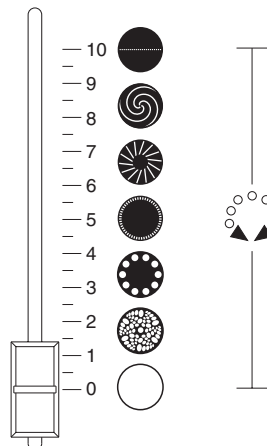

BIT	%	EFFECT
222 - 255	87.0 - 100	GOBO 6 083218/001
185 - 221	72.5 - 86.7	GOBO 5 083219/001
148 - 184	58.0 - 72.0	GOBO 4 083225/001
111 - 147	43.7 - 57.5	GOBO 3 083213/001
74 - 110	29.0 - 43.2	GOBO 2* 083105/101
37 - 73	14.2 - 28.7	GOBO 1* 083102/101
0 - 36	0.0 - 14.0	WHITE

* DICHROIC GLASS GOBOS


• DIMMER / STOPPER / STROBE - channel 4

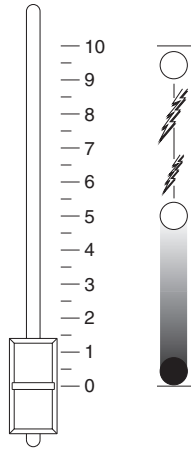


BIT	%	EFFECT
244 - 255	95.5 - 100	OPEN
243	95.0	FAST STROBE (11 flash/sec.)
140	54.7	SLOW STROBE (1 flash/sec.)
128 - 139	50.0 - 54.2	OPEN
0	0.0	CLOSE

• TILT - channel 6

Operation with option 12 OFF

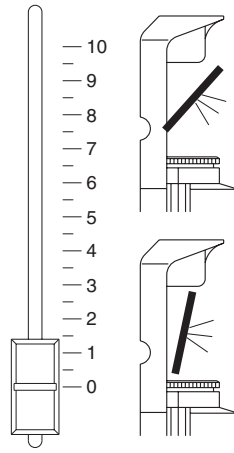


BIT	%
255	100
0	0.0

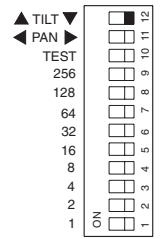


• PAN - channel 5


Operation with option 11 OFF

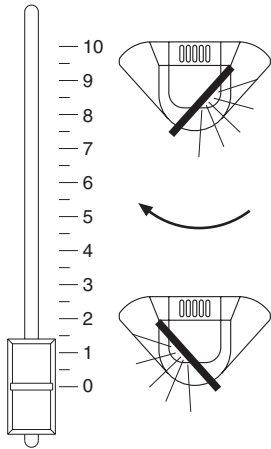


BIT	%
255	100
0	0.0

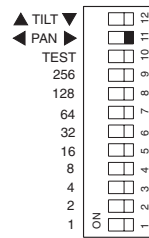


Operation with option 12 ON

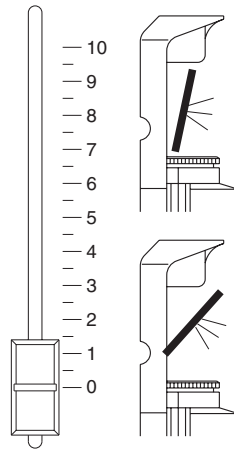


BIT	%
255	100
0	0.0

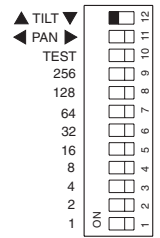


Operation with option 11 ON

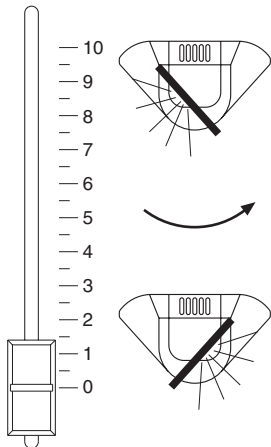

BIT	%
255	100
0	0.0

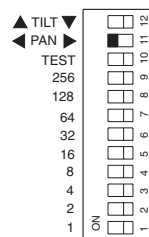

• EFFECTS - channel 7

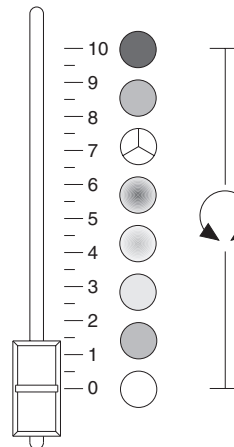

BIT	%	EFFECT
255	100	LIGHT BLUE 080303/108
218	85.5	U.V. FILTER 080303/112
182	71.2	3 FACE PRISM 081817/001
146	57.0	HEAVY FROST 080328/001
109	43.0	LIGHT FROST 080327/001
72	28.2	COLD FILTER 080303/113
36	14.0	WARM FILTER 080303/114
0	0.0	WHITE