

ROBOSCAN 1020

DMX channels, reduced mode	DMX channels, full mode	Martin channels	Product select
12	N/A	2	10

Channel	Values	Effect
1	0 - 5 6 - 120 121 - 252 253 - 255	Shutter / Reset Unit Shutter closed (Light off) Shutter open (Light on) Strobe on (Fast -> Slow) Reset unit
2	0 - 10 11 - 220 221 - 255	Dimmer Dimmer full on (No Light) Dimmer (On -> Off) Dimmer full off (Light)
3	0 - 37 57 77 97 117 137 157 177 197 217 - 255	Color 1 White R61 B51 G51/56 Y52 G50/55 M47/63 B42 C54 R65
4	0 - 37 57 77 97 117 137 157 177 197 217 - 255	Color 2 White O56 G49/59 Y54 Y52 P47/58 M47/63 M49/65 C54 T48/53
5	0 - 37 57 77 97 117 137 157 177 197 217 - 255	Gobo 1 Open Stars Star Dots Cone Pling Dot-Circle Bells Flower Turbine

6	0 - 37 57 77 97 117 137 157 177 197 217 - 255	Gobo 2 Open Logo Triangle Sun Holes Raster Bars Turbine Flash Star
7	0 - 10 11 - 239 240 - 255	Focus Default Min. --> Max (140 = Default) Default
8	0 - 48 49 - 205 206 - 255	Iris Default Full open -> Full Close Full Close
9	0 - 10 43 76 109 142 175 - 255	Prism Open 3 Facet Open 5 Facet Open 9 Facet
10	0 - 255	Pan Left --> Right (127 = Neutral)
11	0 - 255	Tilt Up --> Down (127 = Neutral)
12	0 - 255	Movement Speed (Speed fast -> slow)