

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Complete Spare Parts List of Martin M6

04222002	10K Ohm Lin Fader 45mm
04222003	10K Ohm Lin Fader 60mm
08220103	3.2x8 Pop Rivet Black
08190404	4.2x13 Torx20 FH Selftap black
05550021	Button for digiswitch , 1 hole
11860279	Cable ButtonUBut Prog MaxxyzC
11860278	Cable TBallCtrl Prog MaxxyzC
05324102	Crimp Terminal small , 2.54m
05501001	Digiswitch
02205502	Digital encoder belt Blue LED
05551058	Encoder knob black D=45 H=6 Axis=6 w. fingerhole
05552009	Faderknob ALPS-RS4511119 Maxxy
05552010	Faderknob ALPS-RS6011Y19004 Large
05741613	Fan 12VDC 60x60x15 Low Noice
05020014	Fuse 4 AT, high I*I*t
05031004	Fuseholder chas.4.8mm angle pl
05120701	Jumper 2 Pole 2,54mm Spacing
05555217	Keycap Cherry -
05555210	Keycap Cherry .
05555218	Keycap Cherry /
05555212	Keycap Cherry @
05555216	Keycap Cherry +
05555028	Keycap Cherry <
05555027	Keycap Cherry >
05555200	Keycap Cherry 0
05555201	Keycap Cherry 1
05555301	Keycap Cherry 1 for LED
05555310	Keycap Cherry 10 for LED
05555202	Keycap Cherry 2
05555302	Keycap Cherry 2 for LED
05555303	Keycap Cherry 3 for LED
05555304	Keycap Cherry 4 for LED
05555305	Keycap Cherry 5 for LED
05555306	Keycap Cherry 6 for LED
05555207	Keycap Cherry 7
05555208	Keycap Cherry 8
05555308	Keycap Cherry 8 for LED
05555209	Keycap Cherry 9
05555309	Keycap Cherry 9 for LED
05555221	Keycap Cherry Clear (Large)

05555222 Keycap Cherry Copy (Large)
05555229 Keycap Cherry Cue (Large)
05555224 Keycap Cherry Delete (Large)
05555219 Keycap Cherry Edit (Large)
05555211 Keycap Cherry Enter (Large)
05555213 Keycap Cherry Full
05555228 Keycap Cherry Group (Large)
05555227 Keycap Cherry Load (Large)
05555223 Keycap Cherry Move (Large)
05555000 Keycap Cherry No text
05555225 Keycap Cherry Record (Large)
05555214 Keycap Cherry Thru
05555220 Keycap Cherry Undo (Large)
05555226 Keycap Cherry Update (Large)
05555026 Keycap Cherry v
05555025 Keycap Cherry ^
05555203 Keycap Cherry 3
05555204 Keycap Cherry 4
05555205 Keycap Cherry 5
05555206 Keycap Cherry 6
05555307 Keycap Cherry 7 for LED
05555215 Keycap Cherry Arrow
05555018 Keycap Cherry Bank
05555016 Keycap Cherry Delay
05555001 Keycap Cherry F1
05555010 Keycap Cherry F10
05555011 Keycap Cherry F11
05555012 Keycap Cherry F12
05555002 Keycap Cherry F2
05555003 Keycap Cherry F3
05555004 Keycap Cherry F4
05555005 Keycap Cherry F5
05555006 Keycap Cherry F6
05555007 Keycap Cherry F7
05555008 Keycap Cherry F8
05555009 Keycap Cherry F9
05555013 Keycap Cherry Fade
05555035 Keycap Cherry Go (Large)
05555023 Keycap Cherry High Light
05555019 Keycap Cherry Last
05555037 Keycap Cherry Link
05555034 Keycap Cherry ll/Back (Large)
05555017 Keycap Cherry Macro
05555014 Keycap Cherry Menu
05555029 Keycap Cherry Mode
05555020 Keycap Cherry Next
05555024 Keycap Cherry P/T

05555021 Keycap Cherry Preview
05555033 Keycap Cherry Rel
05555031 Keycap Cherry Select
05555032 Keycap Cherry Snap
05555015 Keycap Cherry Snap Shot
05555022 Keycap Cherry Swap Prog
05552008 Knop fader f. MAXxyz
11860368 LED Backlight cable f. TFT screen
26621080 M. TballBut Left MaxxC
26621090 M. TballBut Right MaxxC
08052701 M3 nut lock PA shiny
08054401 M3 washer lock 3,2/6 black
08050810 M3x10 cs torx black
08050709 M3x10 ph torx black
08053807 M3x10 stand off m6/f7 black
08050714 M3x16 ph torx black
08053826 M3x30 stand off m6/f7 shiny
08050802 M3x6 cs torx black
08050808 M3x6 cs torx tapt black
08050702 M3x6 ph torx black
08050700 M3x6 ph torx tapt spike black
08053803 M3x6 stand off m6/f3 shiny
08050703 M3x8 ph torx black
08072701 M4 nut lock PA shiny
08074303 M4 washer 4,1/10x1,25 shiny 08074401 M4 washer lock 4,3/8 black
08071223 M4x12 ch low allen A2 DIN7964 08070808 M4x12 cs torx black
08070415 M4x60 ph pz black
08070708 M4x8 bh torx black
08070805 M4x8 cs torx tapt spike black
08112701 M6 nut lock PA shiny
08110703 M6x12 bh torx black
08111303 M6x16 cs allen A2 ds silver
08111205 M6x22 ch allen black
08111211 M6x30 ch low allen black
62010538 PCBA ChannelSelect TEST
62004547 PCBA Connector 3x(1x3pol)
62013002 PCBA dc filter (Case lamp)
62011024 PCBA Digital FaderDriv. TEST
62010546 PCBA Tball Controller TEST
62010542 PCBA Tball UpperButt. TEST
62011035 PCBA USB/DMX 2048 MM TEST
34240018 Plasticbag 250x360x40x0,04mm
05342804 PowerCon NAC3FCA power input connector
06150016 PSU MW USP-350-12
08200102 PT 2,9x6,5 ph torx black
08240118 Push/pull Latch, female, plast
08240117 Push/pull Latch, male, plastic

32020504 Rubber foot
32020501 Rubber foot 38x10mm, Black
13200012 Rubber grommet DA 80/110/20
23401335 Rubseal base handle MAC550 DK
05222804 Speakon Mains NAC3MPA chas.
39041507 SSD Drive 2.5 SATA
13104000 Strap,black,high temp,2.5x98
02204506 TFT 3.5 320x240 8-16 bit parallel with Touch
39100509 TrackBal 38mm blue
14026004 Tube rubber d=4,0 D=9 (for m
13101008 Wire Retainer Flexible

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**