

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Complete Spare Parts List of ARRI EB 4000

L4.82533.E	Diode module byt 261 PIV 800	Diodenmodul Byt 261 PIV 800
L4.82515.E	Low noise switch with knob	Noise-Schalter mit Drehknopf
L4.82513.E	Mains switch	Netzschalter
L4.82530.E	HF-converter board	HF-Wandlerkarte
L4.82531.E	LF-converter board	NF-Wandlerkarte
L4.82534.E	HF-choke (2 terminals)	HF-Drossel (2 Klemmen)
L4.82529.E	Electr. voltage supply board	Elektr. Spannungsversorgung
L4.82502.E	Rubber foot-set cpl. (4 pieces)	Gummifuß-Set kompl. (4 St ?ck)
L4.82532.E	Power FET module	Power FET Modul TSD 4 M 450 V
L4.82528.E	RF-line filtering board	RF-Netzfilter
L4.82526.E	Front handle-set cpl.	Frontgriff-Set kpl.
L4.82510.E	Input rectifier	Netzgleichrichter
L4.82516.E	Dimm pot with knob	Dimmpotentiometer mit Drehknopf
L4.82517.E	Start resistor-set (5 pieces)	Startwiderstand-Set (5 St ?ck)
L4.82514.E	Earth test switch	Erdtaster
L4.82537.E	Input capacitor 1800 MF/400 V	Ladeelko 1800 MF/400 V
L4.82538.E	Ignition resistor-set (10 pieces)	Zuendwiderstand-Set (10 St ?ck)
L4.82540.E	Control board (for EB 4000)	Regelkarte (f ?r EB 4000)
L4.82542.E	Control board act. line filter	Regelkarte akt Netzfilter
L4.82539.E	Control board (for EB 4000 U)	Regelkarte (f ?r EB 4000 U)
L4.82541.E	Mother board act. line filter	Basisplatine akt Netzfilter
L4.82543.E	Overload protect board	Ueberspannungsschutz-Schaltung
L4.82544.E	Control board (for EB 2,5/4 U)	Regelkarte (f ?r EB 2,5/4 U)

L4.83858.E

Veam output connector (female)

Veam Output Stecker(Buchsenkontakt)

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**