























- J1 PIN1: RAMP RESET
- J1 PIN2: +12V
- J1 PIN3: GND
- J1 PIN4: HF CONTACTOR
- J1 PIN5: PUMP
- J1 PIN6: PUMP CHANGEOVER
- J1 PIN7: HEATER CONTACTOR
- J1 PIN8: DEFROST VALVE
- J1 PIN9: HEATERS 3&4
- J1 PIN10: HEATERS 1&2
- J1 PIN11: HEAT FAN
- J1 PIN12: FREEZE FAN